

User's manual	Manual del usuario	Manuel de l'utilisateur
Customer Service US: 1-800-645-2986	Servicio de atención al Cliente US: 1-800-645-2986	Service à la clientèle Canada: 888-645-2986

## Confined Space Vent Fan



293034  
8" Confined Space Vent Fan  
Rotomold Plastic,  
1000 CFM, 1/3 HP



293035  
8" Confined Space Vent Fan  
w/ Rotomold Plastic Canister  
& 25' Duct, 1000 CFM



293036  
12" Confined Space Vent Fan  
Rotomold Plastic,  
2700 CFM, 1 HP



293037  
16" Confined Space Vent Fan  
Rotomold Plastic  
4000 CFM, 1 HP



**WARNING:** Read entire manual before installation, operation or maintenance.

## Safety Instructions

Please observe the following safety instructions to avoid personal injury and property loss.

- 1) Not operate any fan with a damaged cord or Plug.
- 2) Do not move or adjust blower while in operation
- 3) Keep this unit out of the reach of children
- 4) Do not alter or modify your blower in any way. Only authorized Global Industrial replacement parts can be used. Use of any unauthorized parts could cause hazards and void the unit's warranty
- 5) Always store unit in a clean, dry environment when not in use. Care should be taken to prevent water from entering the unit's motor. In the case that the unit's motor does become wet, ensure that the motor is dried thoroughly before use.
- 6) Do not allow water near or inside the unit while in use to avoid risk of electric shock. Handle unit with care to avoid causing damage or personal injury.
- 7) Always operate the blower on a flat, level surface. Operating the unit where it could slip or fall increases the risk of injury, fire, or electrical shock.
- 8) Never operate the blower without the factory-installed safety screens in place. This will prevent liquids, gases, and other materials from entering the blower.
- 9) Do not use blower near combustible gas or flammable materials in order to avoid fire or electrical hazards.
- 10) Do not attempt to disassemble or repair unit on your own. Instead, bring to the attention of your distributor or a certified repair center. Never attempt to disassemble or repair unit while blower is plugged in.
- 11) Prior to use, ensure the air intake and outlet are free of obstructions to prevent the blower from overheating and causing a shock or fire hazard.

# Confined Space Vent Fan

## Operating Procedures

The Global Industrial line of commercial ventilator is designed to efficiently and effectively ventilate, extract and circulate air. Be sure to follow all instructions below to ensure safe and effective use.


- 1) Ensure that the unit is on a stable, level surface, and remains stationary while in use.
- 2) Plug the blower into a grounded outlet with the correct voltage and amperage. Ensure that the unit is plugged into a grounded outlet with voltage and wattage outputs that correspond with the unit's specifications. For maximum protection against electrical shock, ALWAYS use a circuit that is protected by a ground fault circuit interrupter. If you are unsure about the outlet, check with a qualified electrician.
- 3) Ensure that the dial is turned to your desired speed setting before turning the unit on.

## CONTROLS

The ventilate Fan series equip the Water proof 1 speed switch.

Control Fan Speed with the Switch

- 1- Turn the fan on
- 0- Turn the fan off

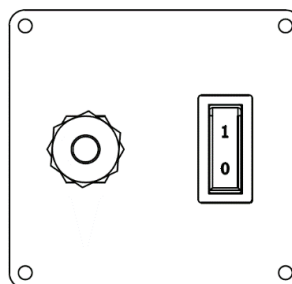

## Maintenance

- 1) Inspect the electrical cord and wiring for damage or discoloration before use. NEVER use a blower that has a damaged cord to avoid risk of electrical shock or fire.
- 2) Inspect for loose fasteners before each use.
- 3) Clean safety screens of the unit before each use.
- 4) Listen for abnormal sounds and shut unit off immediately upon hearing unusual noises.
- 5) Keep unit clean and free of blockages or obstructions.
- 6) Use compressed air or a vacuum to remove lint and other debris from the motor, inlet, or fan blade.
- 7) Do not use a pressure washer, water hose, or other water source to clean the unit. Ensure that the unit is completely dry before each use.
- 8) The blower has sealed bearings and cannot be lubricated. No oiling is necessary.

For information about authorized repair and maintenance contact Global Industrial.

## Specifications

Model	293034	293035	293036	293037
Power Input	115Volt/60hz	115Volt/60hz	115Volt/60hz	115Volt/60hz
Power	1/3hp	1/3hp	1hp	1hp
Current	2.6amps	2.6amps	11amps	11amps
Motor Speed	3450rpm	3450rpm	3450rpm	3400rpm
Air Volume	1000cfm	1000cfm	3000CFM	4000cfm
Outlet Size	8inch	8inch	12inch	16inch
Size	14x10x15inch	33x14x14inch	19.7x15.4x21.5inch	20x21x23inch
Weight	16lbs	37lbs	31lbs	39lbs

Specifications may change without notice.

# Confined Space Vent Fan

## Trouble Shooting

BLOWER DOES NOT TURN ON	<ol style="list-style-type: none"><li>1) Switch not turned on - in this case, ensure that the knob is in the correct position to turn the unit on</li><li>2) Circuit breaker or GFCI has tripped - press 'reset button before attempting to turn the unit on</li><li>3) Cord or wires are loose or damaged - Inspect to ensure that cords and wires are tight and free of damage</li><li>4) Faulty switch - Contact your distributor if inside warranty period</li></ol>
BLOWER STARTS AND THEN TURNS OFF	<ol style="list-style-type: none"><li>1) Obstructed inlet/outlet - remove obstructions and ensure that both inlet and outlets are clear before use.</li><li>2) Faulty motor - Contact your distributor if inside warranty period</li></ol>
BLOWER VIBRATES	<ol style="list-style-type: none"><li>1) Motor shaft is bent - Contact your distributor if inside warranty period</li><li>2) Fan blade is bent - Contact your distributor if inside warranty period</li><li>3) Excessive dirt built up on fan blade - Clean blade and ensure blade housing is free of dust and dirt before use</li></ol>
BLOWER MAKES SCRAPING NOISES	<ol style="list-style-type: none"><li>1) Damaged housing - Inspect housing for warps or dents. If housing is rubbing against blade, contact your distributor.</li></ol>
MOTOR MAKES NOISE, BUT BLOWER WON'T TURN ON	<ol style="list-style-type: none"><li>1) Damaged/faulty motor or motor shaft - Contact your distributor if inside warranty period</li><li>2) Motor shaft screw holding fan blade is loose - tighten</li></ol>