






Instruction Manual	Manual de Instrucciones	Manuel d'instruction		
Customer Service	Servicio de atención al Cliente	Service à la clientèle		
US: 1-800-645-2986	México: 01.800.681.6940	Canada: 888-645-2986		

Outdoor Bi-Level Drinking Fountain w/ Bottle Filling Station

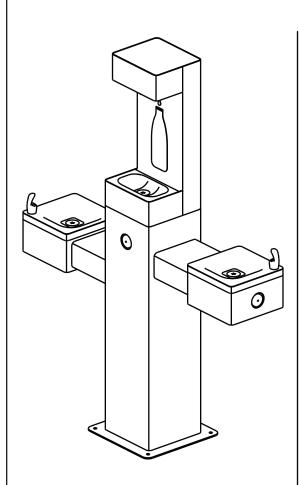



Models 761220, 761220BK, 761220BL & 761220GN


WARNING

- All installation work must be performed by authorized service personnel.
- Two or more people are recommended to lift and install the unit.
- To avoid the risk of property damage and/or personal injury, ensure the mounting surface is adequate to support 400 lbs.
- Check local codes for plumbing requirements prior to installation.
- Refer to Rough-In Guide (page 4) prior to installation.
- Thoroughly flush all water supply lines of all foreign matter before connecting to the fixture.
- · Check for any leaks before use.
- DO NOT attempt to repair or replace any part of this fountain unless it is specifically recommended in this manual. All other services should be referred to a qualified technician.
- For use with clean, clear potable drinking water only.
- Shut-off water supply during installation to reduce the risk of water damage.
- Freezing Caution: Before freezing temperatures occur, refer to the Draining and Winterization section of this manual (page 12) for proper preparation.
- Installation of a trap on the water drain line may be necessary; remove trap before winterization draining.
- Failure to follow safety warnings and/or installation instructions will void warranty.

Note: This unit is designed to be installed on the surface of an existing or new concrete slab. Included are the necessary vandal-resistant stainless steel bolts and washers needed to anchor this unit. Installer must provide a 1-1/2" PVC drain line (if applicable) and water supply line. All connections are made inside the item through the access doors, as shown in the drawings. It is recommended to install a shut-off valve (not included) on the water supply.

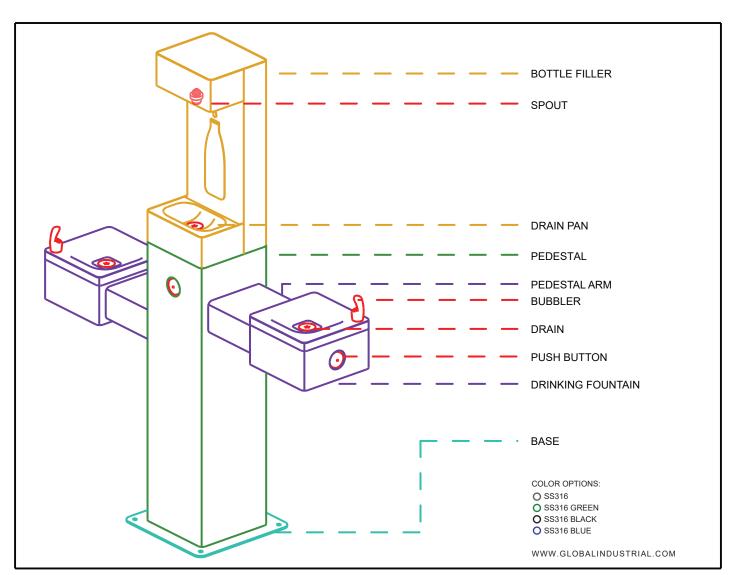

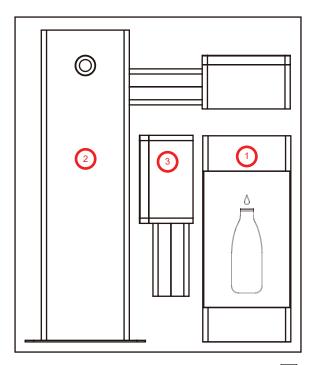

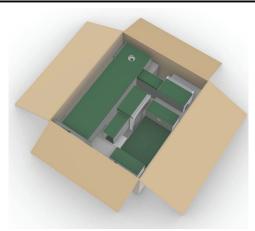


1	BOTTLE FILLER
2	PEDESTAL
3	DRINKING FOUNTAIN
4	HARDWARE BAG

SPECIFICATIONS

Features:	316 Stainless, Laminar Flow, Heavy Duty, Vandal Resistant			
Finish:	SS Finish, Black(BK), Blue(BL), Green(GN)			
Power:	No Electrical Required			
Bubbler	Vandal Resistant			
Activation Type:	Push Button			
Mounting Type:	Floor Mount/Free Standing			
Product Dimensions:	47-3/4"L x 14"W x 60-1/4"H			
Weight:	112 lbs.			
Installation Location:	Outdoor			
No. of Stations:	3			

PART BREAKDOWN

Ref.	Qty.	Description		Ref.	Qty.	Description	
P1	2	Bubbler		P11	4	Drain Tubing (2) 16-3/4", (1) 23", (1) 3-3/4"	
P2	3	Inlet Adapter		P12	1	Offset Drain Tubing	
P3	2	Union T-Connector		H1	1	Torx Key Wrench	
P4	1	Straight Flow Check Valve		H2	1	Torx Drill Bit	
P5	6	1/4" O.D. Water Inlet (1) 39-1/4", (2) 25-1/2", (3) 6-1/4"		Н3	4	Anchor Kit	
P6	3	3/8" O.D. Water Inlet (1) 21-3/4", (1) 4", (1) 2"		H4	8	M6 x 10 Pan Head Screw	9
P7	9	Pipe Insulation		Н5	4	M10 Washer	0
P8	1	Straight Drain Connector	1	Н6	4	M10 Lock Washer	0
P9	2	Elbow Drain Connector	5	H7	4	M10 Nut	
P10	2	T-Shape Drain Connector	ka				

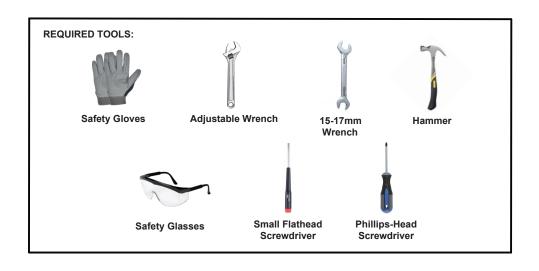

Actual product configuration may vary based on model ordered.

See Page 12 for Draining and Winterization

B = ACESS PANEL (7" X 20") B-2 = ACCESS PANEL (7" X 7") C = REMOVABLE BOTTOM COVER

4

16" 376mm

40" 1023mm


INSTALLATION

- It is recommended that 2 or more people install this unit.
- This fountain must be mounted on a solid, flat surface with adequate strength (concrete pad recommended) capable of supporting 400 lbs.
- Locate and install plumbing through ground as required. Refer to Rough-In Guide (page 4) for proper location and correct plumbing.
- Install a drainable shut-off valve (not included) if in a freezable environment.
- Installation of a trap on the water drain line may be necessary; check local plumbing codes.


WARNING: The fountain is rated for inlet water pressure of 20-105 PSI. A pressure reducing regulator should be used if the inlet water supply exceeds 105 PSI. Any damage caused by reason of connecting this product to supply line pressure higher than 105 PSI will void warranty.


1. REMOVE ACCESS PANELS


To gain access to the drain and water line connections, remove all access panels detailed below using the provided torx key wrench (H1) or torx drill bit (H2) to remove all (32) M6 x 10 flat-head anti-theft screws on back side of the bottle filler and pedestal, as well as the underside of the drinking fountain pans:

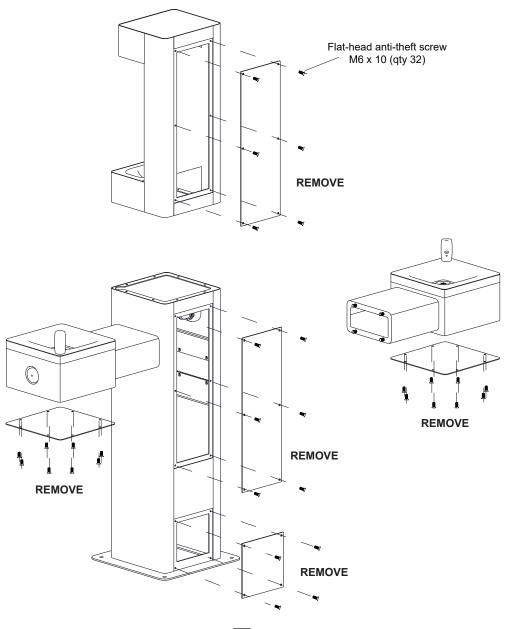


2. INSTALL BUBBLERS

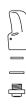

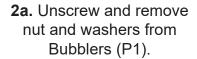

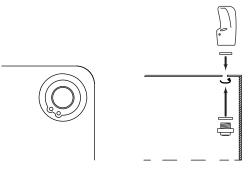

2b. Locate the hole on the drinking fountain pan surfaces. Align and sanwich with the two washers and tighten the nut to secure the bubbler.

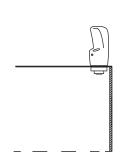

2c. Bubblers are now properly installed.

3. MOUNT PEDESTAL TO GROUND


- Locate and install plumbing through ground as required. Refer to Rough-In Guide (page 4) for proper location and correct plumbing.
- This unit is designed to be installed on the surface of an existing or new concrete slab, capable of supporting 400 lbs.

Position fountain base over plumbing and secure to ground using provided anchor kit (H3) mounting hardware (x4).



(H3) Anchor kit consists of:

- (4) M10 Nuts
- (4) M10 Lock Washers
- (4) M10 Standard Washers
- (4) M10 Anchors

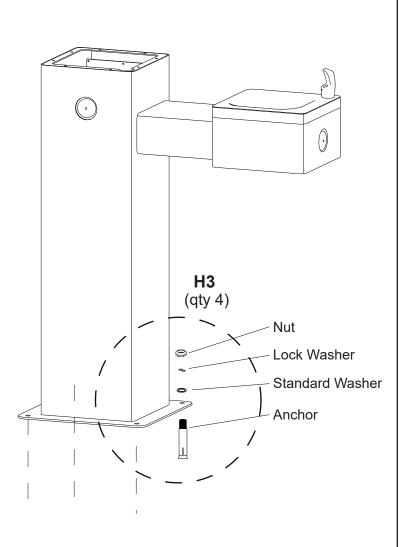

4. ATTACH BOTTLE FILLER TO PEDESTAL


Using a phillips-head screwdriver, assemble the bottle filler to the pedestal using H4 (x8) M6 x 10 pan head screws.



5. ATTACH DRINKING FOUNTAIN TO PEDESTAL

Assemble to the drinking fountain to the pedestal using **H5** (x4), **H6** (x4) and **H7** (x4) hardware. Tighten all nuts securely using an adjustable wrench.



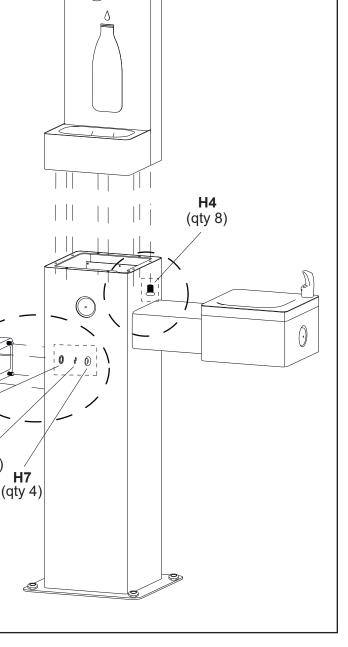


H5 (qty 4)

H6 (qty 4)


6. CONNECT WATER INLET LINES

- Install a shut-off valve (not included) on the water supply.
- All water connections and drains must comply with local codes.


Though the rear access windows, connect water inlet lines as illustrated below:

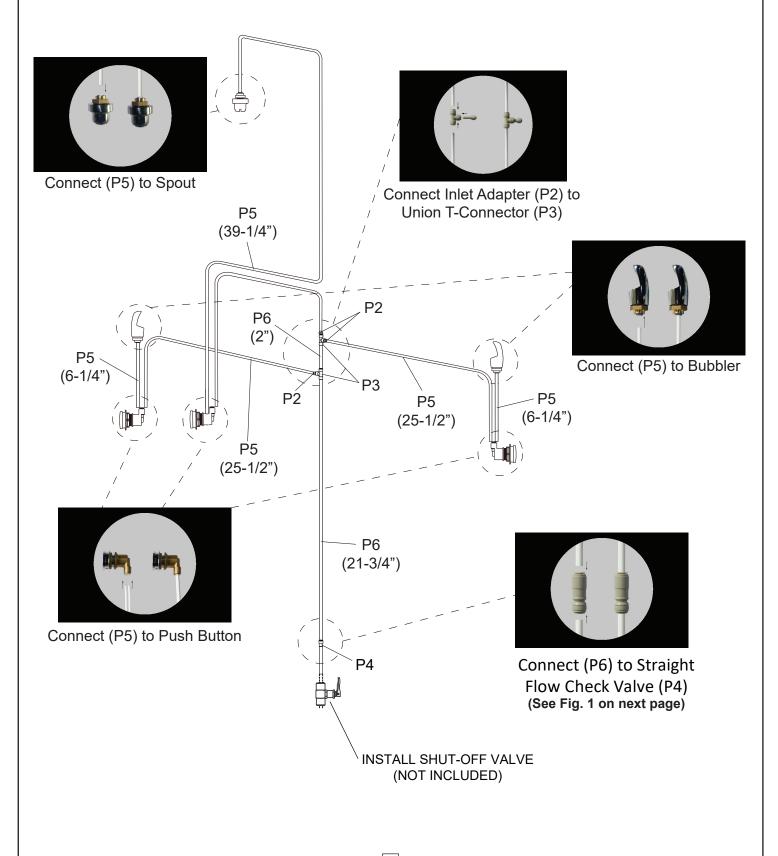


WATER INLET LINE CONNECTION BREAKDOWN:

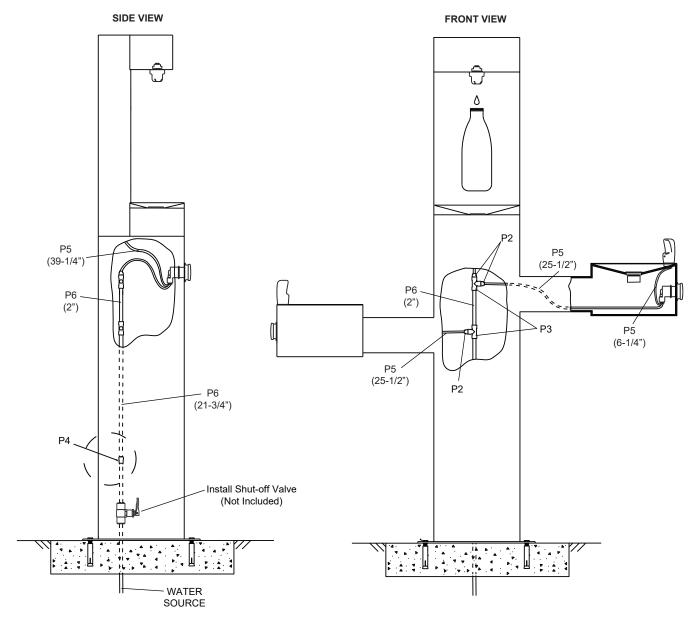

P4: Straight Flow Check Valve:

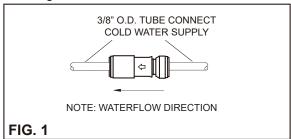

All Water Inlet Connections:

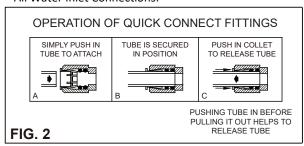


- If drinking fountain is being installed in areas where cold temperatures may occur, wrap pipe insulation (P7) around all water inlet lines.
- Installation of a trap on the water drain line may be necessary; check local codes. Always remove trap before winterization draining.


CAUTION: Before freezing temperatures occur, see Draining and Winterization section of this manual (page 12) for proper preparation.

7. CONNECT WATER DRAIN LINES

- All water connections and drains must comply with local codes.
- Through the rear access windows, connect water drain lines as illustrated below. **NOTE:** All drain lines attach with *quick connect* connections.
- Installation of a trap on the water drain line may be necessary; check local codes.

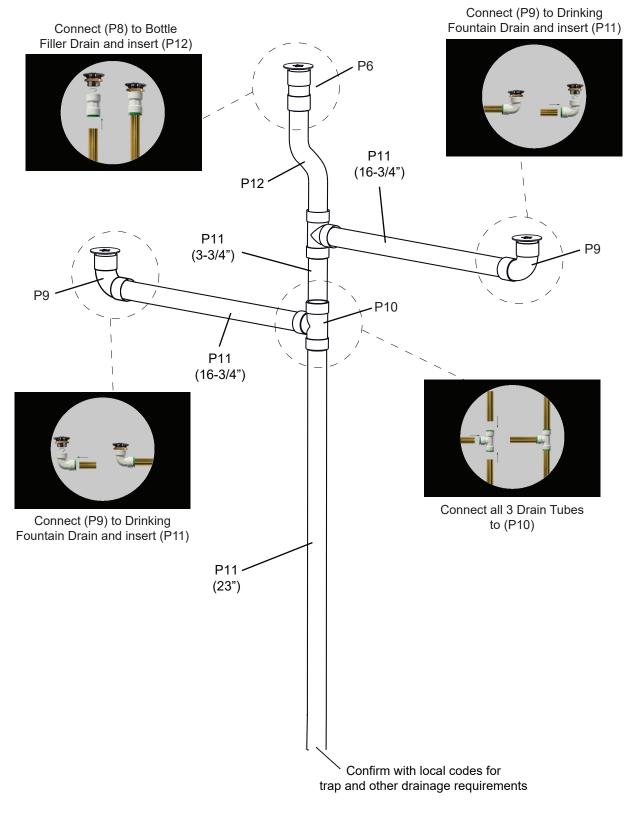

WATER DRAIN LINE CONNECTION BREAKDOWN:

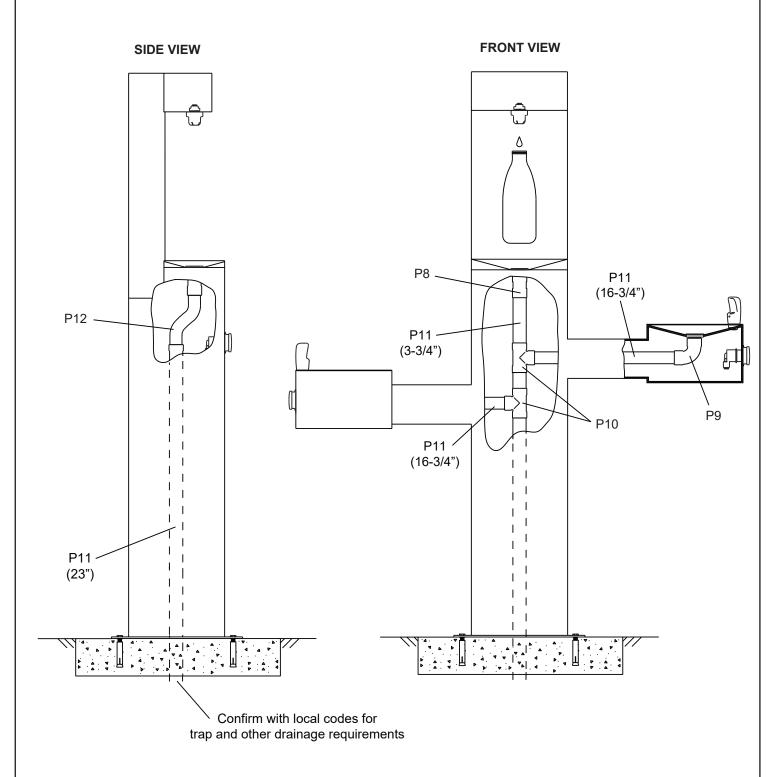

Note: Turn on water supply and check all connections for leaks and proper operation.

Reinstall all (5) access panels using the (32) M6 x 10 flat-head anti-theft screws preciously removed from the fountain.


WARNING: Flush all water supply lines thoroughly before initial use.

START-UP

Initial water flow may have sputter due to air in the water lines; this will be eliminated once air is purged from all water lines. Press and hold the push button until a steady water stream is achieved.

STREAM HEIGHT ADJUSTMENT

To adjust the water stream height, insert a small flathead screwdriver through the access hole in the center of the push button and turn the adjustment screw. Turn clockwise to raise the stream height and counterclockwise to lower the stream height. For best adjustment, the stream should be approximately 1-1/2" above the top of the bubbler, (see FIG.3).

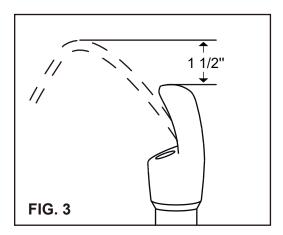

CAUTION: The fountain is rated for inlet water pressure of 20-105 PSI. A pressure reducing regulator should be used if the inlet water supply exceeds 105 PSI. Any damage caused by reason of connecting this product to supply line pressures lower than 20 PSI or higher than 105 PSI will void warranty.

DRAINING AND WINTERIZATION

- Before freezing temperatures occur, turn off the water at the shut-off valve, disconnect the water supply line tubing and blow out lines. Press down on push button to release any air pressure that may remain in the lines.
- · Remove trap before winterization draining.
- DO NOT allow water lines to freeze. Cracked or broken components due to freezing are not covered by warranty.