

User's manual

Manual del usuario

Manuel de l'utilisateur

Customer Service
US: 1-800-645-2986

Servicio de atención al Cliente
US: 1-800-645-2986






Service à la clientèle
Canada: 888-645-2986

Folding Plastic Picnic Table

Model(s): 695769 (white) ; 695769CH (charcoal) ;
695769GN (green)



CONTENTS

Ref.	Qty.	Description
1	1	Table 
2	1	Bench 
H1	4	Wrench 
H2	3	Screw 
H3	6	Nut 


1

Open table and benches upside down on protected surface.




2

Ensure that the diagonal braces are in locked position.

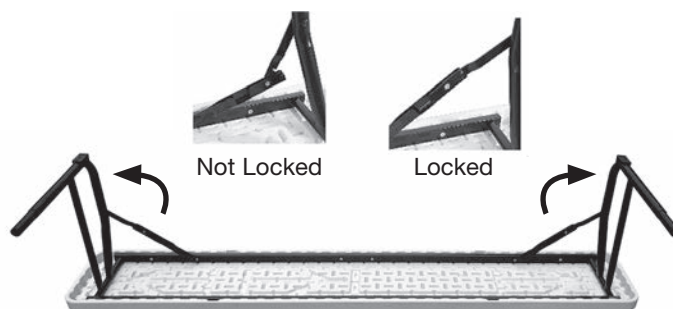

3

Attach benches to table with leg screws and washers at highlighted positions. Do not tighten screws until all are in place.

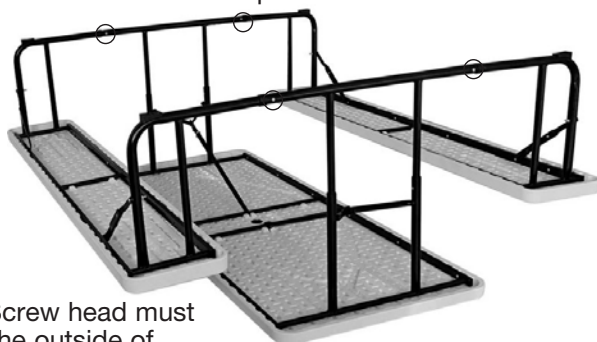

Note: Screw head must be on the outside of the frame.

4

Ensure that the diagonal braces are in locked position.



Folding Plastic Picnic Table

To Fold Table: Press buttons and push table top downward. Push down on the table and bench braces. Fold leg frames inward.



Secure legs to the table using the provided nylon fasteners.

To Open Table After Assembly: Unfold leg frames. Push table and leg braces into lock position. Flip table over. Press buttons to raise table.

