SQUARE TABLE USER MANUAL





 


TOP UNIT



 


BASEPLATE





STAND









EXTENSION CORD



POWER CORD







120V 15A OUTLET **REQUIRED**





SETUP INSTRUCTIONS 🗪



