



R&B WIRE PRODUCTS, INC.
YOUR TRUSTED PARTNER SINCE 1946

ASSEMBLY INSTRUCTIONS

MODEL 500 Deluxe Utility Cart




TOOLS REQUIRED:

- (2) 7/16 wrenches or sockets
- (1) 1 Pair of pliers



1 person assembly

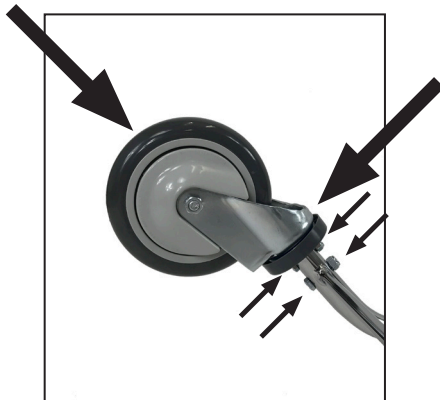

STEP 1

Place base upside down as pictured, with the handle on the right and the side with the tabs on the left. Place gray raceway cover onto stem of gray 5" casters and insert into hole on left side of leg. While holding raceway cover up against caster, line up holes in leg with holes in caster and secure with bolts and nuts, with nuts facing inwards. Repeat for other caster.



STEP 2

On right side, slide a washer onto rear horizontal axle, then large wheel with 3-spoked side facing outwards, followed by other washer. Secure by inserting cotter pin through end of axle. With pliers, bend ends of pin apart from one another. Repeat for other wheels.

WARNING



- Never allow anyone to ride in cart.
- Always proceed slowly.
- Be sure wheels roll freely and turn easily.
- Balance all loads in center of basket.
- Maximum load capacity 40 pounds.

HARDWARE INCLUDED (Not to scale)



x2 Raceway guards



x4 Nuts

x4 Washers



x4 Bolts



x2 Cotter pins





R&B WIRE PRODUCTS, INC.

YOUR TRUSTED PARTNER SINCE 1946

ASSEMBLY INSTRUCTIONS

MODEL 500 Deluxe Utility Cart

pg 2



STEP 1

Place frame on floor with wheels facing down.



STEP 2

While lifting the long handle, slide the small bottom basket (with hooks facing down) between the legs of the frame. Hook one end over the support at rear, and one end over support at front. Lower handle so the frame spreads apart and locks the bottom basket into place.



STEP 3

Place pins of top basket into holes of tabs. Place hooks over support bar. Your cart is ready to use.

WARNING



- Never allow anyone to ride in cart.
- Always proceed slowly.
- Be sure wheels roll freely and turn easily.
- Balance all loads in center of basket.
- Maximum load capacity 40 pounds.

