


TPC60 SERIES

**OWNER'S
MANUAL**
Read and
save these
instructions

THE *Heat* BUSTER™

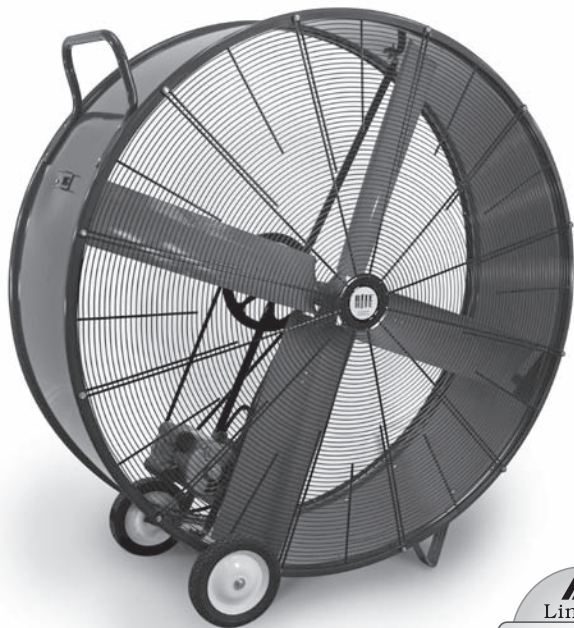

- Installation
- Operation



OWNER'S RECORD

Please complete for future reference.

Model # _____ Serial # _____

Purchased from _____

Date Purchased _____



TRIANGLE ENGINEERING OF ARKANSAS, INC.

E-mail: mail@trianglefans.com • Website: www.trianglefans.com

1101 North Redmond Road • Jacksonville, Arkansas 72076
(501) 982-7558 • Fax (501) 982-5691 • 1-800-255-9014

IMPORTANT:

READ INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO INSTALL, OPERATE OR SERVICE THIS FAN. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE. RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

DESCRIPTION

The HEAT BUSTER is a high volume fan designed for heavy-duty use in factories, warehouses, laundries, garages, etc. The unit is constructed of cold-rolled steel with a powder coat finish. Guards are made of steel wire and comply with OSHA guarding requirements. The ON/OFF switch is conveniently mounted and guarded on side of barrel.

GENERAL SAFETY INFORMATION

- 1. WARNING:** To reduce the risk of electric shock, **DO NOT** expose to water or rain. To guard against electric shock while the fan is connected to power source, **DO NOT PERMIT** fan to come in contact with other grounded objects such as pipes, radiators, ranges, etc.
- 2. WARNING:** To reduce the risk of fire or electric shock, **DO NOT** use this fan with any solid-state speed control device.
- 3. DO NOT ABUSE THE POWER CORD.** **DO NOT** pull on cord to remove from electrical receptacle. Keep cord away from heat, oil and sharp edges. Inspect cord periodically and replace if damaged.
- 4.** Disconnect the fan when not in use, before servicing and cleaning and when repairing or replacing parts.
- 5. DO NOT** carry or move the fan when connected to power source. Be sure switch is in "**OFF**" position prior to connecting to power source.
- 6.** Use of extension cord is not recommended. However if it is necessary, use only an extension cord of proper size (Amp rating), receptacle type and UL listed, with a receptacle to accept the three-prong grounded plug furnished on the fan's power cord.

7. Before operating this fan, check for worn or damaged parts and replace or repair as required. To avoid risk of fire, electrical shock or other injury, disconnect from power source before servicing.

8. DO NOT operate the HEAT BUSTER near flammable liquids or in gaseous or explosive atmospheres as sparks from motor may ignite fumes.

9. If the wire guards are removed, replace before normal operation.

10. In case of power failure, turn off the fan at switch. This will prevent motor burn out and/or unexpected restarting.

ASSEMBLY

No assembly required

INSTALLATION

Simply locate fan in desired position, connect power cord, and fan is ready for operation.

OPERATION

Your Heat Buster fan is turned **ON** or **OFF** with a rocker switch located toward the top of the barrel. To operate the single speed fan push the rocker switch down on one side to turn the fan **ON** and down on the opposite side to turn the fan **OFF**.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
Fan does not operate	<ol style="list-style-type: none">1. Faulty switch2. Defective motor3. No power	<ol style="list-style-type: none">1. Replace switch2. Replace motor3. Check to see if power cord is plugged in. Check fuse or circuit breaker.
Insufficient air flow	<ol style="list-style-type: none">1. Loose pulleys or fan blade2. Intake guard or exhaust guard excessively dirty	<ol style="list-style-type: none">1. Tighten pulley set screw2. Clean guards
Squealing, slapping or whining noises while operating	<ol style="list-style-type: none">1. Defective motor bearings2. Defective fan bearings3. Worn belt	<ol style="list-style-type: none">1. Replace motor2. Replace bearings and seals3. Move motor to tighten belt

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK DO NOT USE THIS FAN WITH ANY SOLID STATE FAN SPEED CONTROL DEVICE.

MAINTENANCE

WARNING: Disconnect power before servicing

MINOR AND ROUTINE

1. Motor bearings are pre-lubricated ball bearings. Re-lubrication is not required.
2. Keep guards and blade clean by vacuuming or wiping periodically. Also keep motor from accumulating excessive dust that may cause overheating.

NOTE: Upon completion of maintenance, reinstall components in reverse order as indicated above.

WHEN ORDERING REPAIR PARTS always give the following information:

1. Part description
2. Model Number of fan
3. Serial number

DISASSEMBLY PROCEDURE

1. Disconnect cord from power supply.
2. Remove guard screws.
3. Remove Guard.

LIMITED ONE YEAR WARRANTY

Triangle Engineering of Arkansas, Inc. (Manufacturer) warrants, from the date of purchase, to the original purchaser only, that the product manufactured by Manufacturer is free from defects in material and workmanship for a period of ONE (1) YEAR. Motors, capacitors, v-belts and switches are excluded from this warranty, but shall have a limited one year warranty from date of purchase to the original purchaser.

If a failure of the product occurs, contact the Manufacturer at:

1-800-255-9014

and give the model number of the product, the purchase date, and a description of the problem to the customer service agent.

Once the problem is diagnosed, and proof of purchase date is verified, Manufacturer will have the option of shipping the necessary repair part(s) to the Customer, freight prepaid or having the product returned to Manufacturer for repair or replacement. If the product is returned to the Manufacturer, Customer is responsible for prepayment of all inbound freight charges. Upon repair or replacement, which shall be at the discretion of Manufacturer, the Manufacturer will prepay all outbound freight charges for the return of the product to the customer. However, if Manufacturer finds product to be in operating condition and no problems are diagnosed, product will be returned to customer freight collect.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

Except as provided by this express warranty, the goods are sold "as is" without any implied warranties.

This limited warranty does not cover labor to replace warranted parts or motors, nor does it cover damage resulting from accident, misuse or abuse, lack of proper maintenance, improper installation, affixing of any parts or attachments not authorized by Manufacturer, or loss of parts.

In no event shall Manufacturer be liable for any special, incidental, or consequential damages; which may result from any defect in material or workmanship.

It is expressly understood that Buyer's sole and exclusive remedy shall be repair or replacement of defective parts, and that Triangle Engineering shall not be liable for injury to persons or property. Should the goods prove so defective, however, as to preclude the remedying of warranted defects by repair or replacement, the Buyer's sole and exclusive remedy shall then be a refund of the purchase price.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

MOTOR REPLACEMENT DURING WARRANTY PERIOD

If the motor should fail during the first year of operation, simply remove the LABEL ONLY from the motor and mail the original label and copy of purchase receipt to Triangle Engineering. Once the label is received, and if the motor is still under warranty, we will ship a new motor within 24 hours, UPS PREPAID. DO NOT RETURN MOTOR.