



18 cu. ft. Compact Refrigerator



⚠ WARNING: IMPORTANT SAFETY INSTRUCTIONS:

Read all instructions before using the appliance.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and/or injury to persons, including the following:

1. This appliance must be grounded. Connect only to a properly grounded outlet. See important grounding instructions.
2. Install or locate refrigerator only in accordance with the provided installation instructions.
3. To protect against electric shock, do not place cord, plug, or refrigerator in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not operate this appliance if it contains a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
6. This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility or call our toll-free customer service number for information on examination, repair, or adjustment.
7. Do not cover or block any openings or air vents on this appliance.
8. Do not store this appliance outdoors or use near water.

9. Do not locate this appliance near heat sources or open flame.
10. Do not use or store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
11. Do not place heavy objects or magnet items on top of refrigerator.
12. The refrigerant of this product is R600a, which is flammable. Make sure not to damage the cooling system during transportation and installation.
13. To minimize the risk of possible ignition due to improper service or the use of incorrect parts, this unit must be serviced by factory authorized personnel only.

PLEASE SAVE THESE INSTRUCTIONS

⚠ DANGER: RISK OF CHILD ENTRAPMENT

Prior to discarding old refrigerators or freezers:

1. Remove doors.
2. Leave shelves in place so that children may not climb inside

 
Note: All refrigeration products contain refrigerants, which under federal law must be removed prior to disposal. If disposing an old refrigerator, verify with a qualified disposal company for instructions.

IMPORTANT GROUNDING INSTRUCTIONS

This appliance must be grounded. The plug must be plugged into an outlet that is properly installed and grounded.

⚠ WARNING: Improper use of grounding can result in a risk of electric shock.


1. Consult a qualified electrician if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.
2. If an extension cord is required, use only a 3-wire extension cord with a 3-blade grounding plug, and 3-slot receptacle that will accept the unit plug. The marked electrical rating of the extension cord should be equal to or greater than the rating of the appliance.

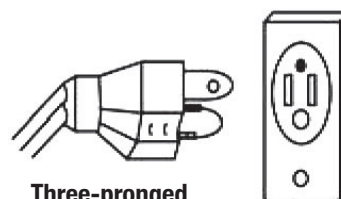

Three-pronged
(grounding plug)

Properly
polarized and
grounded
outlet

 
PARTS AND FEATURES

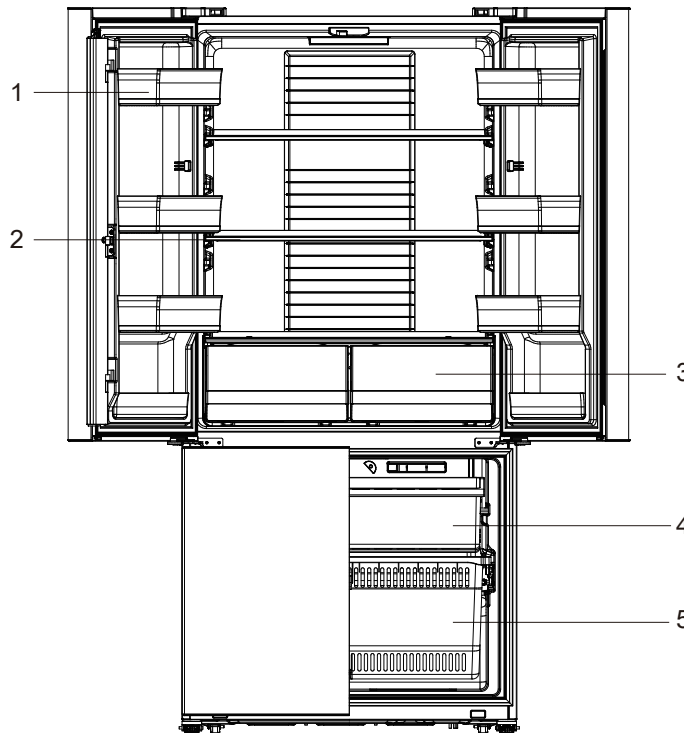

- 1.** Door Bin
- 2.** Glass shelf
- 3.** Crisper
- 4.** Freezer upper drawer
- 5.** Freezer lower drawer


HANDLING AND PLACEMENT

 1. The refrigerator should be placed on a flat and solid surface. Do not use the foam pad of the refrigerator to make it higher. If there is a slight instability, the adjustable feet at the front of the refrigerator can be adjusted. Rotate the adjustable foot clockwise to raise the height of the refrigerator and reduce the height by counterclockwise.

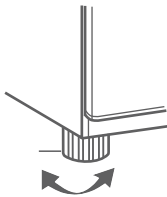

- 2. Refrigerator should not be placed in wet places. If the refrigerator is accidentally splashed with water or other dirt, please clean it with a soft cloth.
- 3. Do not place in area that gets below 41°F and do not use in area that will get wet.
- 4. Please pull the power plug and remove all the food in the fridge when handling.
- 5. Use tape to fix the movable parts of refrigerator, like glass shelves of fridge, vegetable crisper and freezer drawer. Close the door and fix it with adhesive tape so as not to be opened when moving.
- 6. Do not hold the handles to move the refrigerator in the process of transportation. You should lift the refrigerator from the bottom.

 8. Refrigerator should be placed in a dry, well ventilated place. The sides and back of the refrigerator should be retained more than 2 inches of space, and the top to retain more than 2 inches of space.

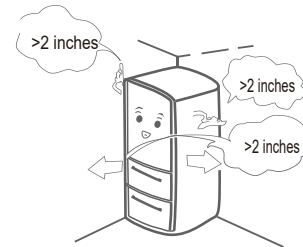

- 9. Refrigerator should be placed far away from any heat source and space of direct sunlight, so as not to affect the performance of the refrigerator.
- 10. It is not appropriate to lift sideways or reverse the refrigerator during the handling. If you have to tilt, the inclination between the cabinet and the ground should not be less than 45 degrees. Do not use the mobile pulley on the prone scratched floor, it may scratch the floor.
- 11. The refrigerator you purchased uses R600a refrigerants that are very flammable. When you are transporting and placing the refrigerator, please avoid collisions or violent shocks to prevent damage of the refrigeration system or fire accidents.



Note: Refrigerators cannot be transported upside down or laying flat. If they are transported incorrectly, refrigerators must be placed upright for 2 hours before they can be plugged in.

18 cu. ft. Compact Refrigerator

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household trash. Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous to the environment and human health.

 
Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant. This appliance contains the flammable refrigerant isobutane (R600a) and cyclopentane (R141b) in the cabinet insulation, and must be disposed of in a separate waste collection. Contact your local authorities for advice on recycling facilities in your area

Take care not to damage the pipework at the back of the appliance before or during transportation so that the refrigerant gas cannot escape. The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse

DANGER. Risk of child entrapment: When discarding a refrigerator, make sure to take off the door and the spring action or bolt catch. Leave the shelves in place so that children cannot easily climb in, get trapped inside and suffocate.

INSTRUCTION FOR USAGE

1. All the packaging components, including the foam pad (which cannot be used to make the refrigerator higher) and the adhesive tape used for fixing accessories, must also be removed. Check the accessories and information, as well as the items in the package according to the packing list in the instructions.

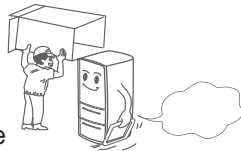

2. After the power supply is switched on, the refrigerator will continue to work for a long time in order to reach the predetermined temperature. During this time, please try to reduce the number of times you open the doors. For the first and a longer working time, the noise of the refrigerator may be slightly louder, and the temperature of both sides may be higher. After a period of time, when the refrigerator is fully cooled, it can be used and put food into.



3. Please do not rush to connect the power supply after the stable placement and cleanness of the refrigerator. It should be stand for at least 2 hours, and then switch on the power to ensure the normal operation of the refrigerator.

4. Place the refrigerator in the right place (see the foregoing points for attention), and make a full cleaning of the refrigerator before use (refer to the latter section of cleaning methods).of the refrigerator.

Note: The power cord should not be pressed by the refrigerator itself and other heavy objects, so as to avoid damaging the power line and causing accidents.

5. The temperature of refrigerating chamber is usually around 32-50°F, which is used to store fresh food for a short time, such as vegetables, fruits and beverages,etc..

6. Refrigerated food should be wrapped in plastic wrap and placed evenly on the shelf to prevent taint of odor or excessive evaporation of moisture.

7. The storage of goods in the refrigerating chamber should not be too dense. It should leave proper space for the cold air circulation.

Hot food should be cooled to room temperature and then put into the fridge.

8. Radish or similar food should cut off leaves to prevent nutrition from being absorbed by leaves.

9. The amount of fresh food placed in the freezer should not exceed the freezing capacity listed in the technical parameters of the refrigerator.

10. Minimize the number of opening and closing times to reduce the loss of cold air. So that the storage period can be extended.

Note: It should be noted that food should not obstruct the air outlet when storing food, so as not to cause bad circulation of the cool air and affect the normal performance of the refrigerator.

11. Frozen foods should not be refrozen after thawing. They should be eaten as quickly as possible.

12. Use sealed packages or fresh-keeping bags to freeze food as far as possible, so that they can be stored for a longer time and can reduce freezer burn on the food chamber.

13. After a loss of power, please reduce the number of open doors, and try not to put in the new food (to prevent the temperature in the cabinet to pick up faster).

14. If a power outage is known change pick up to rise, you should make more ice cubes that placed in a watertight container, and put them in the upper of the refrigerating chamber.

INSTRUCTION FOR USAGE

1. When the refrigerator is not in use, please open the door to prevent the bad smell from the residue of the food in the refrigerator.

2. The freezing drawer is used for storing something that need to be preserved for a long time, such as meat, fish and so on.

3. Package the food to be frozen as flat as possible to facilitate freezing and thawing.

4. After pulling off the power, it should be kept the refrigerator at least 5 minutes apart before it is reenergized. vertically, so that the storage period can be extended.

5. The food that can be washed is best to be stored after cleaning and drying.

6. If the refrigerator needs to be stopped for a long time, the power plug should be removed, the power should be cut off, and the refrigerator should be cleaned according to the method described above. In general, do not block up the refrigerator, otherwise it will affect the service life of the refrigerator.

18 cu. ft. Compact Refrigerator

 
MAINTENANCE AND CLEANING

Defrost

1. This product is frost-free refrigerator, and there is no need for manual defrosting.

Cleaning

1. The refrigerator should be cleaned often to avoid unpleasant smells.
2. Before cleaning, you must remove the plug.
3. Use a soft towel or sponge dipped in warm water (neutral detergent can be added) to clean the cabinet except the door seal. When the door seal is cleaned, you must use rinsing and wipe it with dry cloth.

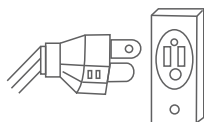


Note: Do not spray the water directly when cleaning, so as not to affect the insulation performance of electrical components. Use a dry rag when cleaning electrical components such as switch and light.


Note: Do not use hard brushes, wire brushes, detergents, gasoline, lacquer thinner, acetone and other organic solvents, hot water or acid, alkali to clean the refrigerator.

Guide for the installation

 Installing door bin

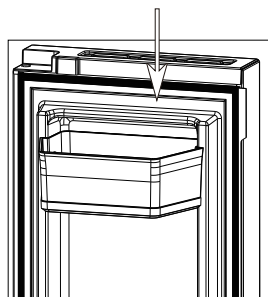


tray off upward

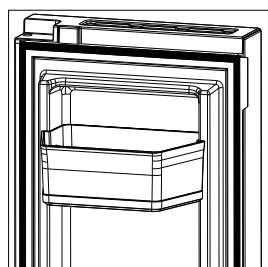 

1. Place the tray above the mounting position and force the door up to the bottom, completing the installation when it cannot continue to move down.

Door Mullion

 
When the door mullion is positioned unfolded as illustrated in figure 1, the door will not close properly. Please fold the door mullion inside as shown in figure 2 before closing the door. In order to prevent damage, do not try to close the door when the mullion is unfolded as shown in figure 1.



Note: in order to prevent condensation, the door mullion is provided with heater for heating. Door mullion heating is normal phenomenon and has no effect on frozen food.

BUTTON INSTRUCTION OF DISPLAY

The below picture is a schematic diagram of an electronic display.

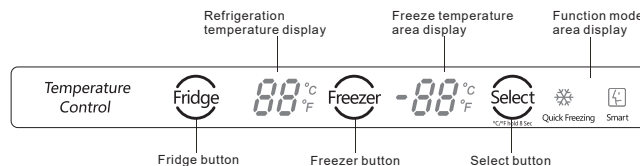 

Button instruction

1. "Fridge" button: adjust the setting temperature of refrigerating chamber (press down is effective).
2. "Freezer" button: adjust the setting temperature of freezing chamber (press down is effective).
3. "Select" button: with each click (within 5 seconds), the corresponding function icon flickers, and then switch among quick freezing- intelligence successively (press down is effective). No operation within 5 seconds will end.
4. Press "SELECT" for 8 seconds, temperature display unit to the operation done mentioned earlier, can be switched to Celsius or Fahrenheit, light of "°C" will be turned on according to the operation done mentioned earlier.

THE SETTING OF THE REFRIGERATOR COMPARTMENT

The LED display turns bright when the door is open. Push the "Fridge" button. The buzzer rings. Then the refrigerating room turns into the setting condition. The temperature patterns turns flash and the temperature of the refrigerating room increase 1. The temperature will recycle as "33" — "45".

Warning: The temperature will be set finally and the flash will disappear without setting operation over 5 seconds.

THE SETTING OF THE FREEZING ROOM

The LED display turns bright when the door is open. Push the 'freezer' button. The buzzer rings. Then the freezing room turns into the setting condition. The temperature turns flash and the temperature of the freezing room increase 1. It will recycle from "5" — "-8".

Warning: The temperature will be set successfully and the flash will disappear if stop setting over 5 seconds.

18 cu. ft. Compact Refrigerator

 
The setting of the functions

1. The LED display turns bright when the door is open. Push the "Select" button.
Then it turns into the condition of setting functions.
 2. Entering the quick freezing mode: Push the "Select" button.
Flashing 5 times When the quick freezing pattern turns bright, it is in the quick freezing mode.
 3. Exiting the quick freezing mode: Push the "Select" button.
Disappear When the quick freezing pattern disappears, it is exiting the quick freezing mode.
- Note:** In quick freezing mode, the temperature of freezer room is fixed at low temperature, and it cannot be regulated. It will exit the quick freezing mode within 24 hours after finishing freezing.
4. Entering the smart mode: Push the "Select" button.
Flashing 5 times When the smart pattern turns bright, it is in the smart mode.
 5. Exiting the smart mode: Push the "Select" button.
Disappear When the smart pattern disappears, it is exiting the smart mode.

Note: In the smart mode, the temperature of refrigerator and freezer change as the change of the environmental temperature and regulate the temperature automatically.


Warning: Push the "Select" button, exit the smart mode, and all selects pattern disappear, then it exit the setting of select modes. regulate the temperature automatically.

- The zone shown is for humidity adjustment. Users can slide the module left or right in accordance with the food situation. When the module locates in the "LOW" side, the humidity is low in crisper. When the module locates in the "HIGH" side, the humidity is high in crisper.

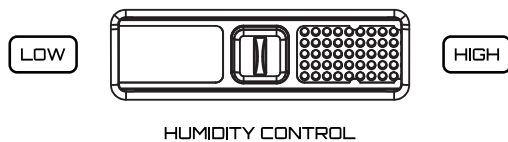


LIGHTING AND ITS REPLACEMENT

 
1. When the door of refrigerating chamber opens, the LED light turns on.
2. When the lighting is damaged, please remove the lampshade first and then replace the LED lighting.
3. The specific operations are shown in the following diagram:



 Please move the lampshade and the thermostat out 3-5mm in the direction of the arrow.



 Take out the lamp shade and thermostat downwards. the arrow.



Pull the connection terminal, use the screwdriver to remove the LED light board and replace it.

Note: If the LED lamp is abnormal, it should be replaced by professionals. Do not take dismantling and replace it privately in order to avoid damage.

TROUBLESHOOTINGS

The refrigerator doesn't work.

Is the refrigerator power connected (plugs, sockets.)?



Is the supply voltage too low?



There is an unusual smell in the refrigerator.

1. Is the odorous food wrapped tightly?
2. Check whether there is any spoiled food.
3. The interior of the refrigerator needs cleaning.

The temperature inside the cabinet is not low enough.

1. Door not closed tightly, frequent opening of the door, door left open for too long, air outlet is blocked by food.
2. The position of refrigerator is either under the direct sunlight or near the stove, heater and other heat producing appliances.
3. Poor ventilation, the sides or backboard blocked by something or too dirty of the cabinet.
4. Setting the temperature too high will cause the temperature inside the cabinet not to be low enough.

Note: If detected by the above method, your refrigerator is still abnormal, please contact our after-sales service department or local authorized maintenance department in time.

Lighting doesn't work.

Is LED lamp (bulb) damaged?



Is the refrigerator power connected (plugs, sockets, insurance, etc.)?



Compressor runs for a long time.

1. This is a normal phenomenon for a long time operation when used for the first time.
2. Put a large number of food that needs to be refrigerated or frozen at a time.
3. The weather is hot and the environment temperature is too high.
4. Open the refrigerator door frequently.
5. The refrigerator door is not closed tightly.
6. Low temperature is set.

The refrigerator is noisy when running.

1. Is the floor flat? Does the refrigerator place stably?
2. A part of the refrigerator is whether exposed to external objects or walls.

18 cu. ft. Compact Refrigerator

SPECIFICATIONS

Model	243229	
Climate	T	
Electric shock protection type	I	
Capacity(cu. ft.)	18	
Voltage (V)	120	
Frequency (Hz)	60	
Current (A)	1.8	
Voice (dB)	≤42	
Refrigerant	R600a/2.47oz	
Weight	202.8lbs	
Interior temperature (F)	Freezer	5 ~ -8
	Refrigerator	33~45
Unit dimensions (in inches)	Width	32.30
	Depth	27.30
	Height	70.00

PACKING LIST

Parts	Number
Door bin	8pcs
Crisper	2pcs
Freezer upper drawer	1pcs
Freezer lower drawer	1pcs
Glass shelf	2pcs
Owner's manual	1pcs

Note: Products are subject to improve from time to time, any changes in parts without further notice.