

User Manual

Manual de Usuario

Manuel de l'Utilisateur

 
Customer Service
US: 1-800-645-2986

Servicio de atención al Cliente
US: 1-800-645-2986

Service à la clientèle
Canada: 888-645-2986

Adjustable Ceiling Drum Fan

Model: 293139

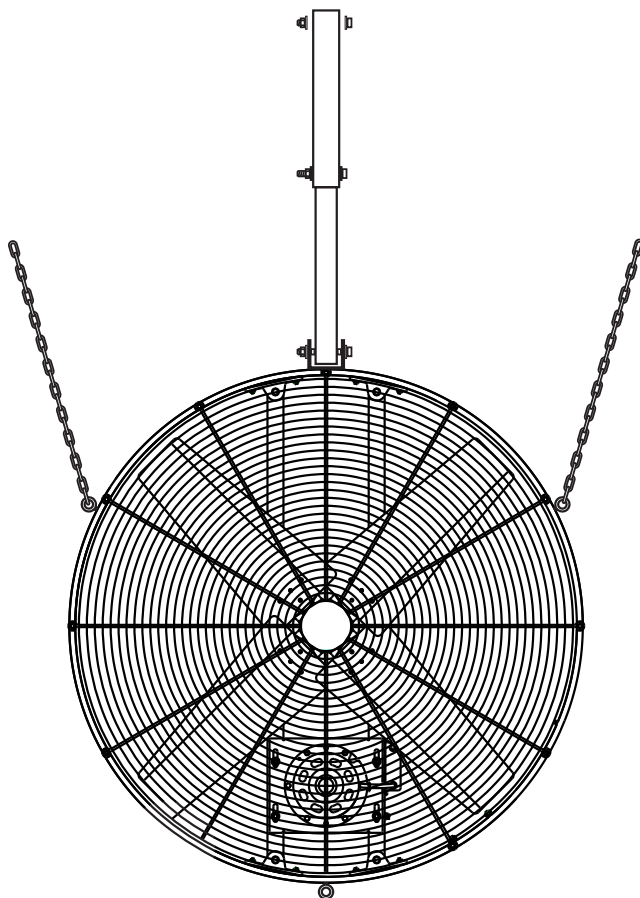

PLEASE READ AND SAVE THIS INSTRUCTION.

Adjustable Ceiling Drum Fan

READ AND SAVE THESE INSTRUCTIONS

CAUTION:

Read and follow all instructions before operating ceiling-mounted drum fan. Do not use fan if any part is damaged or missing.

WARNING:

- To reduce the risk of fire or electrical shock, do not expose to water or rain.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- To reduce the risk of injury to persons, install fan at least 2.1m (7 feet) above the floor.
- To reduce the risk of injury, disconnect from power supply before servicing.
- If the power supply cord is damaged, contact your local service center or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
- The appliance does not apply to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapor or gas).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION:

 
 
1. Never insert fingers or any other objects through the grill guard when fan is in operation
2. Install on interior wall. Not for use in kitchens.
3. Disconnect the fan from its power source when removing guards for cleaning.
4. Be sure fan is mounted at least 2.1m above floor.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Close supervision is necessary when this fan is used near children, the elderly and pets.
7. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
8. This fan should not be operated outside.

CAUTION: Do not alter the fan's assembly.

WARNING: Be sure that both front and rear guard screws are completely tightened in locking position before operation.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING.

- a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- b) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

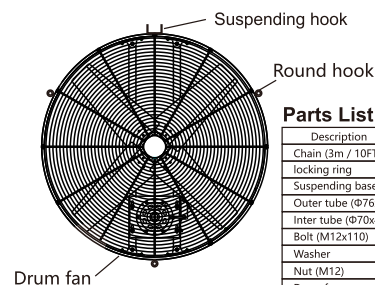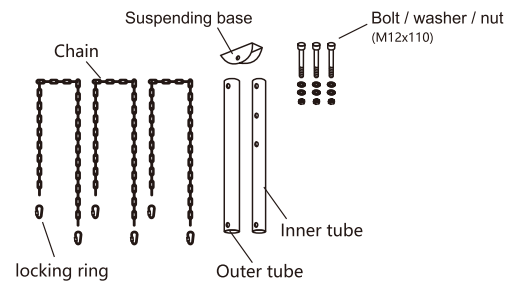

Parts List

Description	Qty.
Chain (3m / 10FT.)	3
locking ring	6
Suspending base	1
Outer tube (Φ76x420)	1
Inner tube (Φ70x420)	1
Bolt (M12x110)	3
Washer	6
Nut (M12)	3
Drum fan	1

CHOICE OF PLACEMENT:

Choose a place where there is no risk for people, animals or objects to get in touch with the rotating fan.

WARNING: The suspension mounted drum fan should be mounted on a strong cross beam or a suitable building structure. The ceiling must be able to support at least 100kg/m² weight.

OPERATING INSTRUCTIONS

SPEED CONTROL:

Select air speed by setting switch to either HIGH, LOW or OFF.

CLEANING


WARNING: Unplug from electrical supply source before cleaning.

1. Use soft damp cloth to clean, then wipe with dry cloth.
2. Do not use a cleaning solution that is harmful to paints or plastics.
3. Do not bend the blades.







Adjustable Ceiling Drum Fan

Fan Assembly

 1. Attach the suspending base mounting to main cross beams of a strong cross beam or suitable building structure with bolt, washer, and nut.
(See step ① of following diagram)
NOTE: HARDWARE NOT SUPPLIED. MUST BE ABLE TO SUPPORT 300LBS.
2. Attach the outer tube mounting to suspending base with bolt, washer, and nut.
(See step ② of following diagram)
3. Attach inner tube to the outer tube with the bolt, washer, and nut. (See step ③ of following diagram)
4. Other end of inner tube to the suspending-hook at the top of the drum fan with bolt and washer and nut. (See step ④ of following diagram)
5. Buckle three locking rings to the end of three chains.
6. Buckle other three locking rings to the three round-hooks at side of the drum body, and connect other end of chains and the drum hooks together with the locking rings. (See step ⑤ of following diagram)
7. Wrap three chains around a secure building joist, truss, or other suitable structure. Secure with locking ring. Adjust position of locking ring as necessary. (See step ⑥ of following diagram)

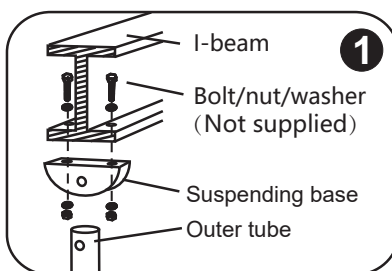

      WARNING: The suspension mounted drum fan should be mounted on a strong cross beam or the suitable building structure. The ceiling structure must be able to support at least 100kg/m² weight.
CHOICE OF PLACEMENT: Choose a place where there is no risk of people, animals, or objects touching the rotating fan.

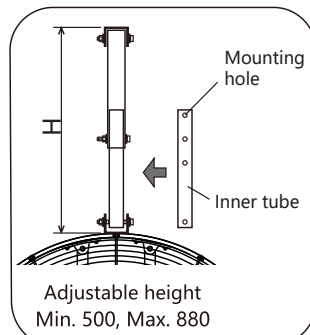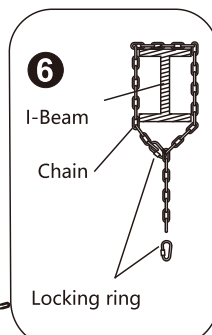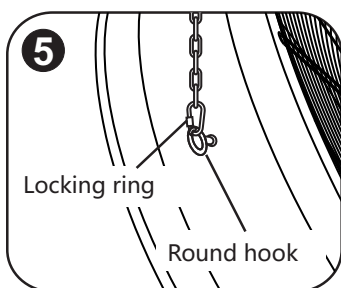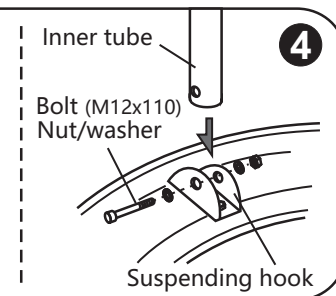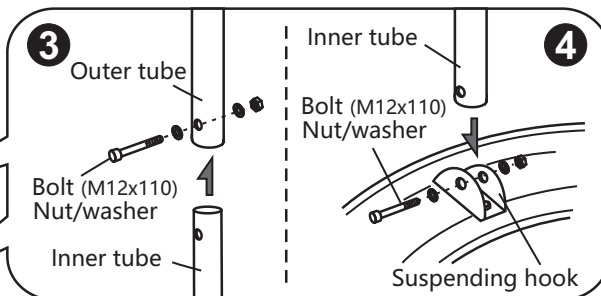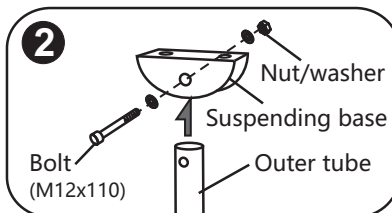

RATING

293139: 120V/60Hz 9.0A 1120W