




User's manualManual del usuarioManuel de l'utilisateurCustomer ServiceServicio de atención al ClienteService à la clientèleUS: 1-800-645-2986US: 1-800-645-2986Canada: 888-645-2986

Expandable Battery

Model: 812542

Read the instructions carefully before use and follow the instructions pertaining to risk of fire, electric shock, or injury to persons. Keep these instructions in a safe location for future reference. For questions, visit globalindustrial.com or contact Customer Service at 1-800-645-2982

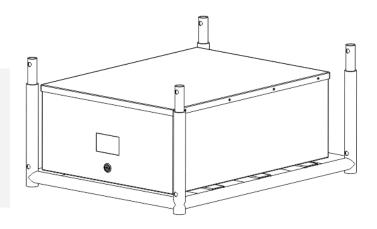

WARNINGS & PRECAUTIONS

- Failure to follow installation instructions will void warranty.
- After the battery is discharged to the cut-off voltage, continuing to discharge is called over-discharge. It can easily cause serious power loss in the battery, thereby greatly shortening its service life. Therefore, deep discharge should be avoided as much as possible when using the battery.
- The product should be kept away from fire, hightemperature environments, humid and rainy environments during use and storage, otherwise it may lead to dangerous situations.
- Non-professionals should not disassemble it by themselves.
- **DO NOT** discard the product at the end of its service life. Recycle the product according to local laws and regulations.
- This product should be protected from rain, water immersion, and violent vibration during transportation.
- It cannot be used at an altitude exceeding 2000m.
- **DO NOT** drop, squeeze, or collide with the product, so as not to subject the product to external pressure, which may cause a short circuit of the internal circuit of the product and damage to the battery.

- After use, please turn off the machine in time (the noload power consumption will continue to consume battery power when the machine is on.)
- Please use the charger supplied with the product for charging.
- This product and its accessories may contain some small parts. Please keep the product and its accessories out of the reach of children. Children may accidentally damage the product and its accessories, or swallow small parts, causing suffocation or other dangers, children or people with mental retardation need to use this product accompanied by their quardians.
- **DO NOT** use the product during thunderstorms. This may cause product failure or electric shock.
- If the product accidentally falls into the water during use, place it in a safe open area and do not turn it on again.
- The screen should be protected from collision during the application and delivery.
- **DO NOT** touch any of the socket connections on the product with your hands or metal devices while the device is on. Otherwise, there will be a safety hazard resulting in life safety.

101323

Technical Parameters

Item		Parameter
Nominal Capacity		5120Wh
Cell		LiFePo4 51.2V 100AH
Product Size		28.58 x 21.96 x 13.77 inch
Product Weight		122.36 lbs
Ambient Temperature		14-104°F
Range		Relative humidity: ≤80%
		Altitude≤2000 m
Transport and Storage		Temperature: 14-104°F
Environment		Relative humidity: ≤93% (no condensation)
		Atmospheric pressure: 70kPa ~ 106kPa
Input	Charger	58.4V 40A
Charging Time		About 2.5H

Package Contents

- Expandable Battery*1
- Product Manual*1

^{*} Connection Cable - Model 812544 sold separately

Application and Function Instruction


The product is used in parallel with the main battery to increase its capacity and create a longer loading time. When the power is exhausted, it can be connected in parallel with the host and charged at the same time. It can also be charged independently by using the charger provided with it. The built-in intelligent BMS board is equipped with functions like over-temperature, over-voltage, over-current, and short-circuit.

Product Main Structure Composition


The expandable battery is mainly composed of a metal protection frame, metal shell, cell, screen, and BMS protection board.

Panel Function Description

Front Panel

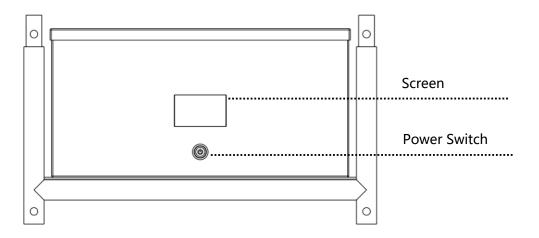

Rear Panel

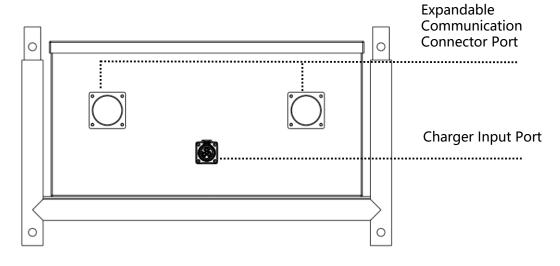

Operation and Usage

1. Start Steps

- 1) Check whether there is any visible damage to the appearance of the product and whether the output interfaces are loose or damaged (If abnormal conditions occur, stop using)
- 2) Place the product on the trolley or the main frame elbow and fix it firmly. Connect the main station and the battery with the supplied expandable cable.
- 3) Turn on the POWER buttons on the main's front panel and expandable battery. At this time, the green indicator on the main will light up and the screen on the expandable battery will operate normally to display the successful start. Please observe whether the main and the expandable battery is fully charged. When the power is lower than 30%, it is recommended to use it after it has been fully charged. Please check that whether the power difference between the batteries is within 10%, if exceeds, it is recommended to stop using it. Please check whether the expandable battery status in the battery information column of the main display is connected successfully and in online standby mode.

2 . Charging Steps

- 1) The expandable battery supports external charging and connecting with the main at the same time.
- 2) External Charging Operation: First, confirm whether the mains grid voltage is within the input range of the charger of this product. Second, turn on the expandable battery power switch. Plug the charger output into the back of the battery pack charging input interface and connect the input plug into the mains. Third, observe the screen power icon. The flash of the power level approves charging.
- 3) Charging methods for connecting the main at the same time: When connecting the expandable battery and main successfully, plug into the mains to see the charging status in the main screen and the battery level icon in the expandable battery screen. The flashing jumps proves that the product is charging.
- 4) DO NOT use external charging and the main AC Charging at the same time.
- 5) DO NOT use external charging when connected with the main in POWERED mode.

Product Maintenance

- 1) New products should be fully charged before use.
- 2) Regularly remove dust and dirt from the heat dissipation window.
- 3) In the case of long-term storage for more than three months, not less than 50% of the power storage shall be maintained.
- 4) If stored for more than 6 months, in order to extend the service life of the battery, please charge and discharge the product 1-2 times.
- 5) Scrub the surface of the chassis after each outdoor use.
- 6) Regularly check whether the external screws and lifting rings of the chassis are fully tightened.

Trouble Shooting

Issue	Suggested Action	
Unable to charge with the charger	 Check whether the expandable battery power is on. The power should be on before charging. Confirm that the charger supplied with the machine is used and check whether the charger is damaged. Check whether the specifications of the charging cable are consistent with those equipped with this power station and check whether there is an open circuit. When charging, the AC output socket should not be plugged into the load, otherwise, it cannot start charging. 	
Unable to charge and connect with the main	Check the main display battery information column to confirm whether the expansion of the battery online connection is successful. If the battery status is outlined, then it proves that the communication is not connected successfully. The battery cannot be charged at this time. Check whether the connecting cable and socket is damaged.	
Unable to successfully connect to main communication	 The power switch of the expandable battery pack should be on. Expansion battery pack specification model and parameters should be the same as that of the main battery; Check whether the cable plug of the expandable battery is fully inserted into the expandable socket. Measure whether the expandable line is in an open circuit. 	
Why does the output shut down when the battery power is put to 10%	The product is set to turn off the output when the battery power is ≤10%. The purpose of function is to protect the battery cell from over-discharging. When this phenomenon of the battery should be charged immediately.	