



ASSEMBLY INSTRUCTIONS


Remove all items from the carton. Verify all pieces before assembly.


PARTS LIST

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	7	1	Backrest Screw	13	2	Arm Width Adjustment
2	1	Base	8	1	Seat	13		Knob + Washers
3	1	Seat Post	9	1	Mechanism	14	1	Backrest Tight Bolt
4	1	Seat Post Cover	10	6	Mechanism Screw	15	1	Backrest Post Bellow
5	1	Backrest	11	2	Arm Bracket	16	1	M5 Size Allen Wrench
6	1	Backrest Post	12	2	Armrest		•	

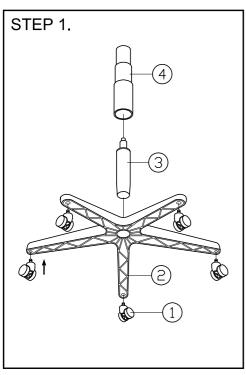


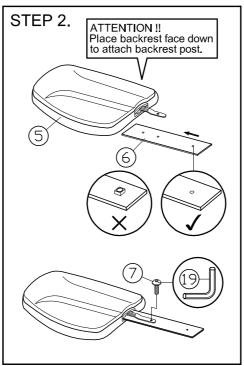

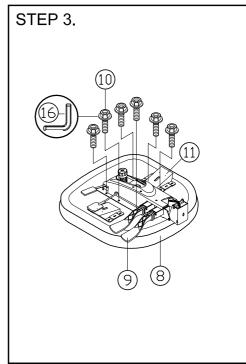

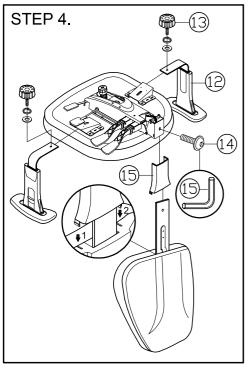



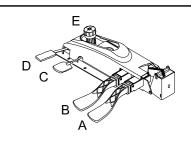

MECHANISM INSTRUCTIONS:

- (A) Back angle adjustment lever.
- (B) Combination seat / back angle adjustment lever with infinite lock.
- (C) Seat height adjustment lever.
- (D) Forward tilt lever
 - *While seated, lift lever B and then lean back to activate locking mechanism;
 - *Pull lever D backward to allow seat to tilt forward- or -push lever D forward to straighten seat.
 - *To lock in desired position, push lever B downward.
- (E) Tension control knob-Turn colockwise to increase tension and counterclockwise to decrease tension.

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME. DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER. DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT. DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES. DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS
- ARE TIGHTENED.

 EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS. DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING IT MAY CAUSE SUFFOCATION. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

- NOTE:SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.