



Laptop and Tablet Charging Cabinets

Please read entire manual carefully prior to assembly and use.

If there are any additional questions, contact Global Industrial Customer Service at 1-800-645-2986 or visit www.globalindustrial.com.



Model# 670051
16-Device Charging Cabinet



Model# 670052
32-Device Charging Cart

WARNING - For commercial use only. Read all instructions before assembly and use. Save these instructions for future reference.

DANGER - RISK OF ELECTRIC SHOCK

- Always unplug unit before cleaning.
- Connect this cart to a properly grounded outlet only. See Grounding Instructions (pg. 2).

WARNING - To reduce the risk of burns, fire, electric shock, or injury

- Unplug from outlet before putting on or taking off parts.
- Close supervision is necessary when being use by, or near children, invalids, or disabled persons.
- Use this charging cart only for its intended use as described in these instructions. Do not use attachments not recommended by Global Industrial.
- Never operate if there is a damaged cord or plug. Do not operate if the unit is not working properly, has been dropped or damaged, or has been dropped in water. Bring the charging cart to an authorized service center for examination and repair.

- Keep the cord away from heated surfaces.
- Do not operate if the air openings are blocked. Keep the air openings free of lint, hair, etc.
- Never drop or insert any object into any of the openings.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- To prevent the possibility of tipping, always put heavier items at the bottom of the cart and not near the top.
- If the unit has more than one power supply, ensure all power cords are unplugged before transporting, testing, or repairing.

WARNING - RISK OF INJURY

- Do not place or use this charging cart to support video equipment such as televisions or computer monitors on the surface of the unit.
- Do not allow anyone to sit, stand, or climb on the cart.




CAUTION - SHOCK HAZARD

Disconnect all Power Sources

GROUNDING INSTRUCTIONS

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in the below sketch. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

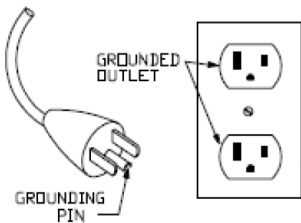

TECHNICAL INFORMATION

Model	670051
Product Dimensions	30"W x 18"D x 20"H
Product Weight	40 lbs.
Slot Quantity	16
Slot Dimensions	1-5/8"W x 16-5/16"D x 12"H
Outlet Type	AC
Number Of Outlets	16
Power	(1) 16-Outlet Power Strip
Voltage	120V, 12A
Cord Length	6 ft.

Model	670052
Product Dimensions	34"W x 18"D x 45"H
Product Weight	90 lbs.
Slot Quantity	32
Slot Dimensions	1-5/8"W x 16-5/16"D x 12"H
Outlet Type	AC
Number Of Outlets	32
Power	(2) 16-Outlet Power Strip
Voltage	120V, 12A
Cord Length	6 ft.


ASSEMBLY INSTRUCTIONS


Note: The socket outlet to which a power cord is plugged must be easily accessible after the product is installed in place.





CONTENTS					
REF.	QTY.	DESCRIPTION	REF.	QTY.	DESCRIPTION
1	1	RIGHT SIDE PANEL	H1	14	#5 x 12mm Lg. Phillips Pan Head Screw
2	1	BACK PANEL	H2	2	Socket Support
3	1	LEFT SIDE PANEL	H3	4	M4 x 10mm Lg. Phillips Countersink Screw
4	1	TOP PANEL	H4	4	M8 x 1.25 x 20mm Lg. Phillips Pan Head Screw
5	1	16 OUTLET POWER STRIP	H5	4	Lock Washer
6	1	BOTTOM PANEL	H6	4	Plain Washer
7	17	DIVIDER	H7	4	M8 x 1.25 x 20mm Lg. Thumb Screw
8	9	TRAY DIVIDER	H8	4	Tray Support Bracket
9	1	TRAY	H9	10	#4 x 10mm Lg. Phillips Pan Head Screw
10	1	RIGHT DOOR PANEL	H10	(1 Set)	Key
11	1	LEFT DOOR PANEL			


Note:

     Step 1 through 7 unit assembles in the upside down position.

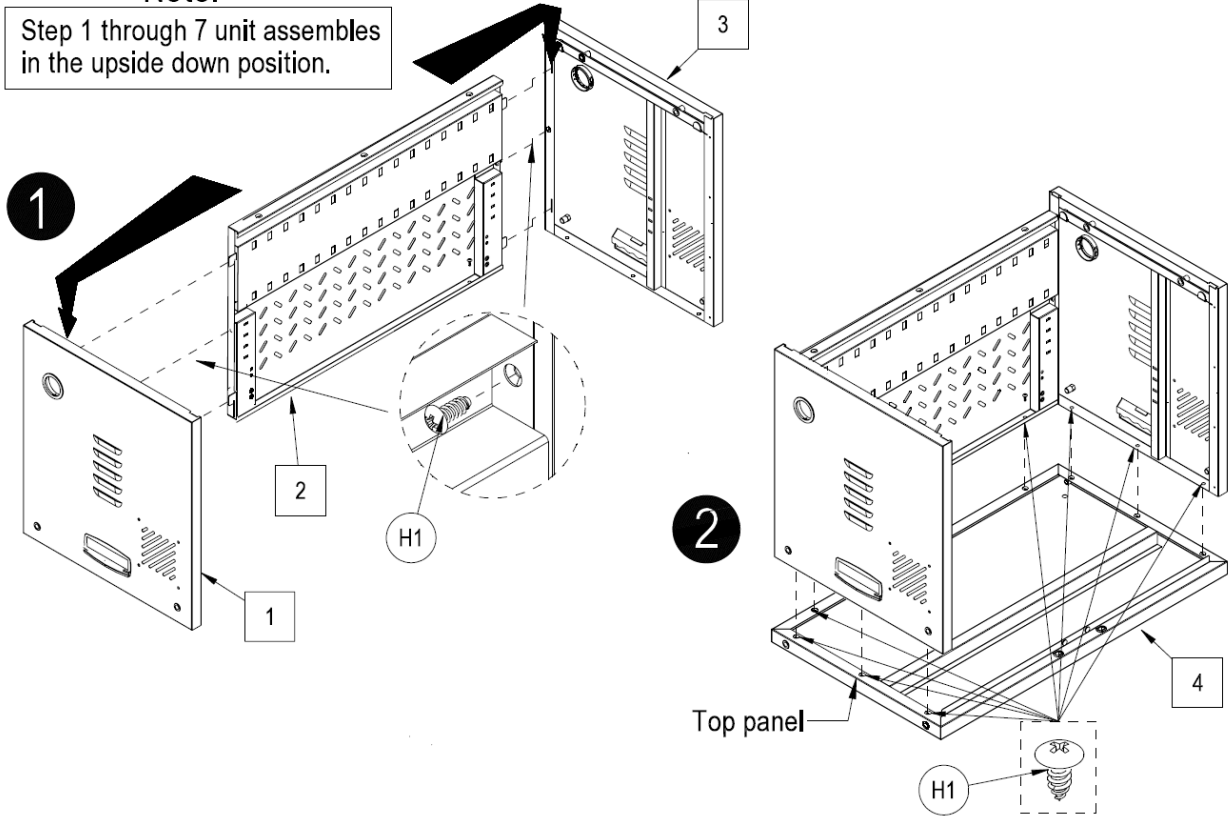


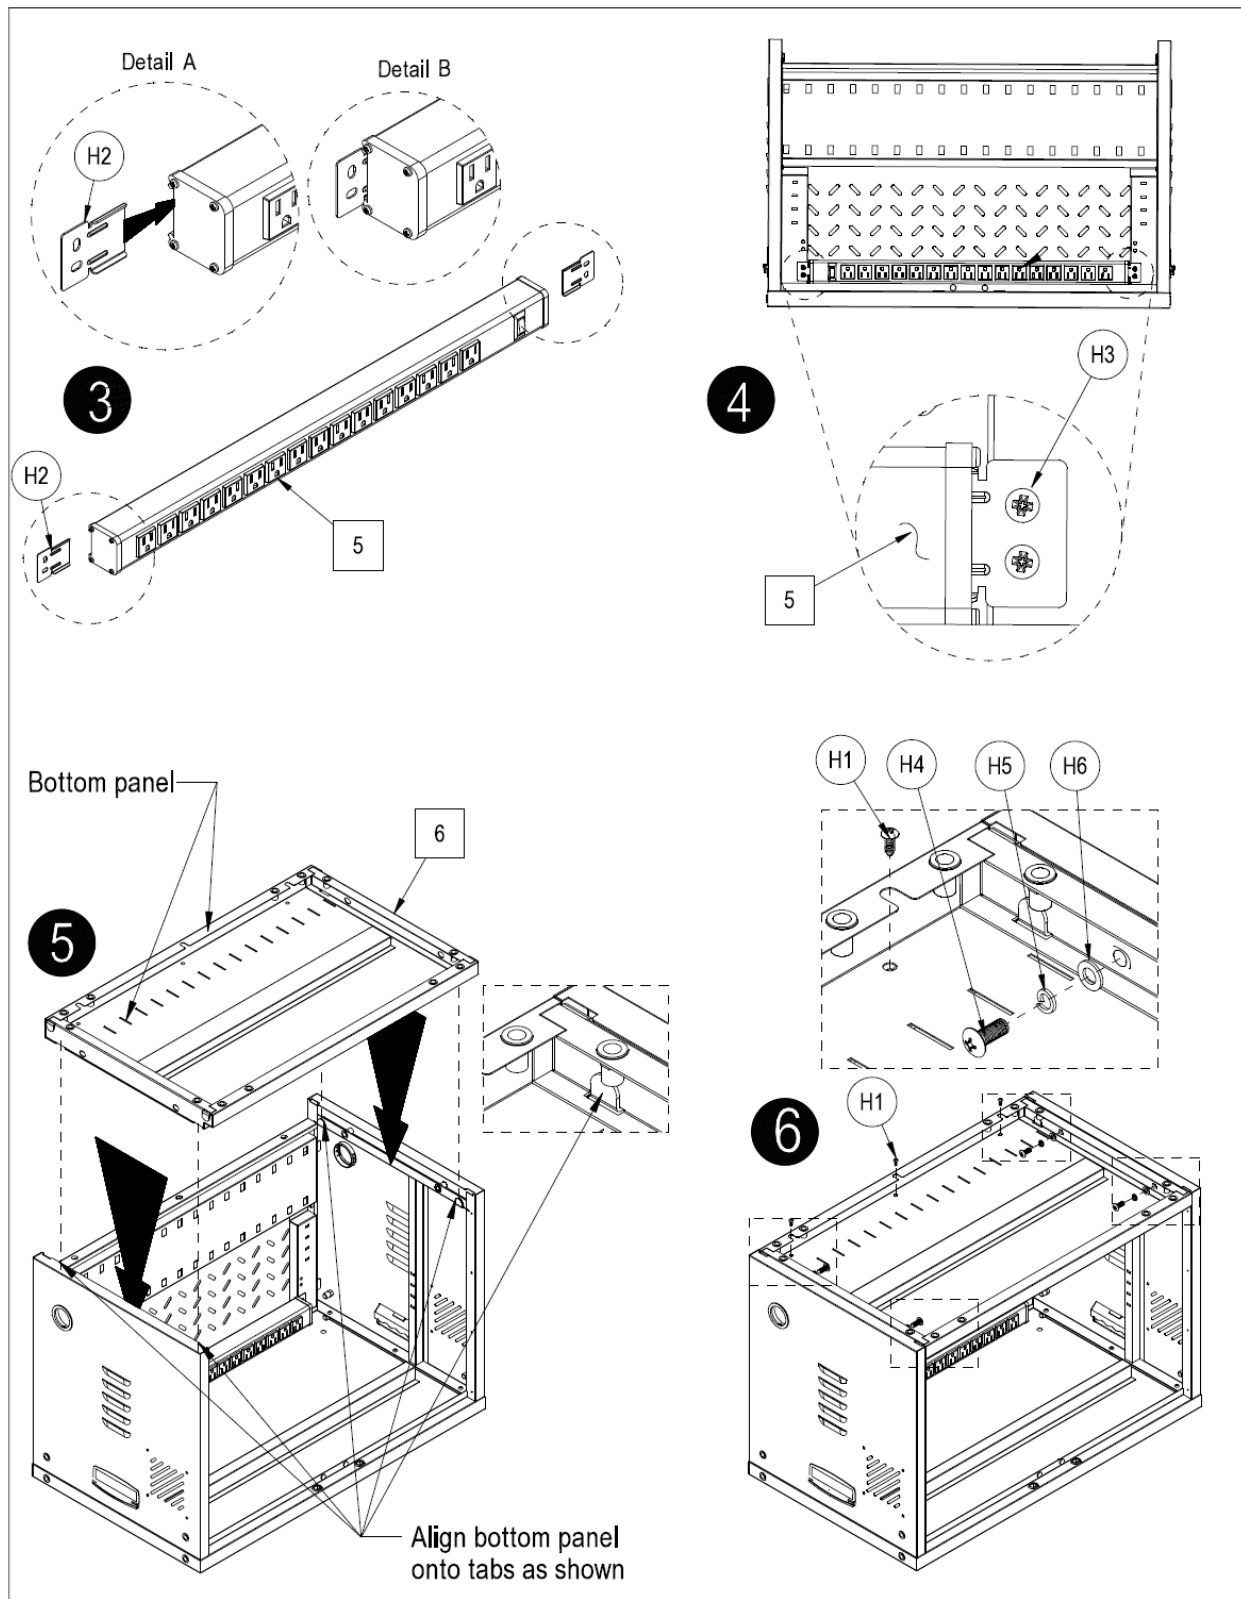


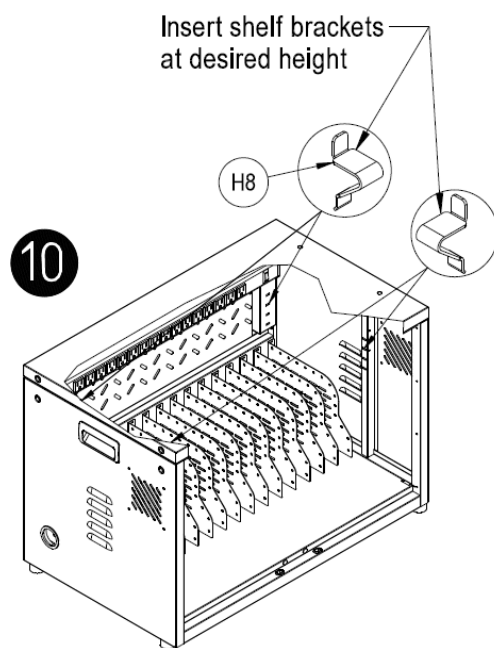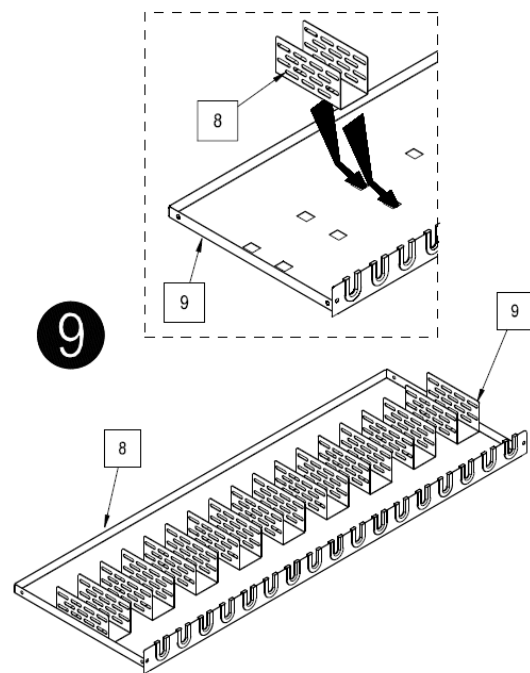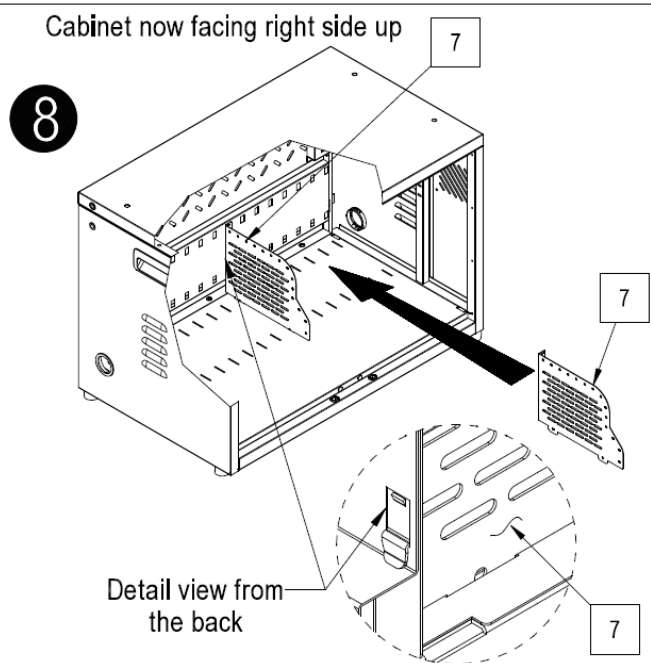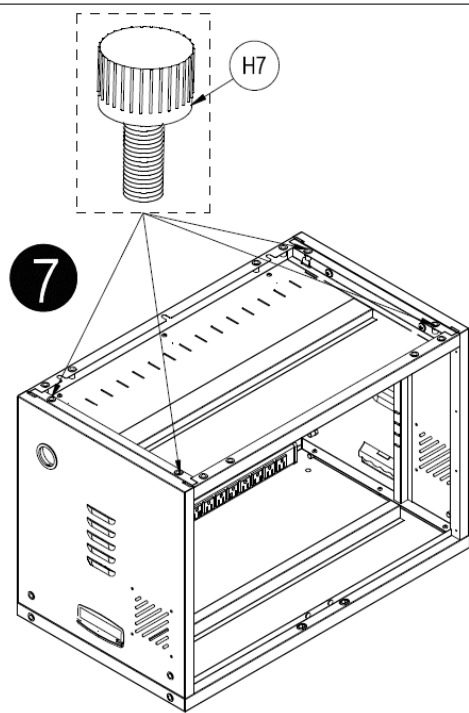


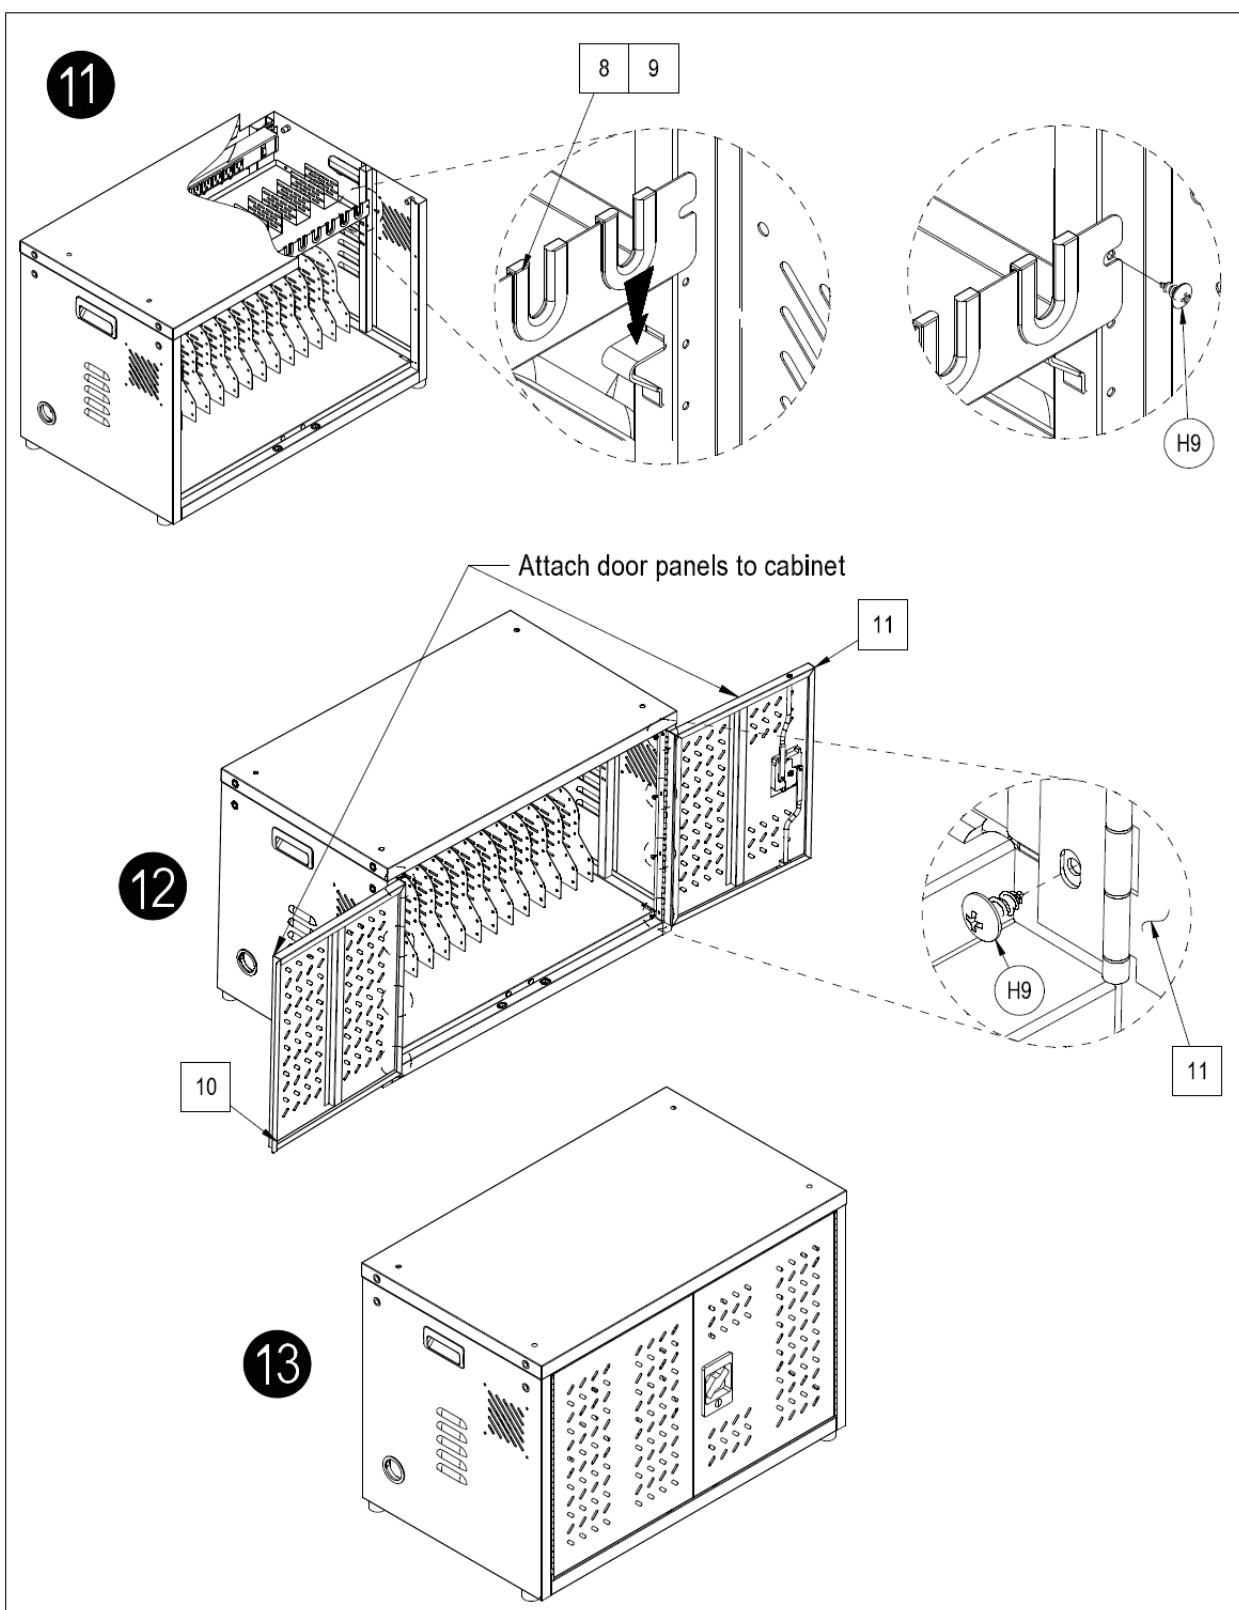


Optional Handle and caster kit Model 670049

CONTENTS		
REF.	QTY.	DESCRIPTION
1	2	Swivel locking caster
2	2	Caster channel
3	2	Rigid caster
4	1	Handle
H1	16	M8 x 1,25 x 20mm Lg. Phillips Pan Head Screw
H2	20	M8 Lock Washer
H3	4	M8 Plain Washer
H4	4	M8 x 1,25 x 16mm Lg. Hex Socket Head Screw
H5	1	6mm Hex Key
H6	8	M5 x 20mm Phillips Pan Head Screw
H7	4	Corner Bumper

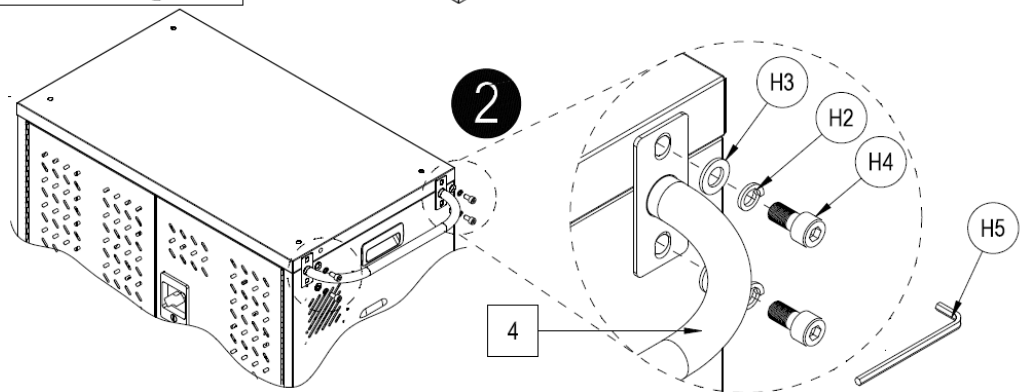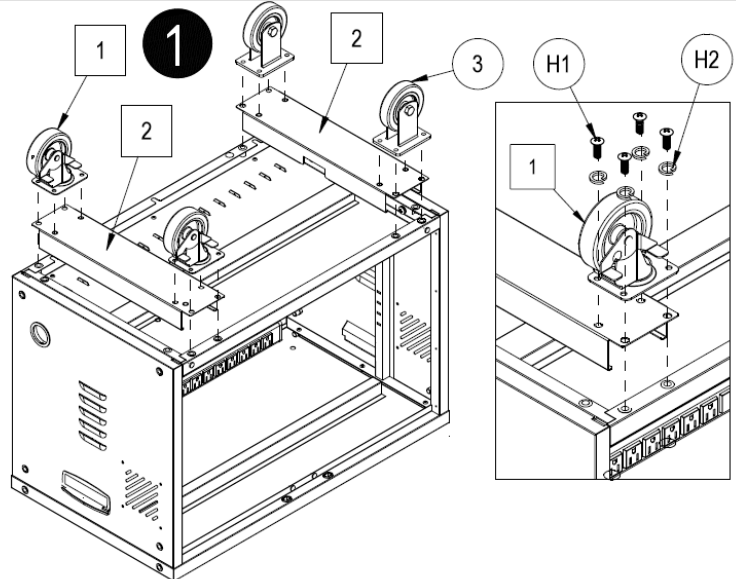  

stacking (2) cabinets

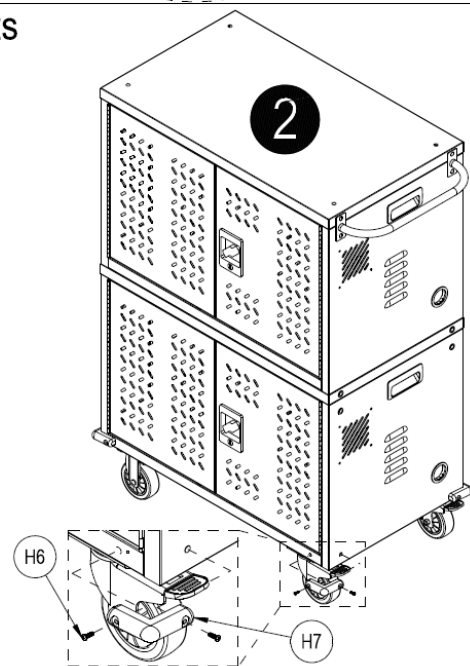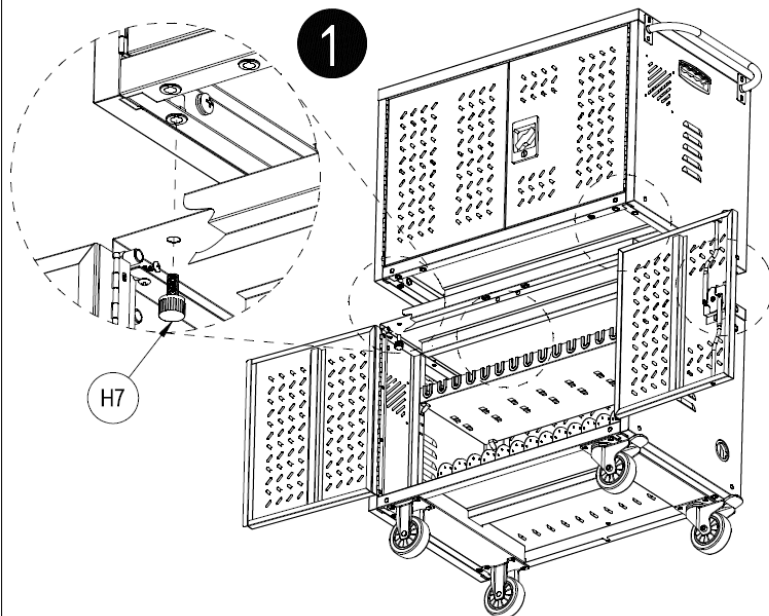  

OPERATING

This charging cart stores, secures, charges and transports (for model 670052) laptop or Chromebook™ computers as well as E-readers, Android tablets, iPads® and more.

1. Open front doors and locate the power strip on the top of the rear inside panel.
2. Plug the device's adapter into the power strip.
3. Route each adapter cord through the top shelf groove and plug into device below.
4. Place and charge up to 16 devices to the cart at a time (32 for model 670052).

- **Note:** Allow additional space required for the power adapters, power cords and protruding power plugs from the devices.
- **Note:** If the circuit breaker trips; press the reset button on the power strip.

MAINTENANCE

All power cords must be unplugged before cleaning. Inspect for damage, dirt and debris on a regular basis. It is recommended that any cleaning solution be tested on a small, inconspicuous area of the cart, to ensure it does not harm the surface. Do not use steel wool, scouring pads or other abrasive materials that may damage the surface finish.

WARNING - To avoid risk of electric shock, do not expose electrical components to water, cleaning solutions or other potentially corrosive liquids or substances. Do not immerse in liquid or allow liquids to flow into the cart or its components. Wipe all cleaners from the carts surface using a damp cloth. Dry the surface thoroughly after cleaning. Do not use flammable cleaners.

CAUTION - DO NOT attempt to modify, service, or replace any part of this charging cart. Call 1-800-645-2986 or visit www.globalindustrial.com for customer service assistance, or bring to an authorized service center for examination and repair.

TRANSPORTING AND STORING

Note: Transporting refers to model 670052 with casters.

Before moving, unplug and secure all power cords, close and lock doors, remove any items from the top of the surface, unlock the casters and push slowly and carefully.

WARNING - RISK OF INJURY

- Do not move over uneven or irregular surfaces.
- Do not allow children to move.
- Lock the casters after moving.

- Do not park unit in areas of heavy traffic.
- Do not run power cords across hallways, classrooms, or other areas where they will be walked on.
- Do not leave unit unattended in areas where children have access.
- Keep doors closed and locked whenever unit is unattended or parked.
- Keep casters locked whenever the unit is unattended.