

## Mobile Charging Cart

Please read entire manual carefully prior to assembly and use.

If there are any additional questions, contact Global Industrial Customer Service at 1-800-645-2986 or visit [www.globalindustrial.com](http://www.globalindustrial.com).



**Model# 985748**

Mobile Storage & Charging Cart  
for 12 Laptops/Tablets

**WARNING** - For commercial use only. Read all instructions before assembly and use. Save these instructions for future reference.

### **DANGER** - RISK OF ELECTRIC SHOCK

- Always unplug unit before cleaning.
- Connect this cart to a properly grounded outlet only. See Grounding Instructions (pg. 2).

### **WARNING** - To reduce the risk of burns, fire, electric shock, or injury

- Unplug from outlet before putting on or taking off parts.
- Close supervision is necessary when being use by, or near children, invalids, or disabled persons.
- Use this charging cart only for its intended use as described in these instructions. Do not use attachments not recommended by Global Industrial.
- Never operate if there is a damaged cord or plug. Do not operate if the unit is not working properly, has been dropped or damaged, or has been dropped in water. Bring the charging cart to an authorized service center for examination and repair.

- Keep the cord away from heated surfaces.
- Do not operate if the air openings are blocked. Keep the air openings free of lint, hair, etc.
- Never drop or insert any object into any of the openings.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- To prevent the possibility of tipping, always put heavier items at the bottom of the cart and not near the top.
- If the unit has more than one power supply, ensure all power cords are unplugged before transporting, testing, or repairing.

## WARNING - RISK OF INJURY

- Do not place or use this charging cart to support video equipment such as televisions or computer monitors on the surface of the unit.
- Do not allow anyone to sit, stand, or climb on the cart.




## CAUTION - SHOCK HAZARD

Disconnect all Power Sources

## GROUNDING INSTRUCTIONS

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in the below sketch. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

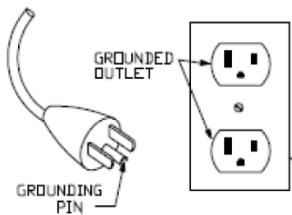


## TECHNICAL INFORMATION


<b>Model</b>	985748
<b>Product Dimensions</b>	24"W x 21"D x 40"H
<b>Product Weight</b>	100 lbs.
<b>Shelf Quantity</b>	7
<b>Shelf Dimensions</b>	23"W x 16"D
<b>Shelf Clearance</b>	3"
<b>Outlet Type</b>	AC
<b>Number Of Outlets</b>	12
<b>Power</b>	UL/cUL Listed 12-Outlet Power Strip
<b>Voltage</b>	120V, 12A
<b>Cord Length</b>	6 ft.

# ASSEMBLY INSTRUCTIONS

**Note:** The socket outlet to which a power cord is plugged must be easily accessible after the product is installed in place.

CONTENTS					
REF.	QTY	DESCRIPTION	REF.	QTY	DESCRIPTION
1	1	LEFT SIDE PANEL	H5	2	Rigid Caster
2	1	LEFT SIDE BACK PANEL	H6	2	Swivel Caster
3	1	RIGHT SIDE BACK PANEL	H7	18	#8 Screw
4	1	RIGHT SIDE PANEL	H8	4	M8 x 1.25 Socket Head Screw (Black)
5	1	TOP	H9	4	Split Washer (Black)
6	1	BOTTOM	H10	4	Plain Washer (Black)
7	1	BACK DOOR	H11	28	Shelf Clip
8	1	LEFT SIDE FRONT DOOR	H12	8	M5 x 20mm Lg. Pan Head Screw
9	1	RIGHT SIDE FRONT DOOR	H13	4	Corner Bumper
10	1	HANDLE			
11	7	SHELF			
H1	14	M6 x 12mm Lg. Screw			
H2	20	M8 x 1.25 x 24mm Lg. Screw			
H3	20	Split Washer			
H4	20	Plain Washer			

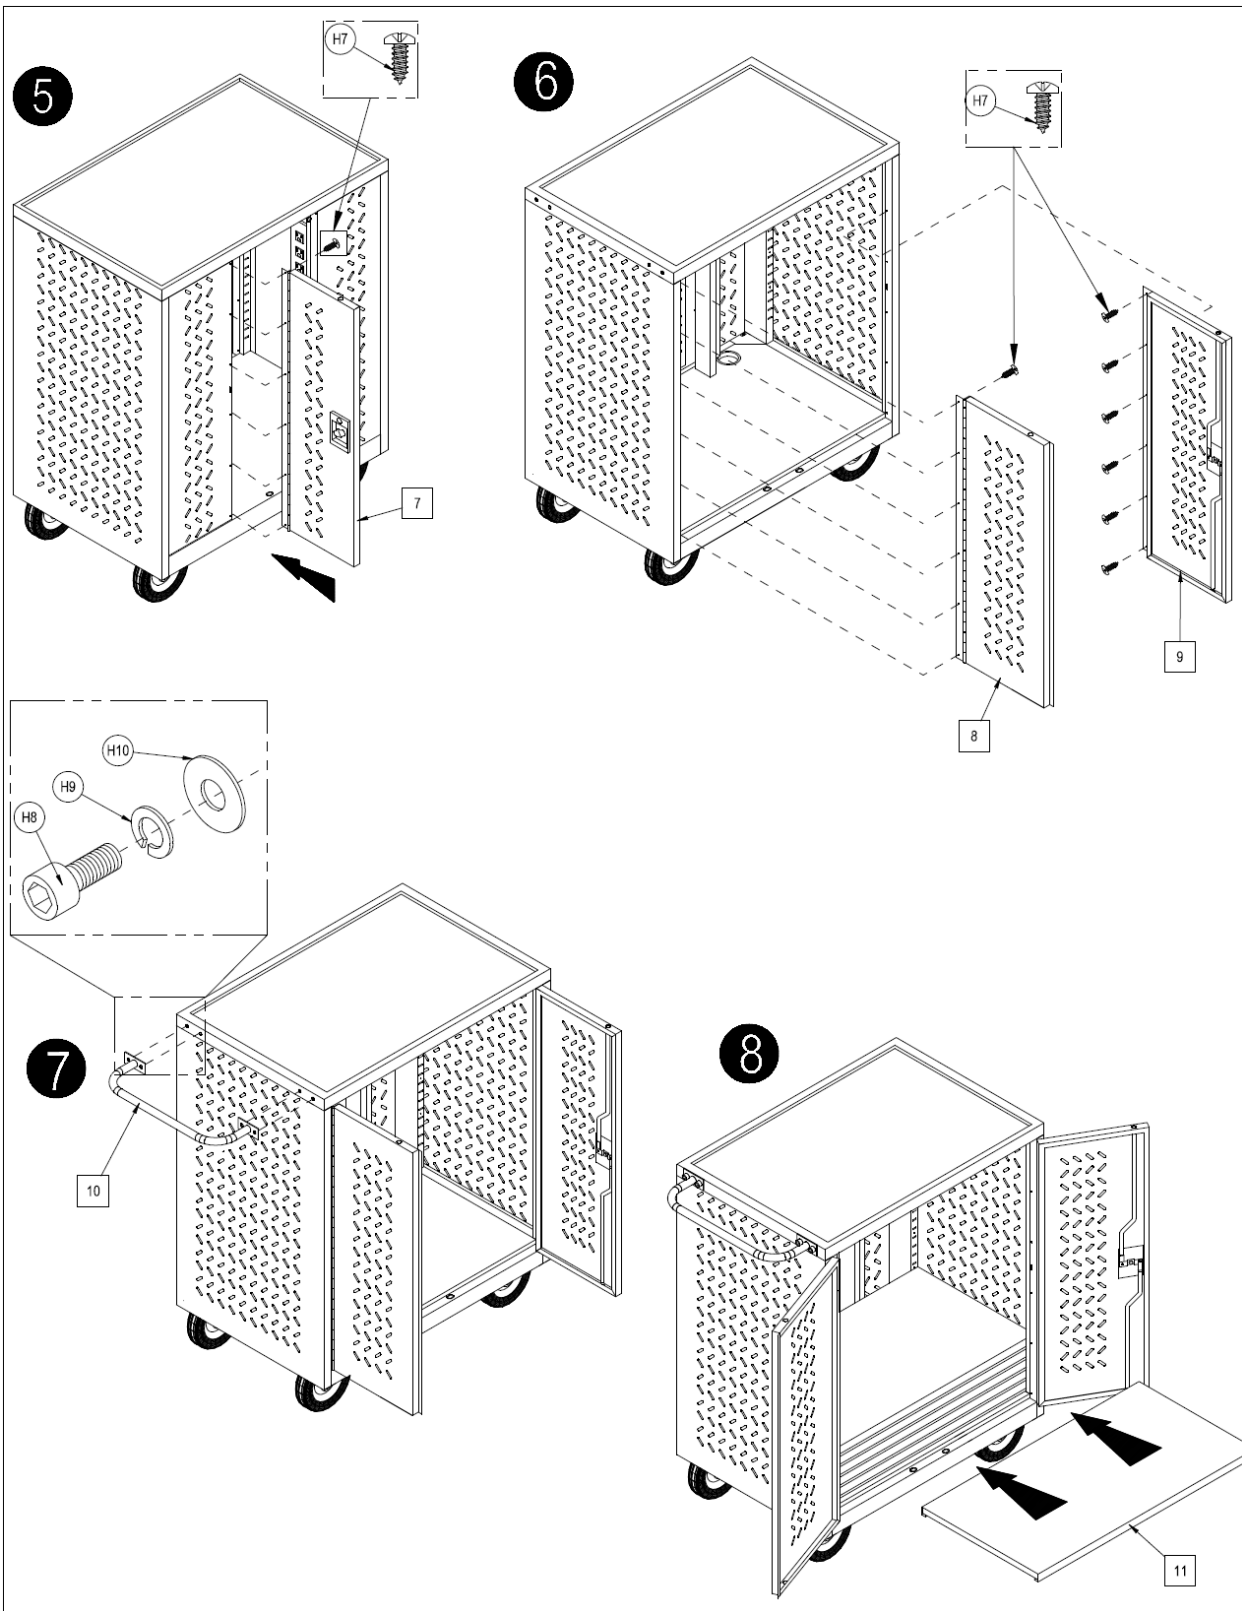

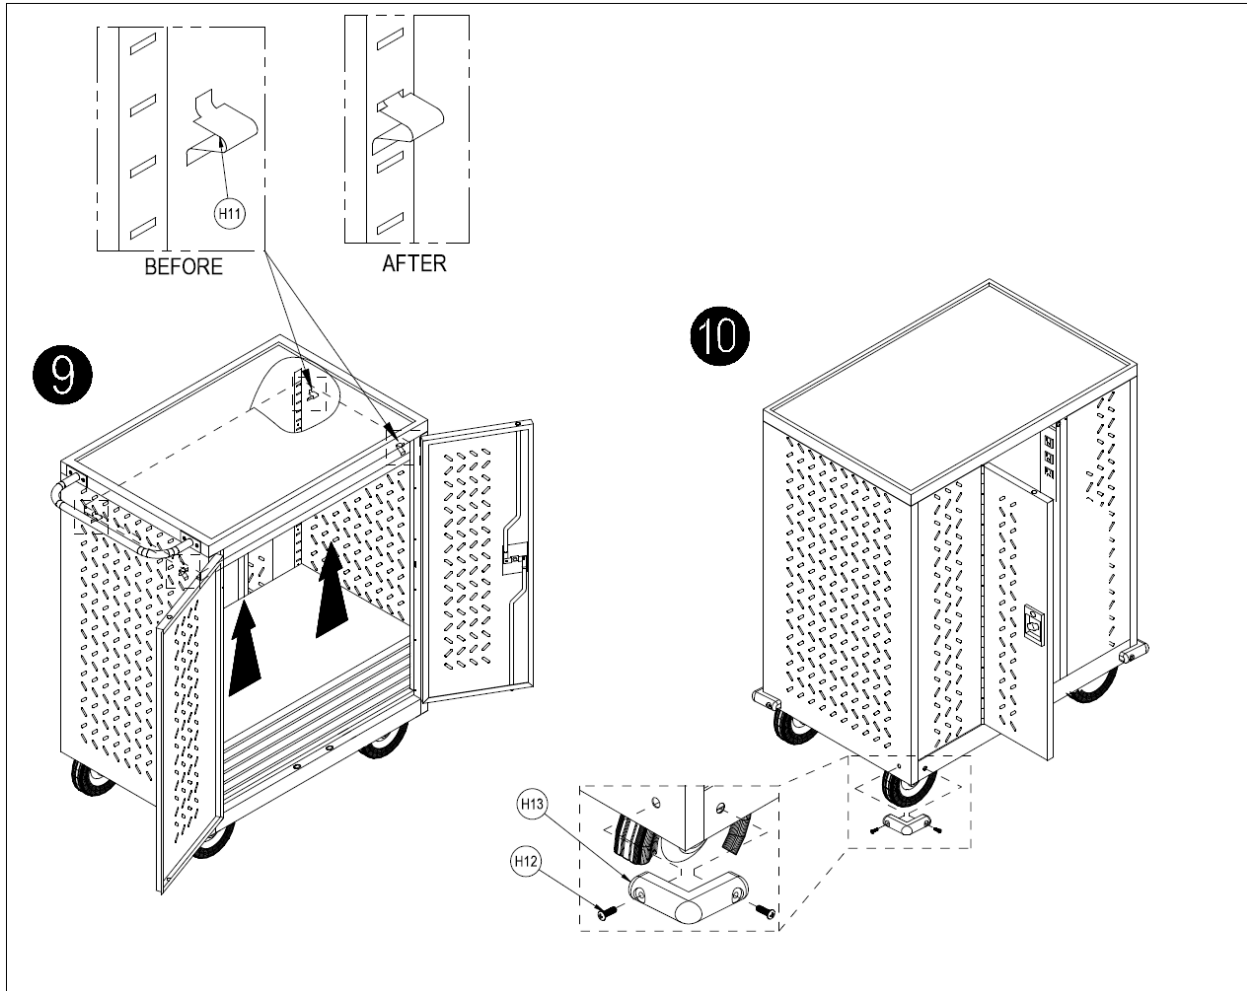

## OPERATING

This charging cart stores, secures, charges and transports up to 12 widescreen laptop or Chromebook™ computers as well as E-readers, Android tablets, iPads® and more.

1. Open the cart's rear door.
2. Plug the device's adapter into the power strip.
3. Route each cord over to each device and plug in.
4. Place and charge up to 12 devices to the cart at a time.

- **Note:** Allow additional space required for the power adapters, power cords and protruding power plugs from the devices.
- **Note:** If the circuit breaker trips; press the reset button on the power strip.

## **MAINTENANCE**

All power cords must be unplugged before cleaning. Inspect for damage, dirt and debris on a regular basis. It is recommended that any cleaning solution be tested on a small, inconspicuous area of the cart, to ensure it does not harm the surface. Do not use steel wool, scouring pads or other abrasive materials that may damage the surface finish.

**WARNING** - To avoid risk of electric shock, do not expose electrical components to water, cleaning solutions or other potentially corrosive liquids or substances. Do not immerse in liquid or allow liquids to flow into the cart or its components. Wipe all cleaners from the carts surface using a damp cloth. Dry the surface thoroughly after cleaning. Do not use flammable cleaners.

**CAUTION** - DO NOT attempt to modify, service, or replace any part of this charging cart. Call 1-800-645-2986 or visit [www.globalindustrial.com](http://www.globalindustrial.com) for customer service assistance, or bring to an authorized service center for examination and repair.

## **TRANSPORTING AND STORING**

Before moving, unplug and secure all power cords, close and lock doors, remove any items from the top of the surface, unlock the casters and push slowly and carefully.

## **WARNING** - RISK OF INJURY

- Do not move over uneven or irregular surfaces.
- Do not allow children to move.
- Lock the casters after moving.
- Do not park unit in areas of heavy traffic.
- Do not run power cords across hallways, classrooms, or other areas where they will be walked on.
- Do not leave unit unattended in areas where children have access.
- Keep doors closed and locked whenever unit is unattended or parked.
- Keep casters locked whenever the unit is unattended.