

PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

Pack-Master Product Manual



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

Pack-Master Manual / 1258.0420

PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
Pack-Master Manual / 1258.0420

PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!






TABLE OF CONTENTS

Precautionary Warning.....	Page 1
Assembly.....	Page 2
Jack Breakdown.....	Page 3
Operation.....	Page 4
Parts List.....	Page 5
Warranty.....	Page 6

Thank you! And Congratulations on your purchase of the Pack-Master industrial trash compactor.

Please take some time to read over the instructions and make sure you have all the necessary parts before assembling. Once assembled, you will have an efficient tool to reduce waste volume for many years.

Please check the serial number on your unit. This Manual is for units with serial number 1024051 and above only. For units with serial numbers below 1024051, please contact Newstripe for the correct manual.

	
  	<p>PRECAUTIONARY WARNINGS!</p> <ul style="list-style-type: none">• Please read and understand <u>all</u> operation instructions as detailed in this manual. Failure to follow specified instructions may result in equipment damage or serious injury to personnel.• The Pack-Master is not designed for crushing of glass containers or items that may shatter or contain volatile vapors.• Keep compacted waste drums away from heat, sparks and flame – No smoking.• Always consult your Facility Safety and/or Personnel Department for specified safety protocols prior to operating this equipment.
	



PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

Your Pack-Master Manual will arrive in 1 box and include these parts:


Box:

- Ram Plate with 2 ½" Bolt & Nylock Nut
- Base Plate
- Jack Assembly
- Left Upright,
- Right Upright

Parts Bag Containing:

- 4 – ½" x 1 ½" Long Bolts
- 1 – ½" x 3 ½" Long Bolt
- 1 – ½" x 4 ½" Long Bolt
- 6 – ½" Nylock Nuts
- 12 – ½" Flat Washers
- Owner's Manual

ASSEMBLY

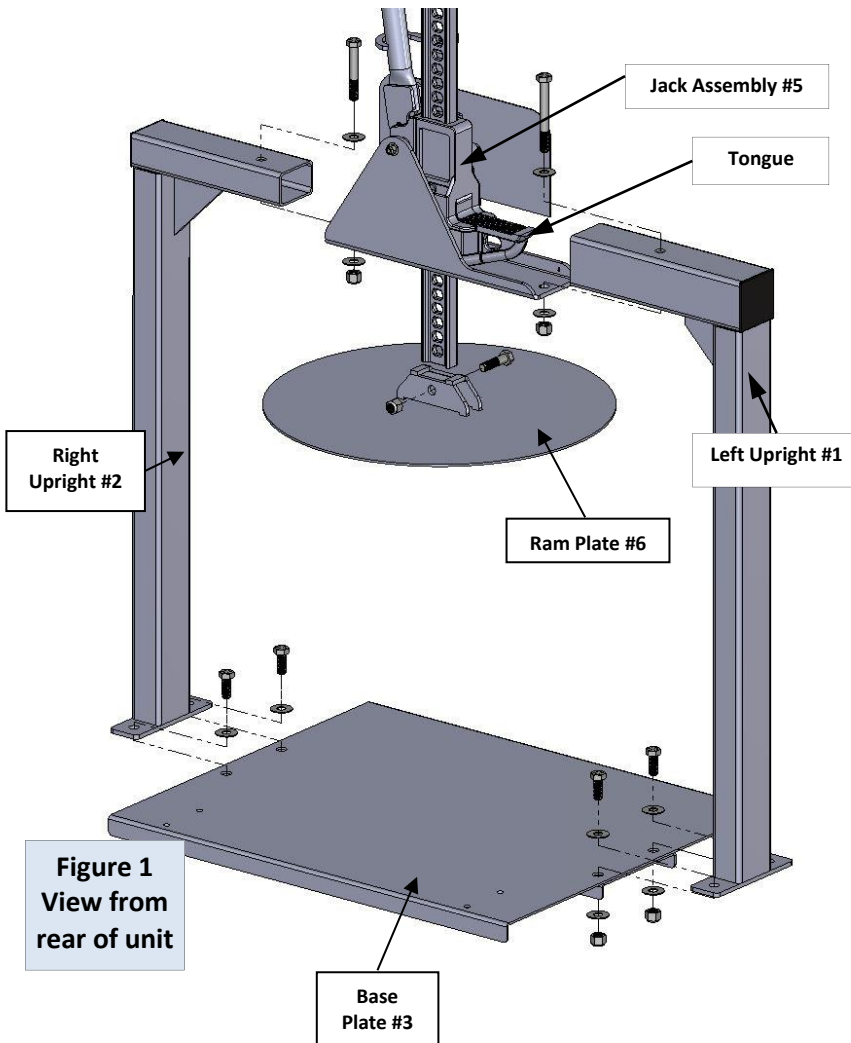

- 1) Mount left (#1) and right (#2) uprights to the base plate (#3) using 4, ½" x 1 ½" long bolts, 8 flat washers and 4 nylock nuts. (NOTE: Do not tighten bolts all the way, so the jack assembly can be installed).
- 2) Place control levers (#10 & #11) in the "UP" position and then remove the face plate from the jack assembly.
- 3) Insert the tongue of jack into left (uncapped) upright with Jack Mounting bracket, on UNDER SIDE of uprights. (See Assembly Instruction Detail) and assemble with a ½" x 3 ½" bolt on the right, and a ½" x 4 ½" long bolt on the left, 4 flat washers and 2 nylock nuts.
- 4) Align the uprights and ram assembly and tighten all bolts. Install the face plate back onto the jack assembly.
- 5) Mount the circular ram plate (#6) to the jack assembly (#5) using the ½" x 2 ½" bolt and nylock nut in the ram plate.



Front view showing components in correct position for final assembly.




1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

Pack-Master Manual / 1258.0420

PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

JACK PAR

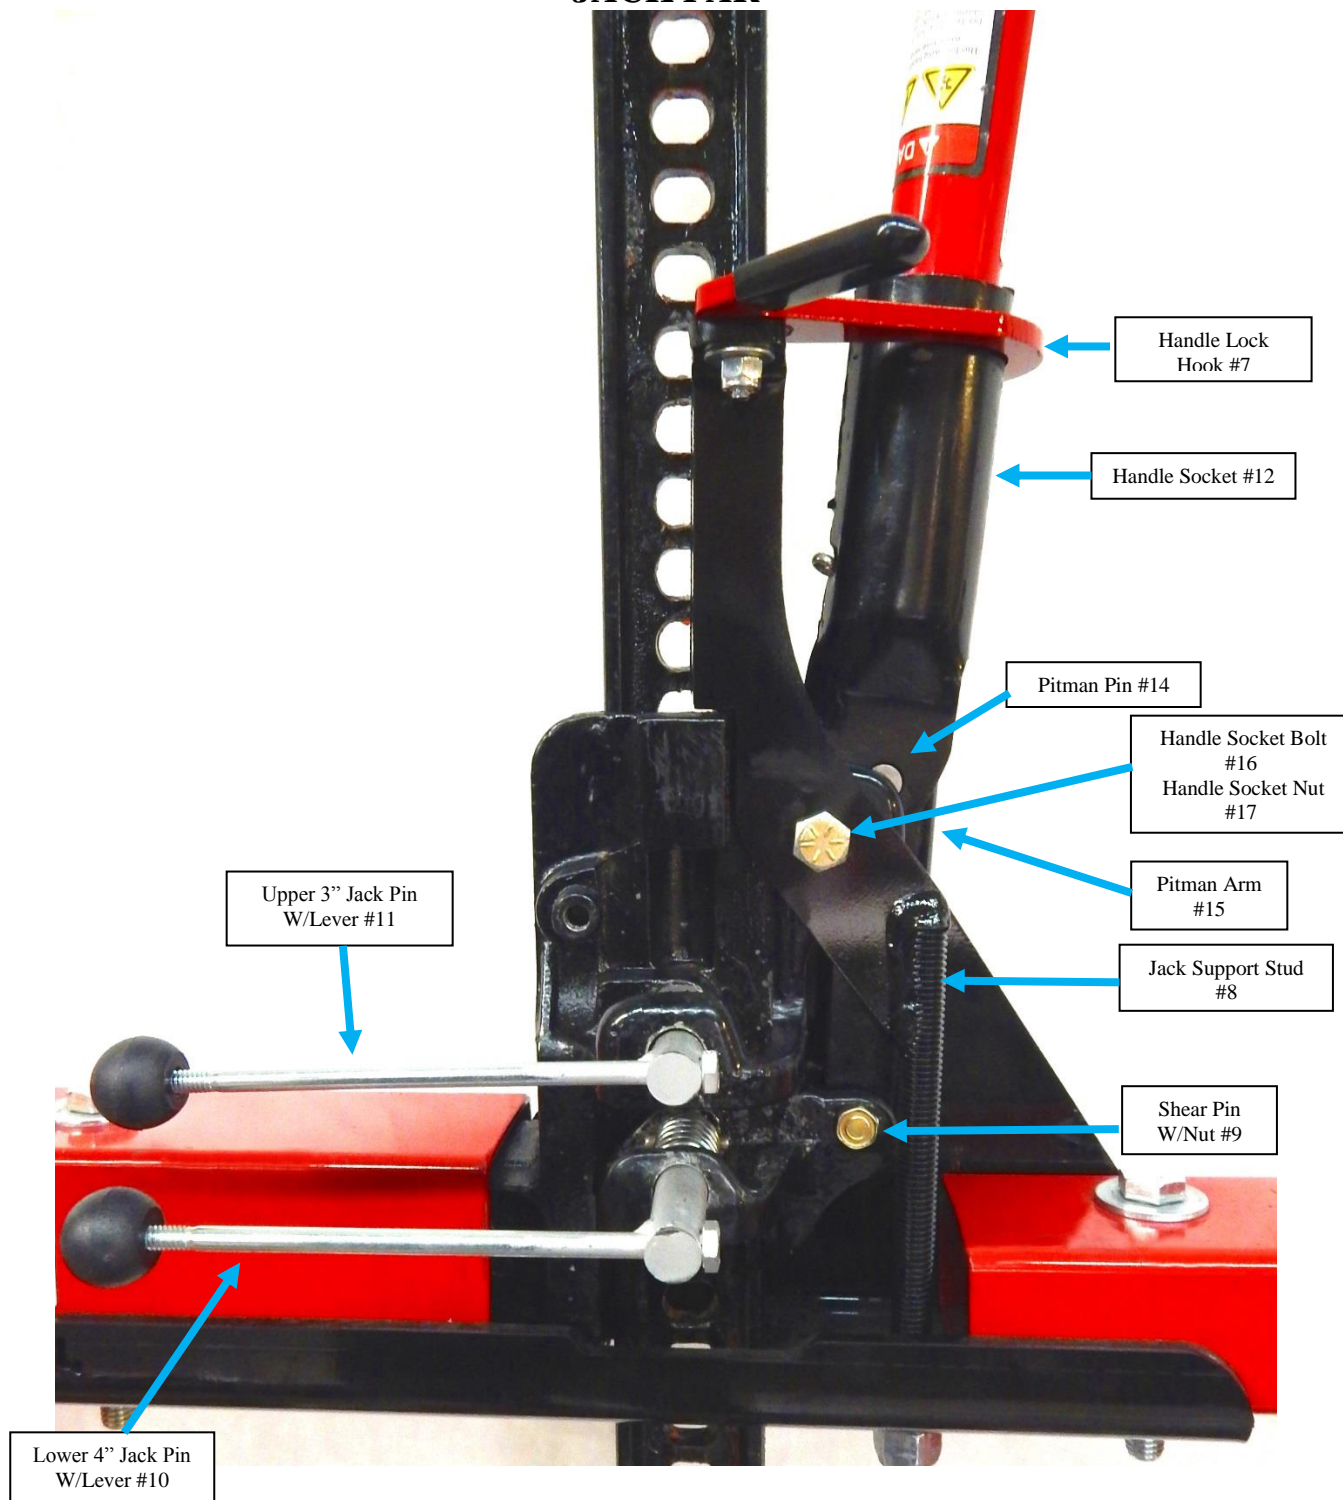

OPERATION




1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

Pack-Master Manual / 1258.0420

PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!


- 1) To operate the Pack-Master, engage the handle lock as shown.

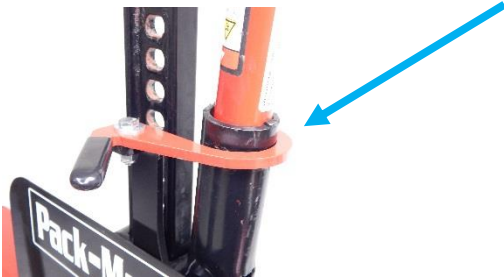

- 2) Swing the lower lever to the “DOWN” position first, and then the upper lever to the “DOWN” position.



- 3) Disengage the handle lock and then begin pumping the jack handle up and down.

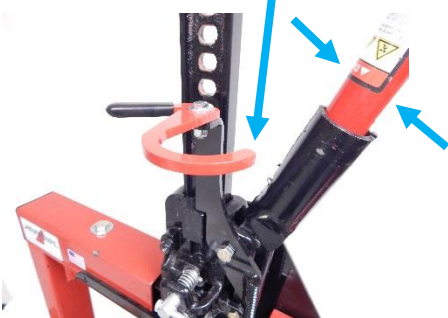

- 4) To retract the compactor plate, while applying slight downward pressure on jack handle, swing upper lever to “UP” position, then the lower lever. This removes pressure on the pin and will extend the life of the jacking pins.



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

Pack-Master Manual / 1258.0420

PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!



PRECAUTIONARY WARNINGS

- Failure to adhere to the following statements about unsafe practices may cause hazards that cause serious injury.
- The Pack-Master is not designed for crushing of glass containers or items that may shatter or contain volatile vapors.
- DO NOT extend or modify the handle in any way.
- DO NOT permanently bolt the Pack-Master to the floor as damage and breakage of ram assembly and personal injury may occur.
- ALWAYS hold on to the jack handle while compacting. Jack handle may “SPRING” up when under load and pins have not snapped all the way in to the jack rail.
- ALWAYS engage the handle lock when moving the levers, or the jack handle may fall suddenly, causing injury.
- ALWAYS keep your head out of the path of the jack handle!



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
Pack-Master Manual / 1258.0420


PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

PARTS LIST

Item	Description	Part #
1	Left Upright	10001425
2	Right Upright	10001426
3	Base Plate, Rev. B	10004752
4	Mounting Bracket, Rev. B	10001427
5	Jack Assembly	10001458
6	Ram Plate, Rev. B (20" Dia.)	10001428
Optional	Ram Plate, Rev. B (17" Dia.)	10001288
7	Handle Lock Hook	10000774
8	Jack Support Stud	10000773
9	Shear Pin w/Nut	10001096

Item	Description	Part #
10	4" Jack Pin w/lever (lower)	10001568
11	3" Jack Pin w/lever (upper)	10001567
12	Handle Socket	10001093
13	Spring, Jack Pins (Not Shown)	10001305
14	Pitman Pin	10001094
15	Pitman Arm	10001095
16	Handle Socket Bolt	10001287
17	Handle Socket Nut	10001286
18	Roll Pin, Jack Pins (Not Shown)	10001286
19	Jack Face Plate	10002570

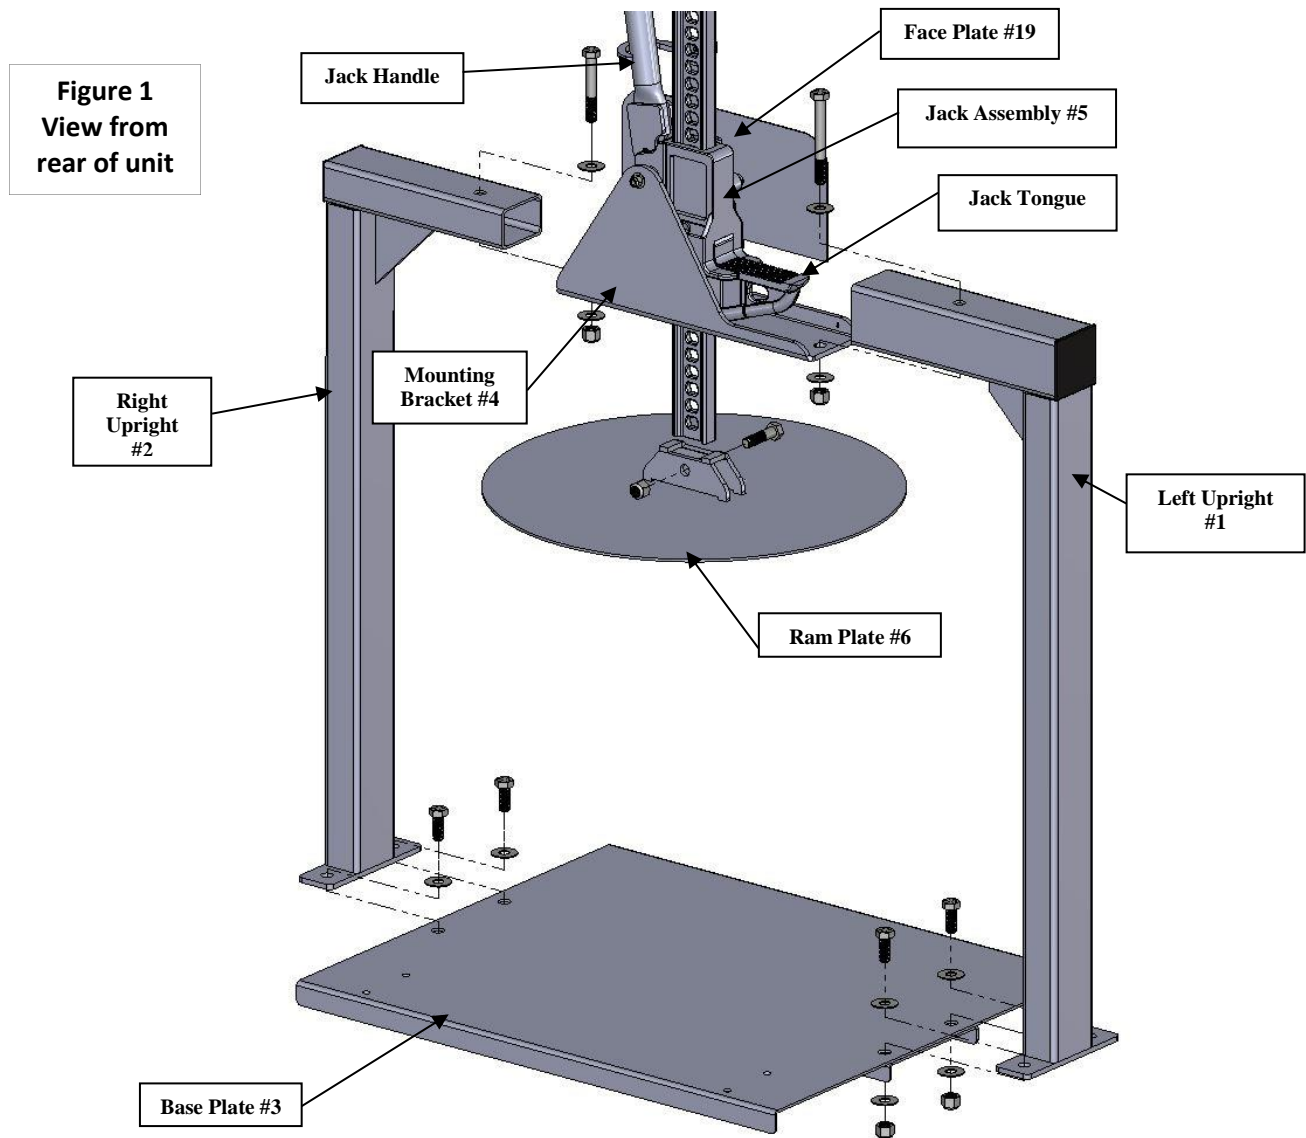

1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

Pack-Master Manual / 1258.0420

PACK-MASTER MANUAL

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

THE NEWSTRIPE WARRANTY – 18 MONTH

NEWSTRIPE, INC., WARRANTS TO THE ORIGINAL PURCHASER, FOR 18 (EIGHTEEN) MONTHS AFTER DATE OF PURCHASE, THAT THE EQUIPMENT* HEREBY SOLD SHALL BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP. THIS WARRANTY DOES NOT EXTEND TO ANY DAMAGE OR MALFUNCTION RESULTING FROM MISUSE, NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, OR NORMAL WEAR AND TEAR.

Damage incurred in shipment from Newstripe, Inc. to the customer is the total responsibility of the carrier. The CUSTOMER MUST NOTE DAMAGES on the Bill of Lading of Trucking Company or Railroad; and Newstripe, Inc. will furnish to the customer the cost of parts and labor. The customer can then bill the common carrier for the damages by placing his signature on the documents.

The Newstripe, Inc. obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacture without charge for 18 (Eighteen) months from date of purchase. For service under this warranty, buyer shall ship the defective part or parts of the equipment, transportation prepaid, to Newstripe, Inc. together with a written description of any claimed defect and proof of purchase date of the materials being returned. **Prior to retuning any part or machine, the CUSTOMER must obtain a Return Materials Authorization number. Call 1-800-624-6706. To review the complete guidelines for warranty and returns, please visit www.newstripe.com/guidelinesforwarrantyandreturn.**

***Gasoline engines, compressors, pumps (including airless) and Transaxles are furnished with their respective manufacturer's warranties only. Such components are not covered by any warranty of Newstripe, Inc. Where Newstripe elects to extend manufacturers' warranties, the warranty shall be pro-rated as to cover 100% of the cost to replace or repair materials and parts for the first 12 months of ownership and 60% for the remaining 6 month period.**

The responsibilities described above are the only responsibilities of Newstripe, Inc. under this written warranty or any implied warranty, and may be exercised only within 18 (Eighteen) months from the date of purchase. In no event shall Newstripe, Inc. be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty, not be responsible for work done, materials furnished or repairs made by others without its' specific written authorization.

THIS WARRANTY SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND THERE IS NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND WITH RESPECT TO THE GOODS SOLD HEREBY EXCEPT AS SET FORTH HEREIN. IT IS EXPRESSLY AGREED THAT THIS WARRANTY SHALL BE LIMITED TO THE ADJUSTMENT, REPAIR OR REPLACEMENT OF PARTS AND THE LABOR AND SERVICES REQUIRED THEREBY. IN NO EVENT, INCLUDING ANY CLAIM FOR NEGLIGENCE, SHALL NEWSTRIPE, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Sincerely,
Newstripe, Inc



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

Pack-Master Manual / 1258.0420