
 
 
 
 

 
 
 
 

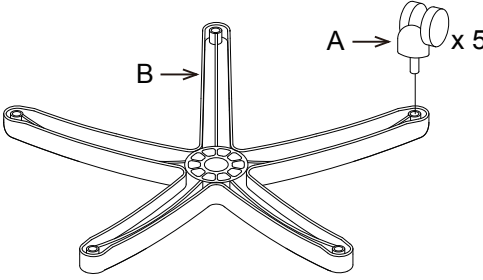


# ASSEMBLY INSTRUCTIONS


ITEM NO.: 695727

Part List			
Key	Description	Qty.	Part
A	CASTERS	5	
B	BASE	1	
C	SEAT CUSHION	1	
D	MECHANISM SCREWS D 1/4" x L 7/8"	4	
E	WASHERS	4	
F	BACKREST	1	
G	BACKREST SCREWS D 5/16" x L 5/8"	2	
H	MECHANISM	1	
I	GAS LIFT	1	
J	FOOT RING	1	
K	ALLEN WRENCH	1	


**Step 1**  
 Turn Base "B" upside down.  
 Insert Casters "A" into Base "B".




**Step 2**  
 Slide Gas Lift "I" through Footring "J" and into Base "B".

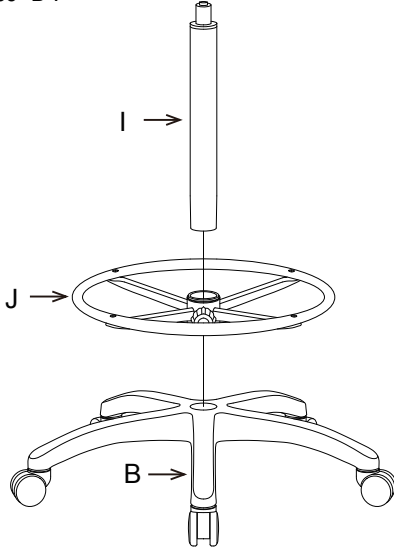


**Step 3**  
 Attach Mechanism "H" to Seat Cushion "C" with Mechanism Screws "D" and Washers "E".  
 NOTE: Fully tighten all screws.

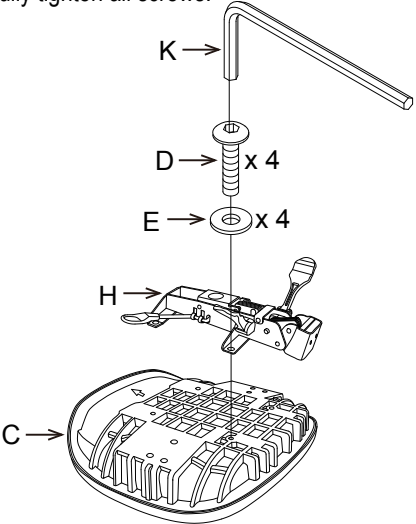

**Step 4**  
 Place seat assembly onto Gas Lift "I". Push firmly on the chair seat to securely attach seat assembly to seat post.

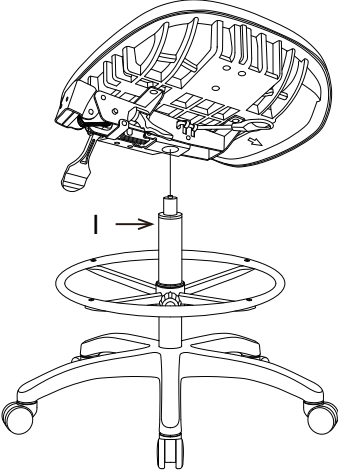

**Step 5**  
 Attach Backrest "F" to the rear of mechanism with Backrest Screws "G".  
 NOTE: Fully tighten all screws.

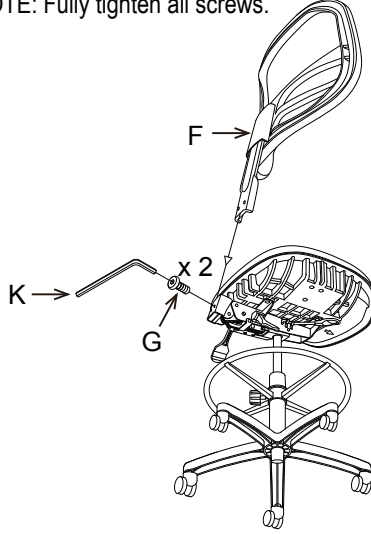


**ATTENTION: Make certain that all screws are fully tightened before using chair. Lubricate all moving parts and tighten all screws every 6 months or as needed.**

# CONTROL INSTRUCTIONS

ITEM NO.: 695727

**interion**<sup>®</sup>  
globalindustrial.com  
1.800.645.1232

## 1. SEAT TILT ADJUSTMENT

Lift handle (1) up for free float or push handle (1) down to lock.

## 2. SEAT HEIGHT ADJUSTMENT

To raise seat height, remove pressure from the seat and lift handle (2) up.  
To lower seat height, sit on the chair and lift handle (2) up.

## 3. BACK ANGLE ADJUSTMENT

Lift handle (3) up for free float or push handle (3) down to lock.

## 4. FOOT RING HEIGHT ADJUSTMENT

To adjust foot ring height, loosen the adjustment knob, adjust foot ring to desired height and then tighten the adjustment knob completely to secure foot ring into position.

