
 
 


 

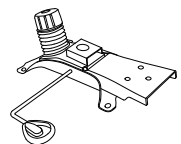
 

 





ASSEMBLY INSTRUCTIONS

ITEM NO.: 695729

Part List			
Key	Description	Qty.	Part
A	CASTERS	5	
B	BASE	1	
C	SEAT CUSHION	1	
D	RIGHT ARMREST	1	
E	LEFT ARMREST	1	
F	ARMREST SCREWS D 1/4" x L 1 1/8"	6	
G	FLAT WASHERS	6	
H	MECHANISM	1	
I	MECHANISM SCREWS D 5/16" x L 7/8"	4	
J	BACKREST	1	
K	BACKREST SCREWS D 5/16" x L 1 9/16"	3	
L	ALLEN WRENCH	1	
M	GAS LIFT	1	


Step 1

Turn Base "B" upside down.
Insert Casters "A" into Base "B".

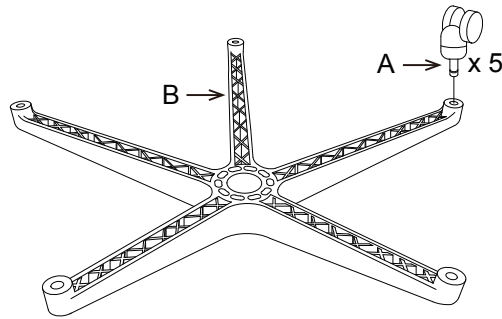


Step 2

Attach Right Armrest "D" to Seat Cushion "C" with Armrest Screws "F" and Flat Washers "G". Repeat for Left Armrest "E". NOTE: Arrows on armrests point to front of seat cushion and fully tighten all screws.

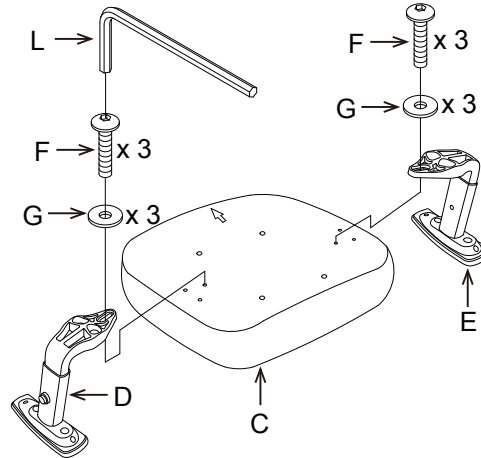


Step 3

Attach Mechanism "H" to Seat Cushion "C" with Mechanism Screws "I".
NOTE: Fully tighten all screws.

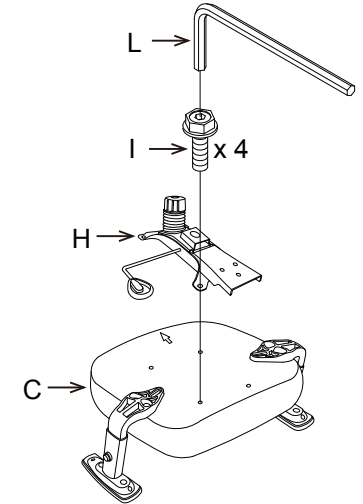


Step 4

Attach Backrest "J" to the rear of Mechanism "H" with Backrest Screws "K".
NOTE: Fully tighten all screws.

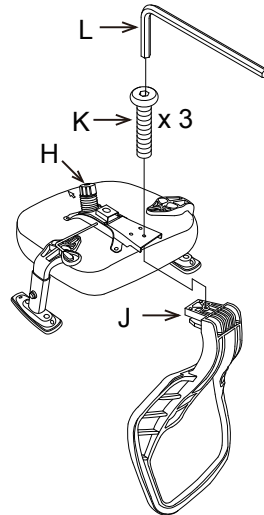


Step 5

Insert Gas Lift "M" into hole on Base "B".

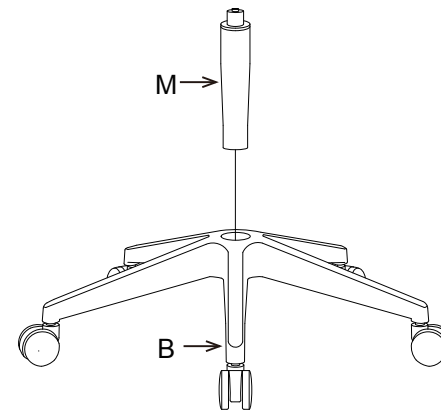

Step 6

Place seat assembly onto Gas Lift "M". Push firmly on the chair seat to securely attach seat assembly to seat post.

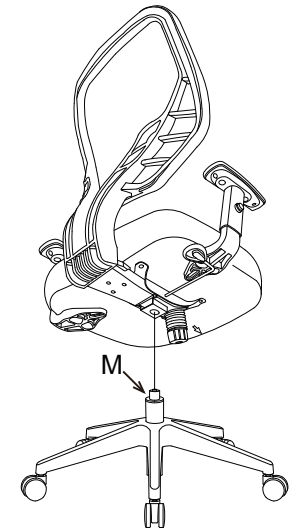

ATTENTION: Make certain that all screws are fully tightened before using chair. Lubricate all moving parts and tighten all screws every 6 months or as needed.

CONTROL INSTRUCTIONS

ITEM NO.: 695729

interion[®]
globalindustrial.com
1.800.645.1232

● ARM HEIGHT ADJUSTMENT

To adjust arm height, push button (1) in to allow the arms to move up or down freely, release button (1) once the desired height is reached.

● BACK ANGLE ADJUSTMENT

To lock, return the back to the upright position and push lever (2) in.
To unlock, pull lever (2) out.

● SEAT HEIGHT ADJUSTMENT

To raise seat height, remove pressure from the seat and lift lever (2).
To lower seat height, sit on the chair and lift lever (2).

● TILT TENSION

Turn knob (3) clockwise to increase tension and counter-clockwise to decrease or ease the tension.
Be careful not to loose the knob completely.

