

# Weighing Procedures

Portable Truck Scales can be used individually, in pairs or in groups to support wheel load, axle load, axle group load or total weight. Wheel groups should be weighed on an even plane to minimize errors caused by uneven suspension.

## CORRECT SUSPENSION LEVELING



## INCORRECT SUSPENSION LEVELING



Axle spacings less than 9' (3m) should be weighed as a group.

For vehicles with axle groups, use of dummy pads is a suitable substitute to keep axles even. It is recommended to weigh all axles of the group simultaneously.

	<p><b>CORRECT WEIGHING</b></p>	<p><b>INCORRECT WEIGHING</b></p>
<p><b>Dual-Axle Vehicles</b></p>	<p><b>CORRECT WEIGHING</b></p>	<p><b>INCORRECT WEIGHING</b></p>
<p><b>Tri-Axle Vehicles</b></p>	<p><b>CORRECT WEIGHING</b></p>	<p><b>INCORRECT WEIGHING</b></p>