

CONTENTS		
REF.	QTY.	DESCRIPTION
1	1	PREASSEMBLED HANDLE
2	1	PREASSEMBLED SPREADER
3	1	LOWER LINKAGE
4	1	LEVER ASSEMBLY
5	1	SCREEN
6	1	COVER



www.globalindustrial.com

US: 888-628-3466


Canada: 888-645-2986

Mexico: 01.800.681.6940

UNIVERSAL SPREADER ASSEMBLY INSTRUCTION


Model 640788

CONTENTS		
REF.	QTY.	DESCRIPTION
H1	2	M8 Hex Nut 
H2	2	M6 x 35mm Hex Head Bolt 
H3	2	M6 Hex Lock Nut 

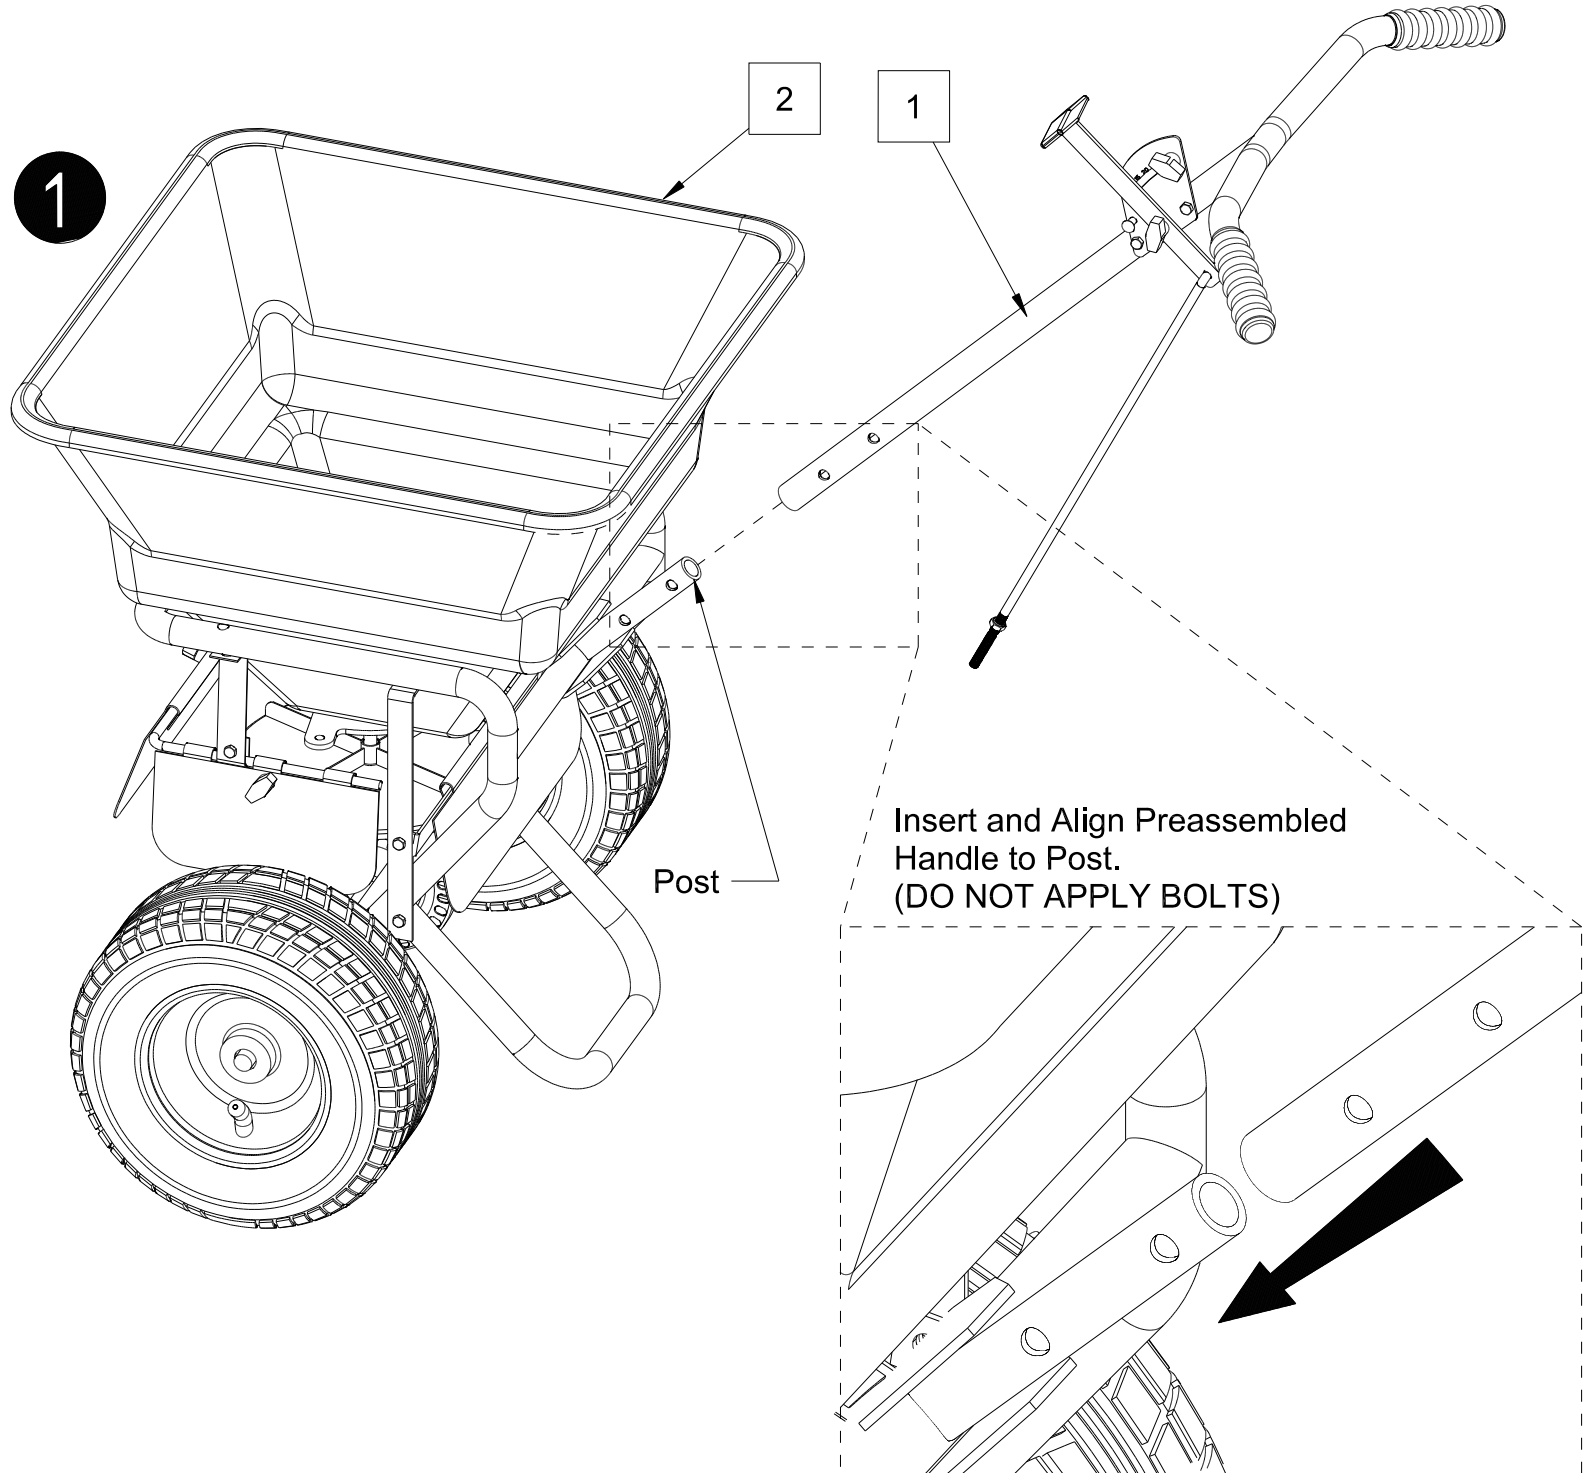

NOTE:

Positioning of Lower Linkage

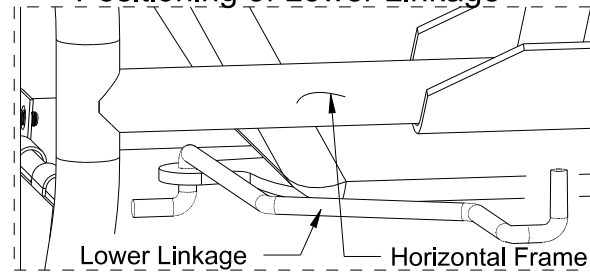

Insert lower linkage into Shutter hole and rotate clockwise 1/4 turn as shown in Fig. A


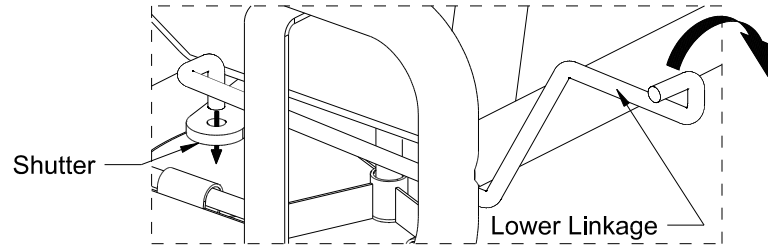


FIG. A

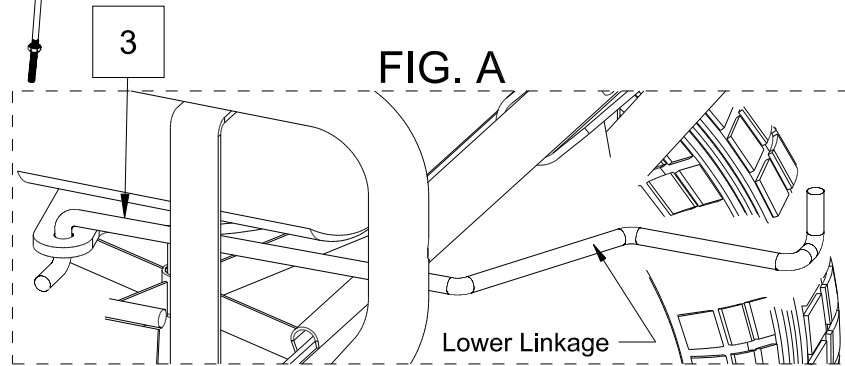

2

3

Shutter

See FIG. A for location of lower linkage.

Lower Linkage

3

Insert Lever assembly onto the Lower Linkage end, and rotate clockwise 1/4 turn as shown in Fig. B

Lever assembly


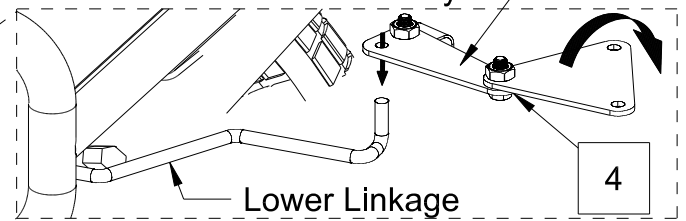



FIG. B

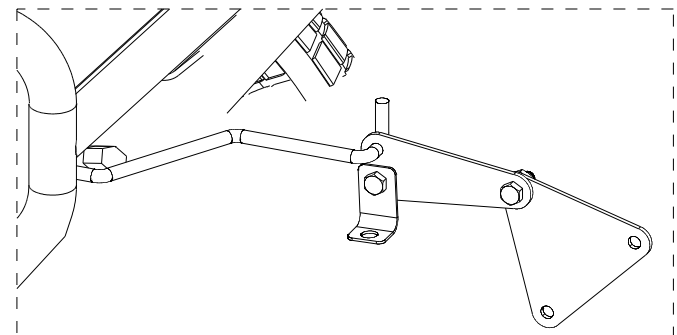

Lever assembly


4


Attach Lever assembly to Handle shaft with bolts and nuts as shown.

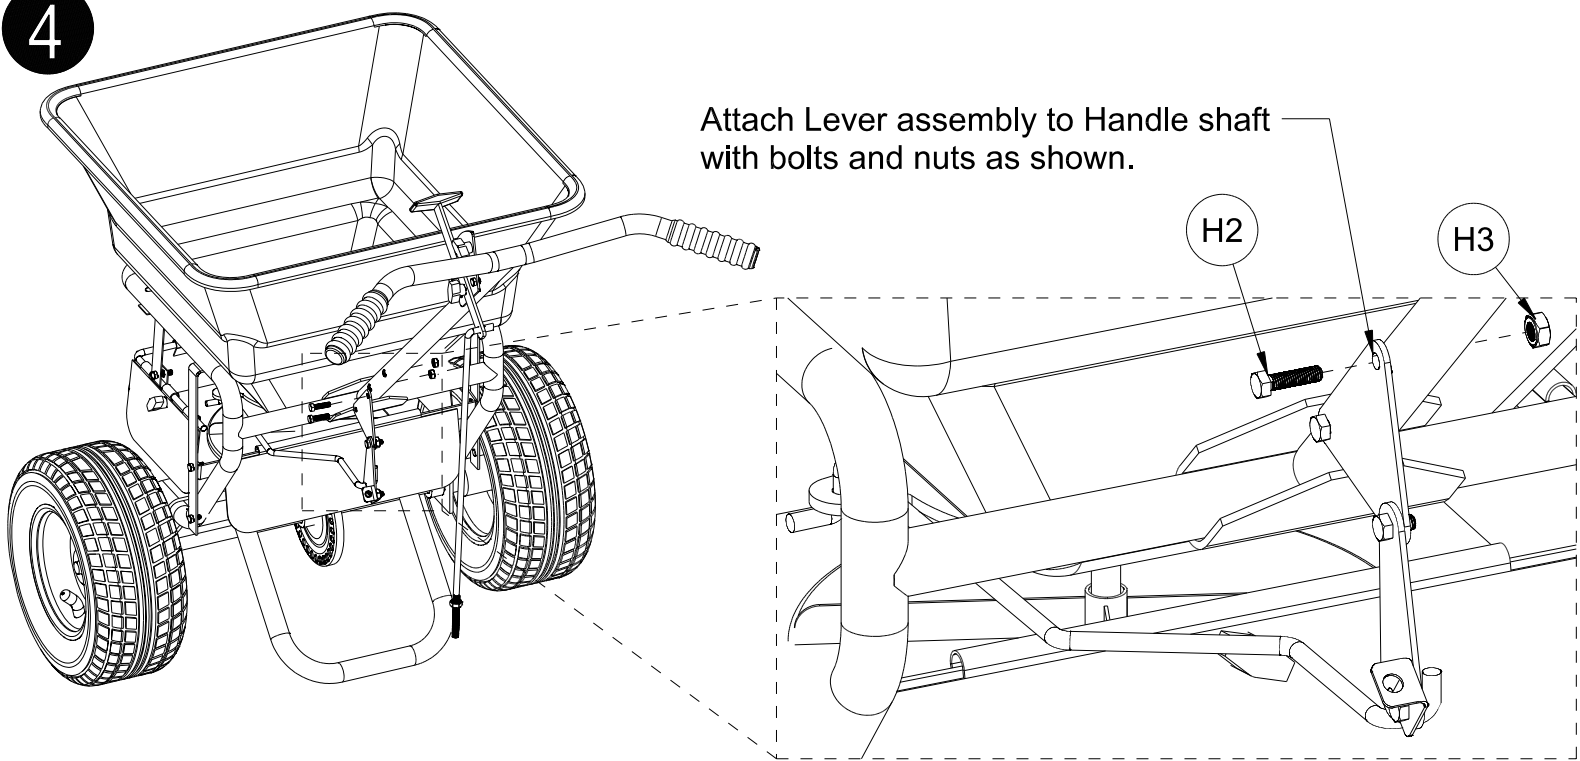

5


Insert Rod end as shown and tighten with second Nut.

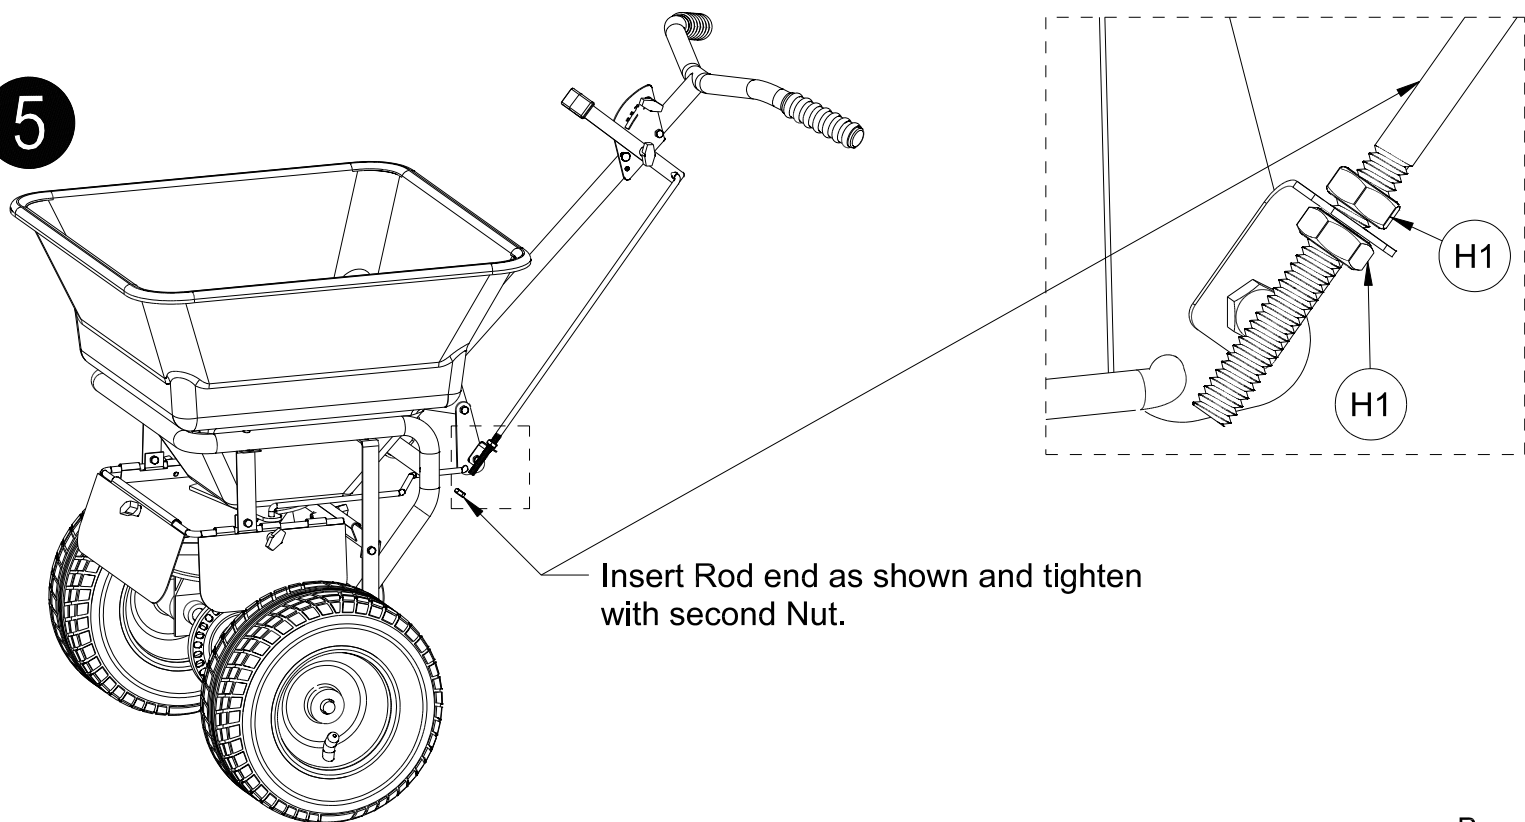

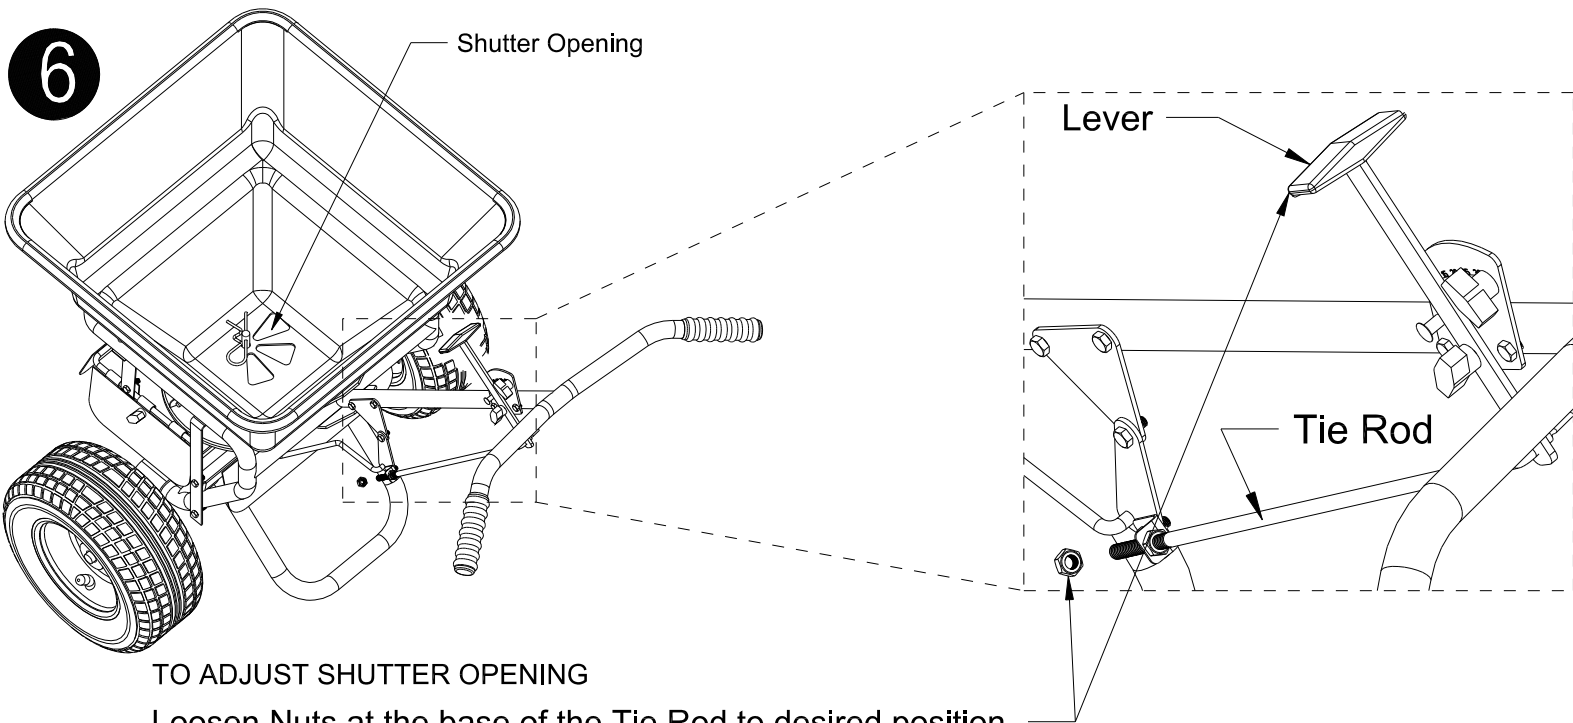

TO ADJUST SHUTTER OPENING

Loosen Nuts at the base of the Tie Rod to desired position.
Check to see that the Shutter can be open and closed
when the Lever is moved backward and forward.
After making the adjustments, retightened the nuts.

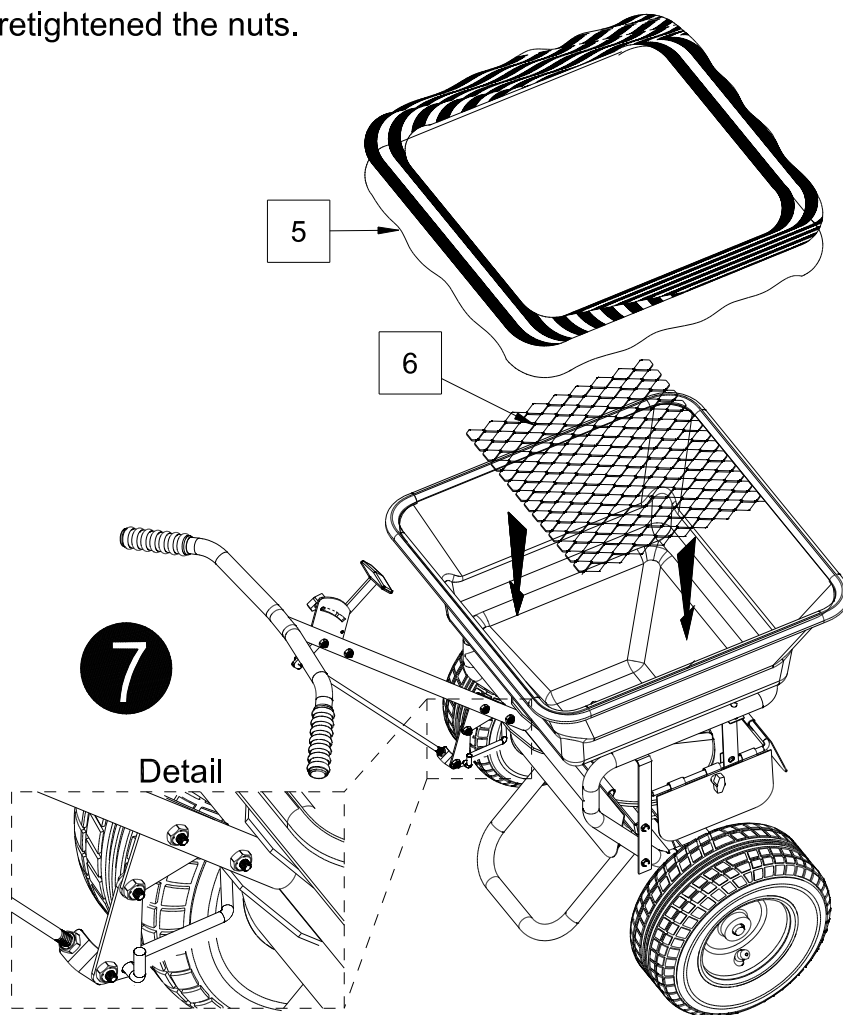

This product is designed for dispersing Seed, Fertilizer, Lime, Ice Melt and Salt.
Never leave material in hopper when not in use. Empty, wash and dry hopper before storing.
Before filling hopper, make certain the Shutter is fully closed and the screen is in place.
Inflate tire to manufacturer specifications shown on tire. Overinflation of tires may cause serious injury.
Note: This is NOT a toy and should be used by trained authorized personnel only.

CONTENIDO

REF.	CANT.	DESCRIPCIÓN
1	1	PRE-ENSAMBLAJE DE MANILLAR
2	1	PRE-ENSAMBLAJE DE ESPARCIDORA
3	1	ANCLAJE INFERIOR
4	1	Ménsula
5	1	COLADOR
6	1	COBERTURA



www.globalindustrial.com

EUA: 888-628-3466

Canadá: 888-645-2986

México: 01.800.681.6940


ESPARCIDORA UNIVERSAL

INSTRUCCIÓN DE ENSAMBLAJE

Modelo 640788


CONTENIDO

REF.	CANT	DESCRIPCIÓN
H1	2	Tuerca Hexagonal M8 
H2	2	Tornillo Hexagonal M6 x 35mm 
H3	2	Tuerca de Seguridad Hexagonal M6 

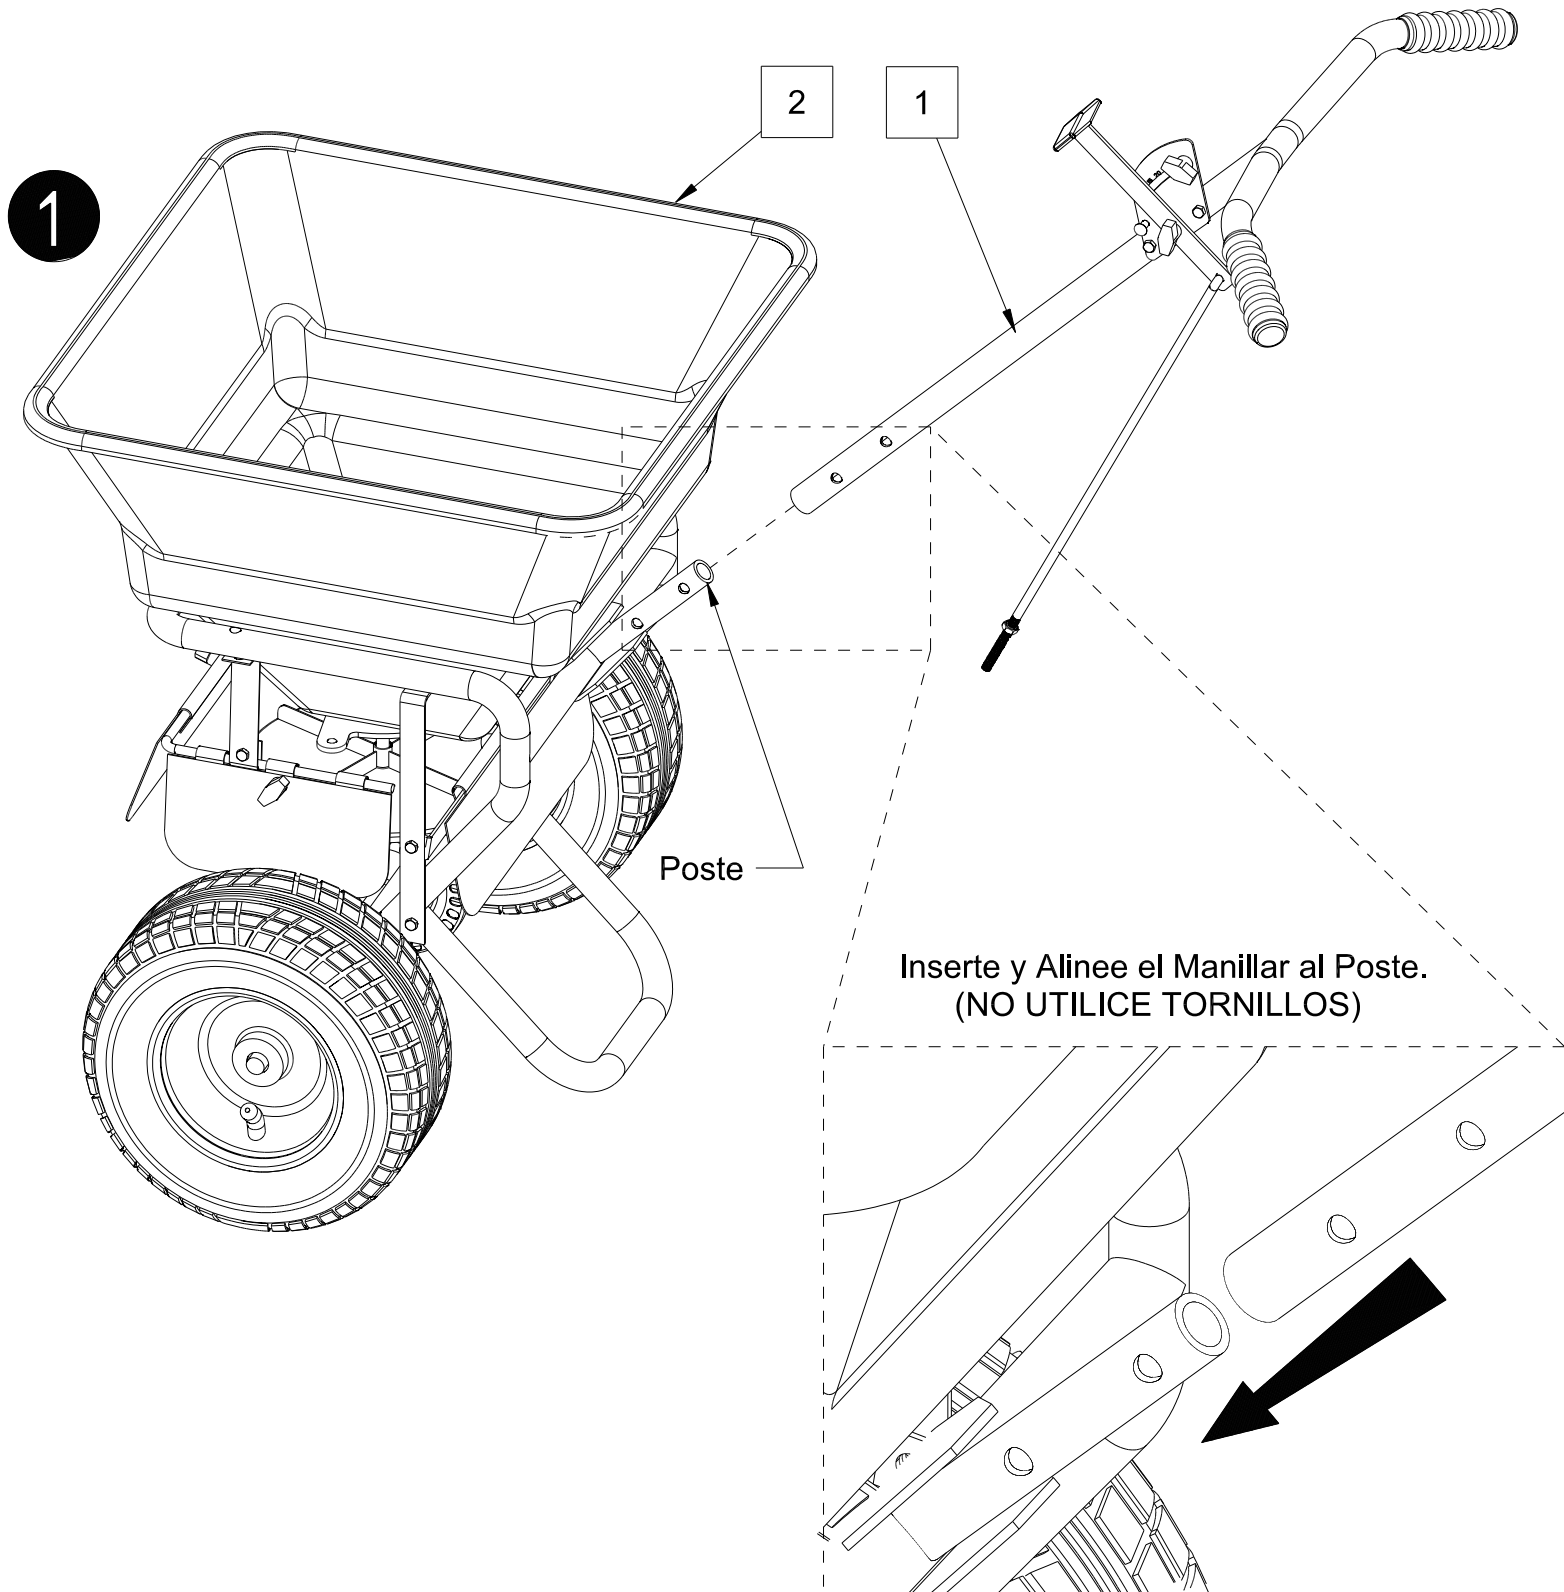

NOTA:

Posicionamiento del Anclaje Inferior

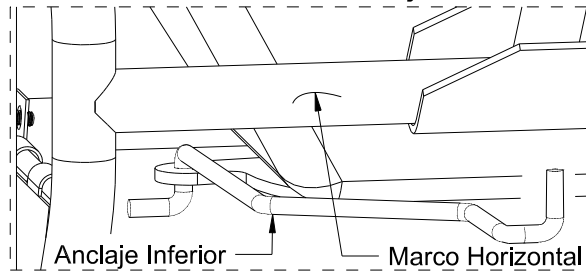

Inserte anclaje inferior en el agujero del obturador y gire 1/4 de vuelta en el sentido de las agujas del reloj como se indica en la Figura A.


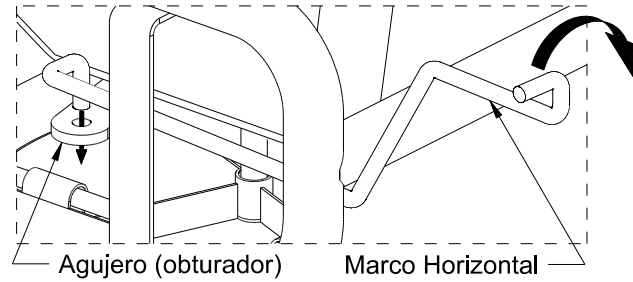


FIGURA A

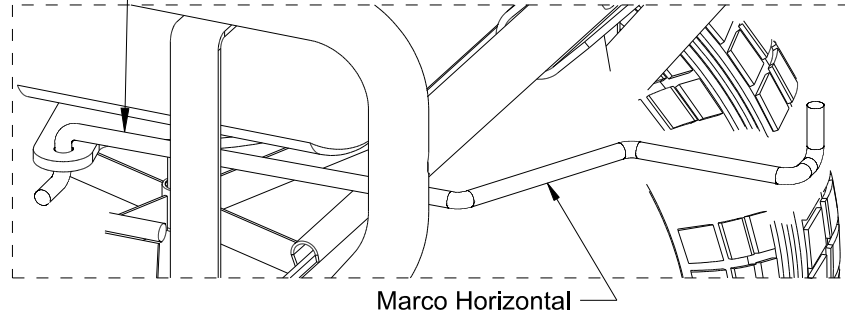

Vea Figura A para localizar el anclaje inferior.

Anclaje Inferior

Agujero del obturador

Inserte el Montaje de Palanca en el Anclaje Inferior y gire 1/4 de vuelta en el sentido de las agujas del reloj como se muestra en la figura B.


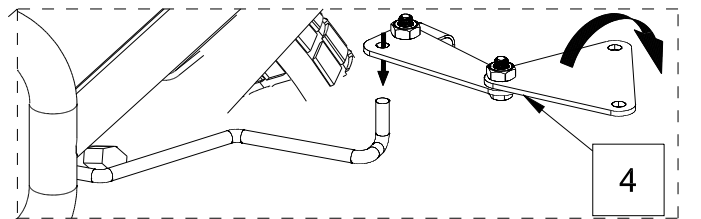


FIGURA B

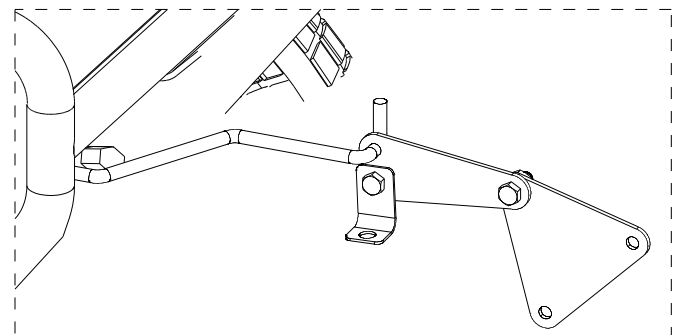


Ménsula

4


Conecte el Anclaje Inferior al poste del Manillar con tornillos y tuercas como se indica.

H2


H3

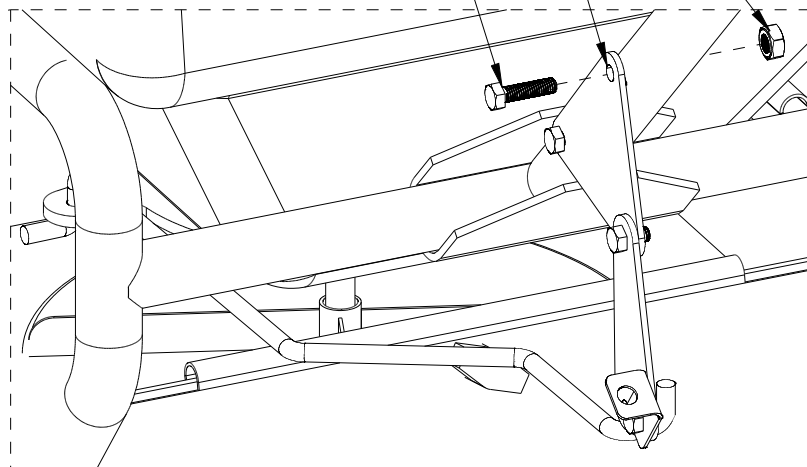

5

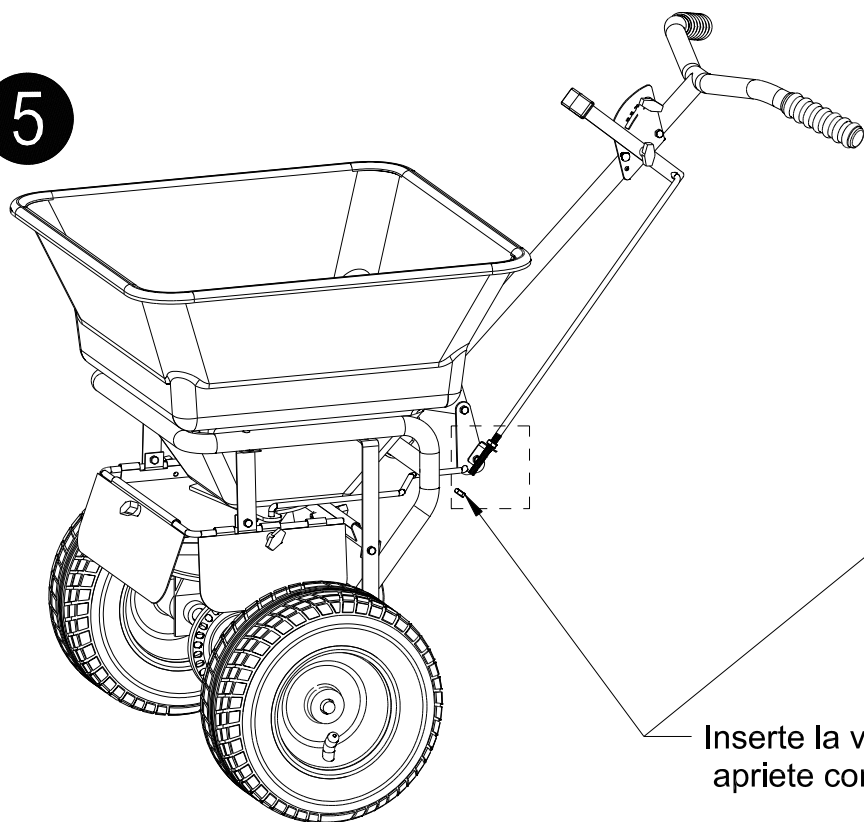


Inserte la varilla como se indica y apriete con una segunda tuerca.

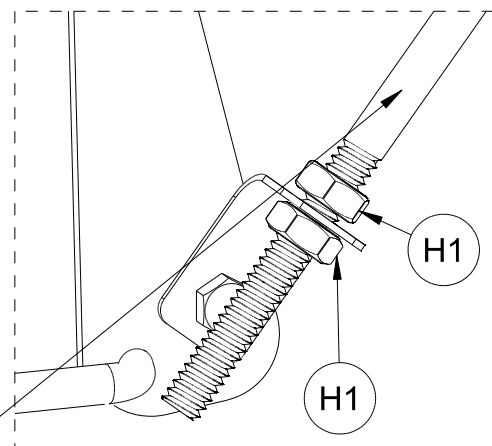


6

APERTURA DEL OBTURADOR

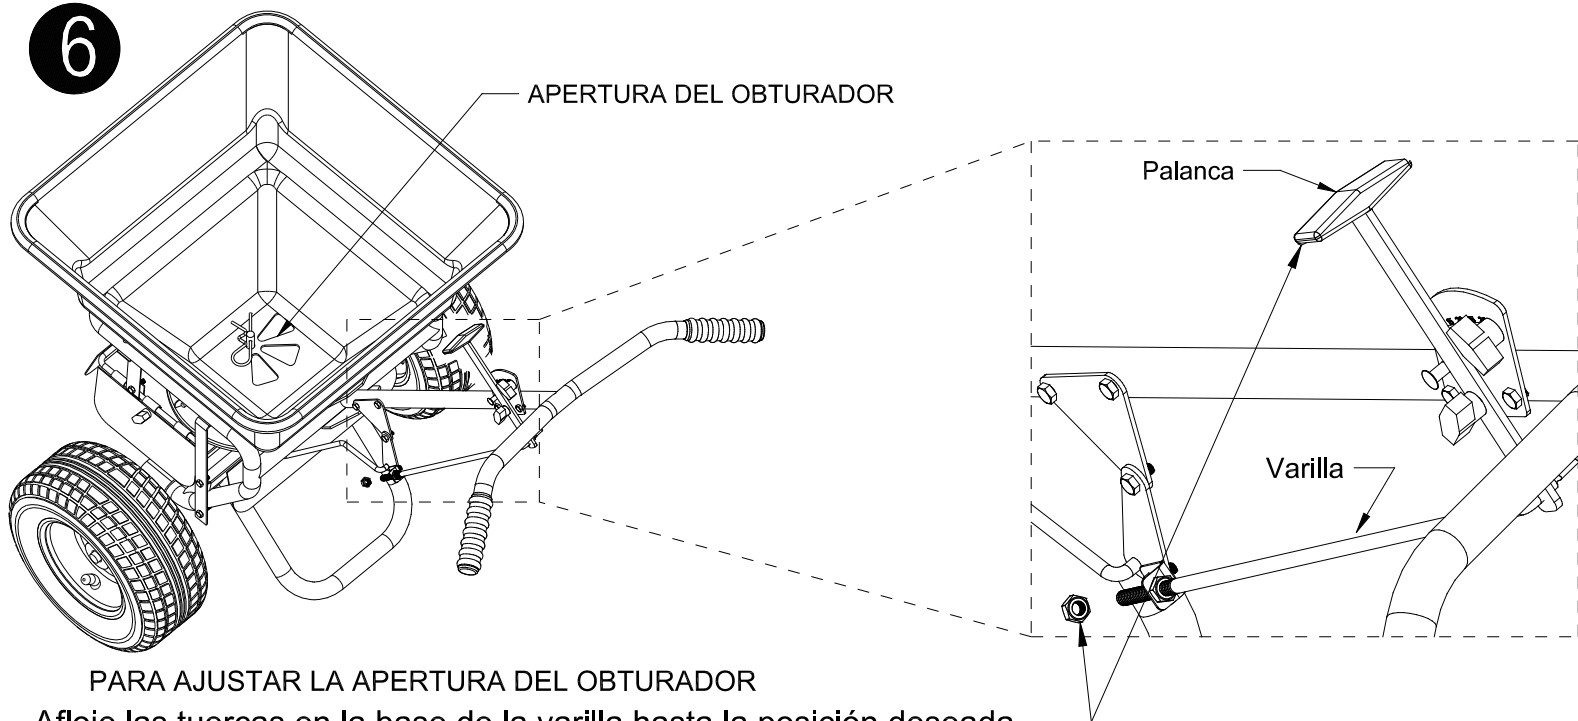

PARA AJUSTAR LA APERTURA DEL OBTURADOR

Afloje las tuercas en la base de la varilla hasta la posición deseada. Compruebe que el obturador pueda abrirse y cerrarse cuando la palanca se mueva hacia adelante o atrás. Tras hacer los ajustes, apriete de nuevo las tuercas.

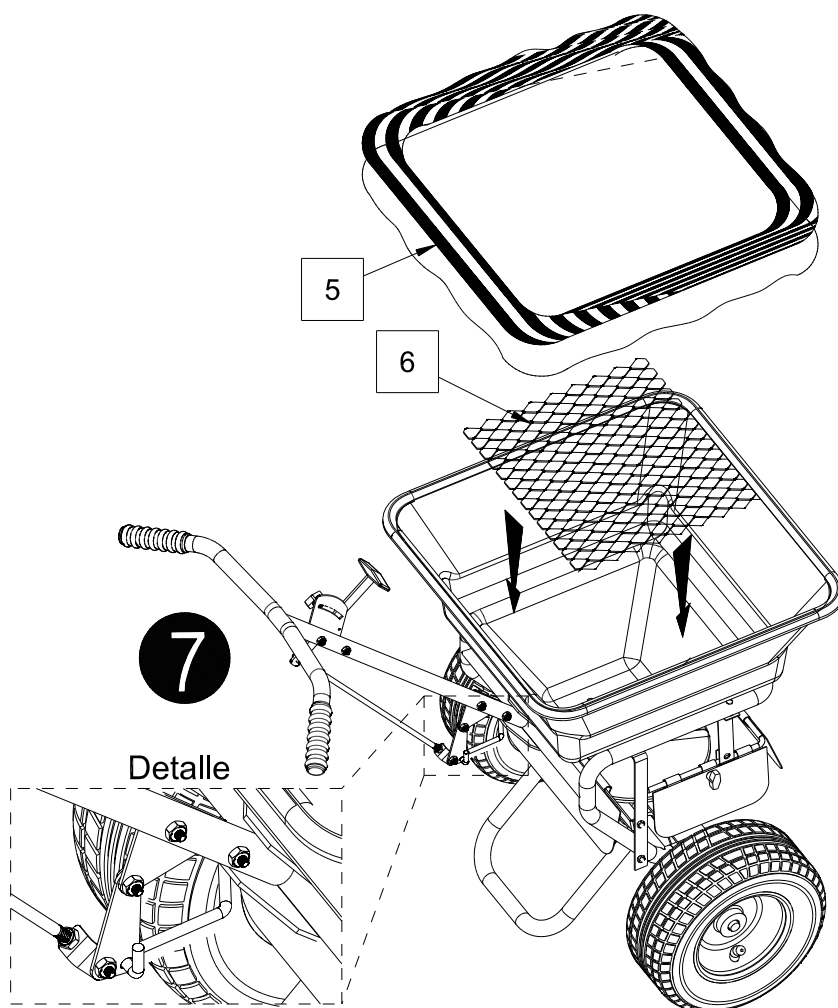

7

Detalle

Este producto está diseñado para la dispersión de semillas, fertilizantes, cal, anticongelante y sal. Nunca deje material en la tolva cuando no esté en uso. Vaciar, lavar y secar la tolva antes de guardar la esparcidora. Antes de llenar la tolva, asegúrese de que el obturador esté completamente cerrado y el colador esté en su lugar. Inflar los neumáticos con las especificaciones del fabricante que aparecen en los neumáticos. Inflado excesivo de los neumáticos puede causar daño grave. Nota: Esto NO es un juguete y debe ser utilizado por personal autorizado y capacitado.