# seville classics®

# AIRLIFT® Overbed Medical Pneumatic Adjustable Table



Model: OFF65905

Thank you for choosing Seville Classics! We hope that you enjoy your new sit-stand desk. Please read through this user guide for parts list, assembly instructions, frequently asked questions and contact information.

## **Customer Service Information**

Telephone: (800) 323-5565

Fax: (310) 533-3899


Hours: 8:30 AM - 4:30 PM (PST)

Email: Support@SevilleClassics.com

Homepage: www.SevilleClassics.com

032019 032019

## **Parts List**

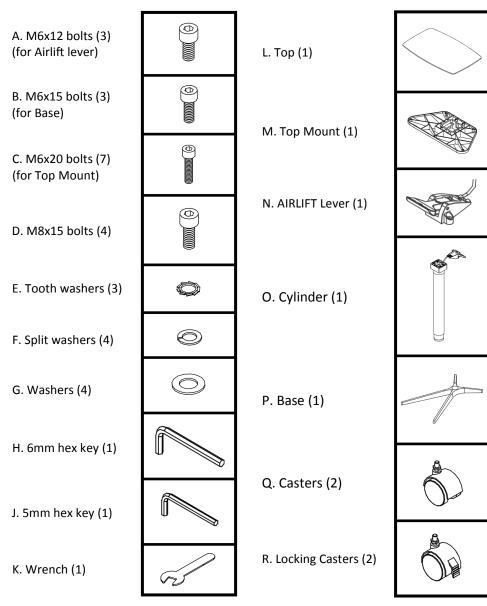

### Please make sure you have all the parts on this list.

If you're missing parts, contact us for replacements at (800) 323-5565 or send an email to Support@SevilleClassics.com

### Use Instructions

- 1. Roll desk into desired position.
- 2. Lock casters to prevent the table from rolling.
- 3. To lift, pull up on the Airlift lever.
- 4. To lower, pull up on the adjustment lever while pressing down on the table top.
- 5. Release adjustment lever to lock-in table height.

## **FAQs**

#### Q. Can I use it without the wheels?

A. No. The base is not flat and will wobble without wheels.

#### Q. How high and how low can my desk go?

A. Maximum height is 37.2. Minimum height is 24.4 inches.

#### Q. Why won't my desk adjust its height?

A. The adjustment wire may not be clipped into the AIRLIFT lever correctly. Reference the diagram in STEP 3 for an example.

#### Q. Why is my desk adjusting slowly?

A. Desk may adjust slowly after being unused for a time. To fix this, pull up on the adjustment lever and lightly "pump" the desk top up and down. The desk should now rise smoothly.

## Safety


Do not tip the desk over or place upside down. Do not place more than 33 lbs. on the desk top.

# Specifications

Dimensions: 30" x 19" (24.4" to 37.2")

Weight capacity: 33 lbs.

Weight: 24.4 lbs.

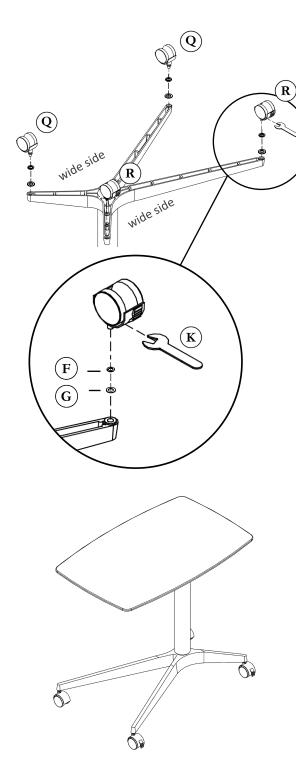

STEP 6. Install CASTERS (Q) to wide side of the BASE (P) through WASHER (G) and SPLIT WASHER (F).

Tighten with wrench (K).


Repeat on other side for LOCKING CASTERS (R).

STEP 7.


Congratulations!

adjustable table!



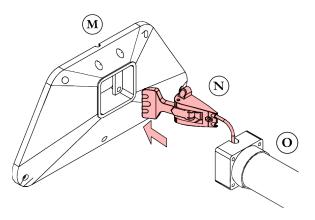


STEP 1. Pull AIRLIFT LEVER (N) on CYLINDER (O) through hole in TOP MOUNT (M).

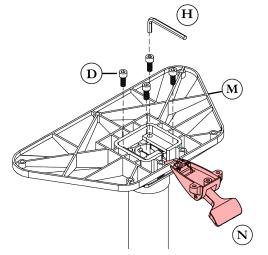


STEP 2. Attach TOP MOUNT (M) to CYLINDER (O) with M8x15 BOLTS (D) and 6mm hex key (H).

Fit AIRLIFT LEVER (N) wire into clips on TOP MOUNT (M).

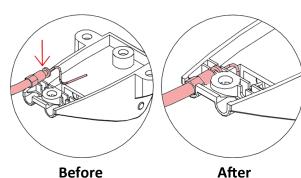

Press cable firmly into the bracket on the back of AIRLIFT LEVER (N).

**IMPORTANT:** Lever will not work and height will not adjust if wire is not clipped in correctly.

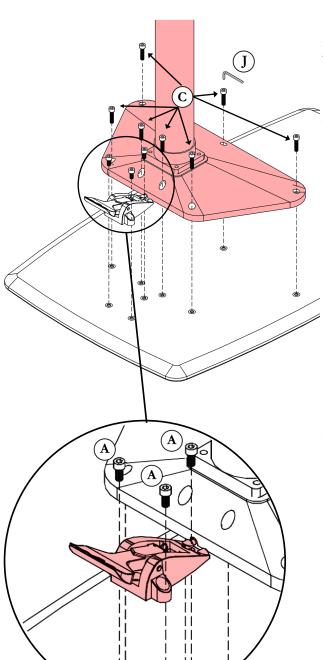


3

STEP 3.
Align mounting holes on TOP MOUNT (M) with holes on back of TOP (L).

Attach to TOP (L) with M6x20 BOLTS (C) using 5mm hex key (J).

STEP 4.
Attach AIRLIFT LEVER (N) with M6x12 BOLTS (A) using 5mm hex key (J).

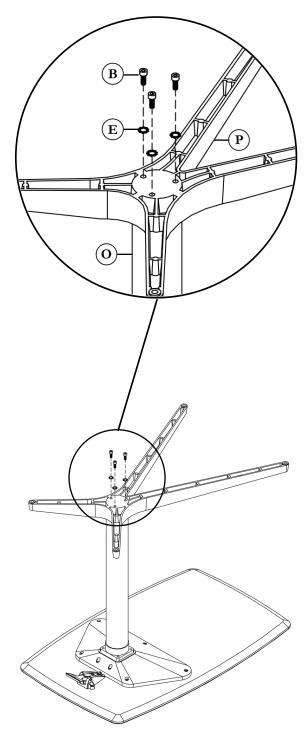

STEP 5.
Fit BASE (P) onto
CYLINDER (O).

Attach BASE (P) with M6x15 BOLTS (B) through TOOTH WASHERS (E) with 5mm hex key (J).