

We can supply that:

User's manual	Manual del usuario	Manuel de l'utilisateur
Customer Service US: 1-800-645-2986	Servicio de atención al Cliente US: 1-800-645-2986	Service à la clientèle Canada: 888-645-2986

Automatic Hand Dryer, Stainless Steel 120V

Models: 641591



SAFETY WARNINGS

Before installing, be sure to read this installation manual and retain for future reference.

This product must be installed by qualified personnel in accordance with the instructions given in this manual and installation must comply with all applicable regulations, national security standards and laws in force in the country where the product is installed.

Turn off the power at the main switch before installing or servicing the dryer unit

The dryer must not be installed on a flammable surface. Do not damage any parts of the electrical connections.

Pre-arrange an appropriate power outlet and a system of disconnection in accordance with current local regulations. Make sure the product is properly connected to ground. If there is no ground connection, there is a risk of an electrical shock.

Do not install the dryer over a washbasin. If the power cord is damaged, it must be repaired by qualified personnel to avoid any type of risk.

During use, temperatures above 158°F [70°C] may develop in the parts near the hot air nozzle. Do not touch or cover the dryer during use or when finished using it.

General safety information:

This product is intended for installation by a qualified service person. Use AWG NO.12 solid conductor for wiring.

Failure to properly ground unit could result in service electrical shock and/or death.


• WARNING Disconnect power at the service breaker before installing or servicing.

All units must be supplied with a 3-wire service. The ground wire must be connected to the dryer's backplate.

--NOTE: Do not install dryer over washbasin --

PACKING LIST

ITEM KEY	ITEM DESCRIPTION	ITEM QTY	NOTES
А	Hand Dryer Unit Complete	1	Stainless Steel 304 Cover&Cabinet
В	Owner Manual(OM - this booklet)	1	
С	Mounting Template(MT)	1	
D	Wall Anchors, Expansion	4	Ф8х38ММ [5/16" Dia.x 1-1/2"], for#10
E	Self-threading Phillips PH Screws	4	M5x36MM [No.10 AB x 1-3/16"]
F	Flat Washer	4	F1 For M5[No.10 AB]Phillips PH Screws
G	Hex Key (for cover screws)	1	For 4MM[5/32"] hex socket FH Screws

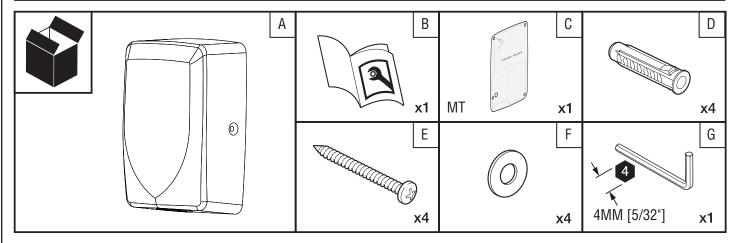

SPECIFICATION

Voltage: 120V 60Hz, 8A/1000W

Stand-by Power: Less than 2.0W

Air Temperature: $40^{\circ}\text{C}[104^{\circ}\text{F}](\text{Distance from nozzle}=100\text{MM}[4^{\circ}],\text{Room Temp.}=25^{\circ}\text{C}[77^{\circ}\text{F}])$

Air Velocity: 100M/S[328 FT/S] / 360KM/[224MPH]

Air Flow: 130M³/H[76.5CFM]

Drying time: 10 - 12 seconds

Timing Protection: Forced Hold-On 60 Seconds auto shut-off
Timing Duration: Auto Shut-Off ≤3 Seconds after last sensor read

Sensor Range: 5-15CM[2"~ 5-7/8"], Owner Adjustable Fuse Protection: 1kW, Main PCB, Ф5x20, 250V, 12A


Protection Level: IP23

Electric Isolation: CLASS (Metal cover)/CLASS II(Plastic cover)

Brush Motor: 35000RPM, 600W[0.8HP]

Noise [at 1M]: 74 dB

Weight: 2.5KG[5.5lb]/Net Weight / 3.0KG[6.6lb]/Shipping Weight

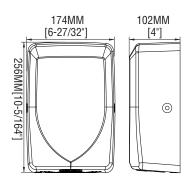


BEFORE INSTALLATION

Installation must be carried out in accordance with the current edition of the local wiring regulations code having jurisdiction. Installation should be performed only by a qualified electrician.




Please check if hand dryer is supplied with convenient plug in feature.

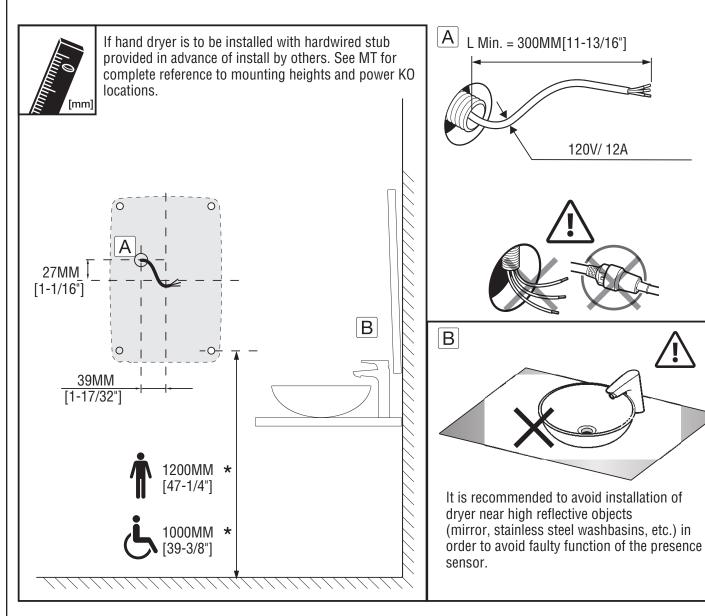



* Recommeded

INSTALLATION

- 1. Disconnect the power before installing
- 2. Place template against wall at desired height(see mounting height recommendations) and mark locations of 4 mounting holes Dia. 8mm(5/16").
- 3. Remove hand dryer back transportation only purpose screw.
- 4. Remove and retain 2 side security hex cover screws and cover.
- 5. Mount the hand dryer base on the wall.
- 6. If the hand dryer is supplied in hardwired:
- a. Connect the live wire(Coloured Brown, Red, or Black) to the terminal block marked "L".
- b. Connect the neutral wire(Coloured Black, Blue) to the terminal block marked "N".
- c. Connect the ground wire(Coloured Green or Yellow) to the terminal block marked "E".
- 7. Before replacing cover, there is a customized option to run the dryer heater on (1000W) or heater off(600W). The switch is clearly marked.
- 8. Default setting is 12-15CM from nozzle. If it needs and please adjust its range.
- 9. Replace cover. Do not over-tighten screws.
- 10. Connect the hand dryer plug to the power supply socket if needed then turn on power.

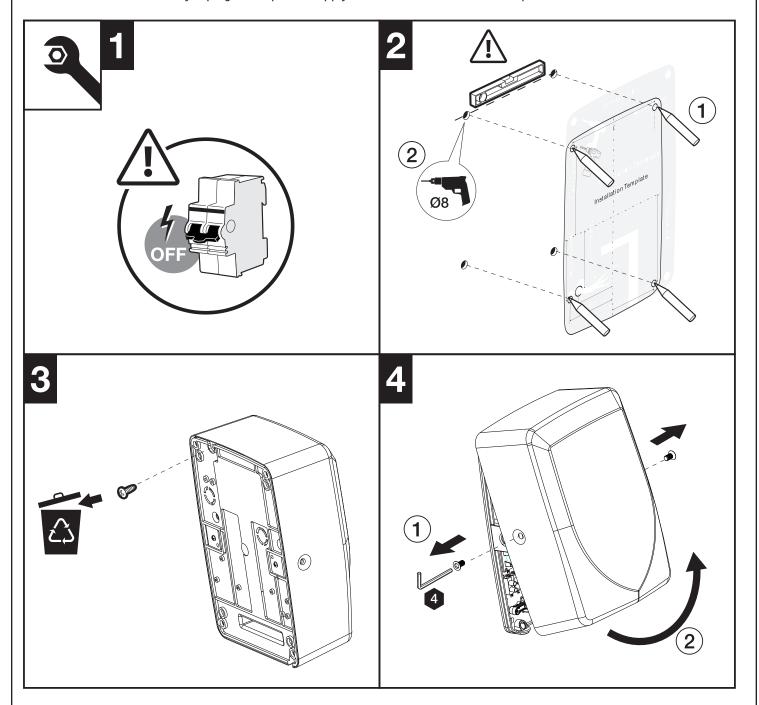


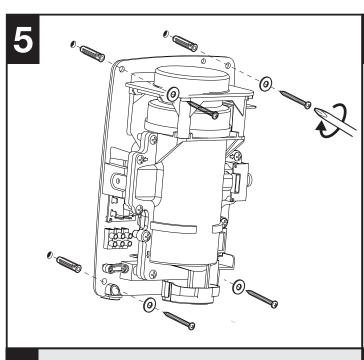

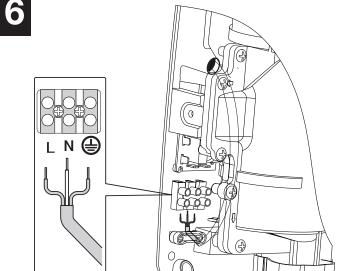


7 DETECTION DISTANCE SETTING

8

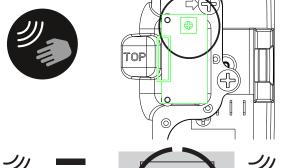



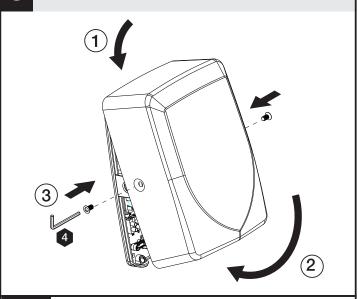

9



10

OPERATION

No-touch operation.

There is a blue LED light to guide user to the air flow. Shake excess water from hands.

 
Place hands under the outlet to start operation. Rub hands lightly and rapidly.


Stops automatically after hands are removed.




Basic use





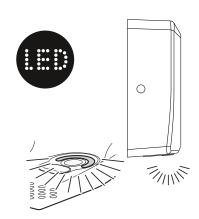



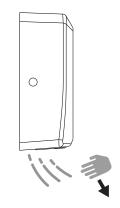

Place hands under the dryer. The hand dryer will automatically turn on when hands are near. The hand dryer will automatically turn off when hands are removed.

ADJUSTMENTS





It is possible to adjust the detection distance by means of the potentiometer located inside the unit (see section 7 in "Installation").

MAINTENANCE

- Periodic cleaning of the unit is recommended.
- Remove cover and clean dryer dust lint.
- Wipe the cover with a damp cloth and mildcleaning solution. Do not soak. Never use
- abrasives to clean the cover.

DIAGNOSTICS & REMEDIES

SYMPTOM	CORRECTIVE ACTION
Hand dryer fails to start	Ensure the breaker supplying the dryer is operational. If it is, disconnect the power and remove the hand dryer cover. Check all the wire connection to sure they are well fixed. Turn on power and if it does not work then replace circuit board. Turn motor blower several times by hand to see it is blocked.
Hand dryer turns on/off erratically or not sensitive enough	Ensure that there is no obstruction on or in front of the infrared sensor zone. Clean any dirty off the sensor lens. Try adjusting the sensitivity potentiometer on program board. If not still not work, replace circuit board and sensor board.
No hot air	Check if the heat element switch is power on. Check if the heat element was broken. If yes, replace a new one.
Hand dryer makes ticking noise	Check the motor brush worn condition. Replace them or a new motor.

MAINTENANCE

Periodic cleaning of the unit is recommended. Remove cover and clean dryer dust lint.

Cleaning stainless steel

Stainless steel is highly resistant to rust, but there are some very strict cleaning and maintenance rules to be followed to prevent damage to its appearance.


General cleaning tips

Apply neutral detergents formulated for these purposes (non-ionic surfactants and citric acid).

Apply the detergent with soft cloth. Be careful with abrasive cloths. They may scratch the surface. Rinse with water until all the detergent has gone.

Residue from hygiene products, liquid soap, shampoos, bath gel, etc, can also damage surfaces. Rinse the surface with plenty of water after use.

Limescale stains can be prevented by drying the surface with a soft cloth after use.

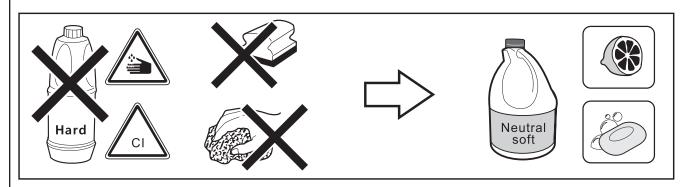


Specific cleaning tips

Limescale from water: Apply a solution of one part vinegar and three parts water directly to the stains and leave to work for a few minutes. Then rub with a soft cloth or damp sponge. Then give it a final wash with plenty of water and neutral soap to ensure it is thoroughly rinsed.

- Do not apply detergents with abrasive products or which contain:
 - Hydrochloric acid
 - Sodium hypochlorite (bleach)
 - Formic acid.
- Do not use abrasive utensils like metal sourcing pads or abrasive sponges.
- Do not spray the detergent on the surface, because the liquid can get into the openings or cracks in them and cause damage.
- Do not use anti-limescale and descaling cleaning products. They are not suitable for cleaning satin less steel.
- Do not use silver cleaners, contain chlorides that attach stainless steel.

Bleach and descalers are often applied to bathroom equipment and left to work for a time. This leads to the release of gases that contain chloride, which together with the water in the surface cause chlorides to run down the surface of the stainless steel. This rusts both internal and external surfaces.

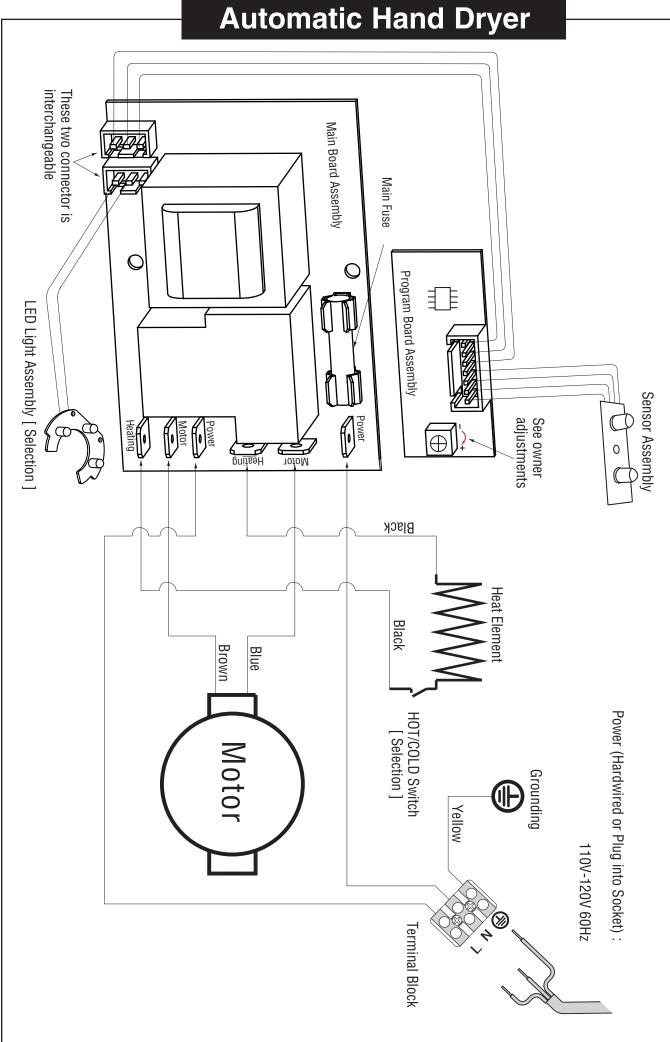

Surface-Mounted ADA-Compliant

