



## Upright Freezer Manual

**Model 243056**

Compact Upright Freezer, Solid Door, 3.1 Cu.Ft., Black

**Model 243057**

Compact Upright Freezer, Solid Door, 3.1 Cu.Ft., White

Read this manual thoroughly prior to installation, operation or maintenance. Keep these instructions in a safe location for future reference. For questions, visit [globalindustrial.com](http://globalindustrial.com) or contact Customer Service at 1-800-645-2986.

Read all instructions before use. To reduce the risk of fire, electric shock, and/or damage/injury to persons or property when using this appliance, follow the following precautions:

- DO NOT use when the cable cord or plug is damaged. Replace cable cord or plug if damaged.
- Plug into a grounded 3 prong outlet.
- DO NOT remove the ground prong.
- DO NOT use extension cords.
- Unplug before performing maintenance.
- DO NOT unplug by pulling the cable cord. Only pull the plug.
- DO NOT submerge in water

# CONTENTS

Main Parts .....	1
Safety Warnings.....	2
Installation Instructions.....	2
Operation Instructions .....	3
Maintenance.....	4
Defrost .....	5
Power Failure and Disconnecting the Appliance .....	5
Troubleshooting Tips.....	6
Specifications and Parameters .....	7
Packing list.....	8

 
To avoid food contamination:

- Don't leave the door open for long periods of time to prevent the temperature from increasing significantly
- Keep surfaces that can come in contact with food and accessible drainage systems clean
- Clean water tanks if they have not been used for 48 hours; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the freezer to prevent contact with other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice cream and making ice cubes.

One, two and three-star compartments are not suitable for the freezing of fresh food.

If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mold developing within the appliance.

## Main Parts

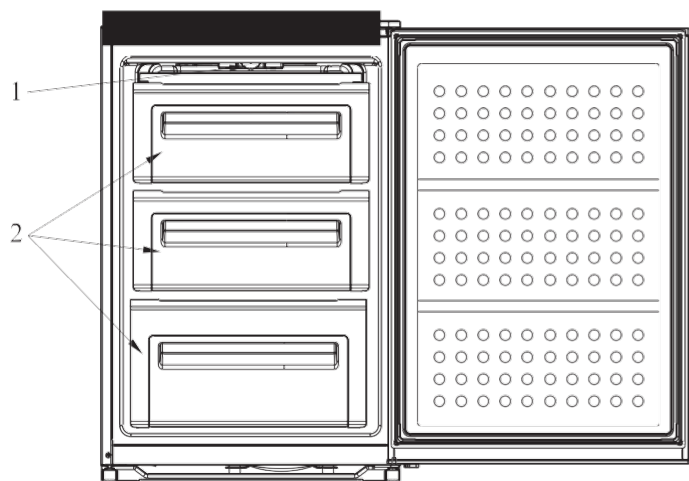

1. Temperature control knob
2. Freezer compartments

## SAFETY WARNINGS

For ensure your personal safety, please follow the points below:

1. The voltage and frequency of this product should be 120V;60Hz.
2. DO NOT store explosive substances such as aerosol cans with a flammable propellant in this appliance.
3. Do not use or store electrical appliance inside.

 
 
### NOTICE:

1. DO NOT plug in or pull out the plug if gas leaks. Flipping any electrical switch can cause a spark and ignite the gas.
2. DO NOT splash water on the rear of the appliance as it may cause a malfunction or electric shock.
3. DO NOT store flammable materials such as ether, benzene, LP gas, or glue in the freezer
4. DO NOT use in a location exposed to sunlight, high temperature or humidity.
5. DO NOT allow the cooling system to be damaged during transportation or installation. The refrigerant of this product, R600a, is flammable.
6. DO NOT disposed this product in municipal waste. Special waste treatment and collection is required.



### INSTALLATION INSTRUCTIONS

1. The refrigerator should be located on a flat surface. Leave 2-4 inches between each side of the appliance and the wall, and leave 1 foot between the top of the appliance and the ceiling.
2. Pull out the bottom panel before installation.
3. Adjust the level of the freezer by rotating the 2 adjustable legs located under the front of the freezer. Rotating the adjustable legs clockwise raises the machine. Set the appliance to slope backwards slightly to keep the doors closed.

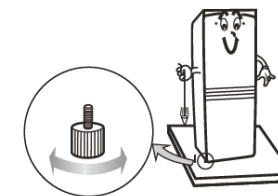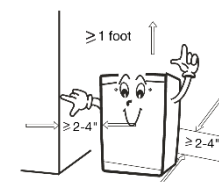

## OPERATION INSTRUCTIONS

 
### PLACEMENT OF FOOD

1. There should always be some space between items inside for air circulation.
2. Keep food in sealed packages to prevent them from drying and spreading odor.
3. Hot food should be cooled down to room temperature before placed into the freezer.



### INSTRUCTION FOR USAGE

The temperature of the freezer can be controlled manually by the knob. The larger the number is, the colder the interior temperature will be. 0 stands for off. Turn the knob to 4 for normal use.

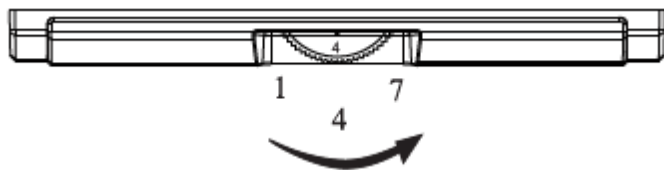

## MAINTENANCE

Unplug the machine before maintenance and cleaning.

### 1. Interior maintenance

Clean the interior of the appliance with clean water and a mild cleaning solution. Wipe dry. DO NOT use cleansers such as soap powder, abrasive cleaning powder, alkali cleansers, chemical cloth, thinner, alcohol, acid petroleum product and hot water as they may damage the painted cover and plastics.

### 2. Maintenance of door gasket

Keep the door gasket clean and free of stains, oil, and sauces.

### 3. Outer maintenance

DO NOT let any electrical part get wet. Clean the outer surfaces with a dry cleaning cloth.

## **DEFROST**

Accumulation of frost in your freezer will reduce its efficiency and increase energy consumption. Remove the frost by removing all food and content, uninstalling all compartments and shelves, unplugging the power cord, and leaving the door open. Wipe up the water from the melted frost with a dry cloth.

## **POWER FAILURE AND DISCONNECTING THE APPLIANCE**

After power failure, the freezer can store food for several hours.

### 1. Use during power failure

After power failure, DO NOT put additional food in the appliance. If available, make and place ice in a container at the top of the freezer.

### 2. Disconnecting the appliance

When the freezer will not be used for a long time, remove the plug from the outlet and clean the appliance. The door should be kept open in order to prevent odor.

## **TROUBLESHOOTING TIPS**

### 1. The refrigerator does not work

It may not be connected to an appropriate power supply.

### 2. The refrigerator does not work efficiently

There may be too much frost. The temperature is set too low. The door is opened too frequently or kept open for too long.

### 3. It makes unusual noises

The appliance is not sitting leveled with respect to the ground.

### 4. The compressor keeps working for a long period

The environment temperature may be too high. The doors may be opened too frequently or are left open for too long. Setting the temperature control knob at 4-7 may increase the working time of the compressor.

### 5. Disgusting odor

Food with strong odor should be packed tightly before being placed inside the appliance. Check for spoiled foods or if the interior is dirty.

### 6. Water leaks from the bottom of the refrigerator

The drain tube is jammed.

### 7. Heavy frost occurs on the rear of the appliance

Putting humid or hot food into the appliance may cause this problem. There is too much moisture in the environment.

### **The follow cases are not signs of a malfunction**

#### 1. Moisture may accumulate on the outside of the product

#### 2. The flow of refrigerant through the pipeline coil makes a noise.

#### 3. The sides of the product get warm because of the cooling pipeline.

## SPECIFICATIONS AND PARAMETERS

Model		243056/243057
Climate class		T
Electric shock protection type		I
Capacity (Cubic Feet)	Freezer	3.1
Voltage (V)		120
Frequency (Hz)		60
Current (A)		0.8
Noise [dB(A)]		≤ 42
Energy consumption (kW.h/24h)		0.66
Refrigerant		R600a/38g
Weight (lbs)		70
Interior temperature (°F)	Freezer	≤ -0.4
Dimension (inches)	Width	21-11/16"
	Depth	22-1/8"
	Height	33-5/32"
Warranty		1 Year

## PACKING LIST

Model	243056/243057
Freezer compartments	3pcs
Owner's manual	1 copy