


Operation Instructions:

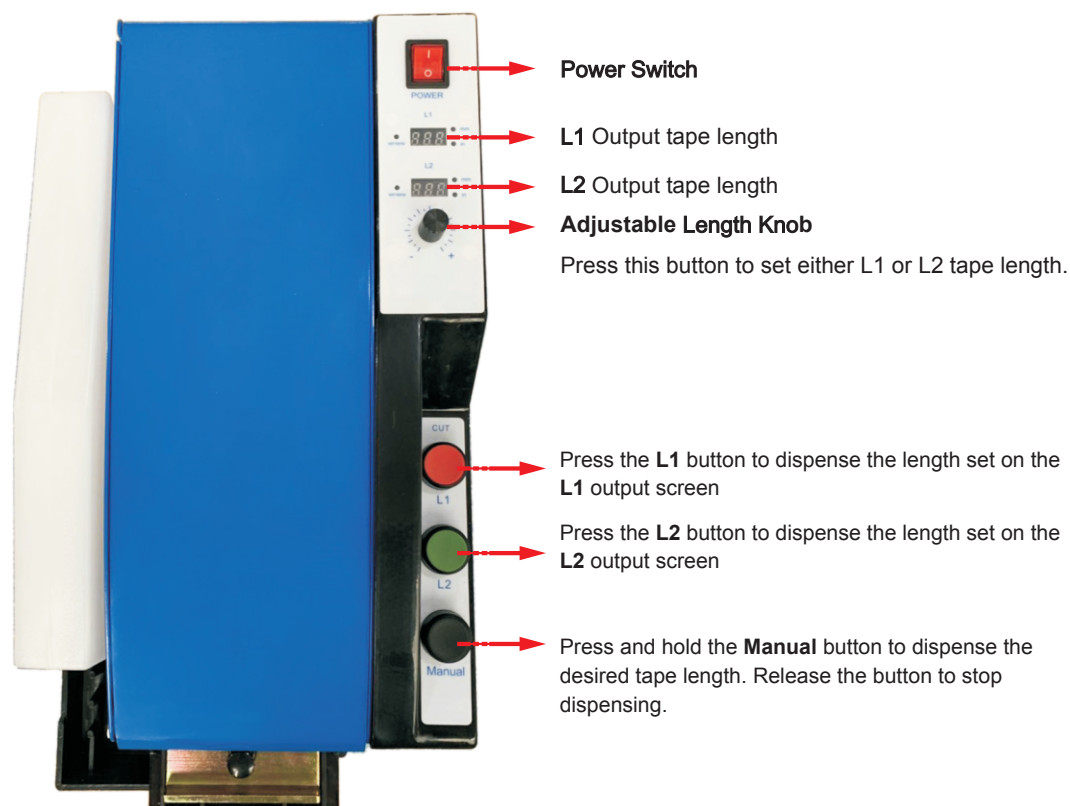

Changing unit:

Press and hold the **Adjustment Length Knob** button for 5 seconds or until the screen display "CCC". Switch the unit to either mm or inch; the corresponding unit indicator light is on after the unit is selected.

Preset Setting:

1. Press the **Adjustable Length Knob** button to switch between **L1** and **L2** parameter setting. "Set-Lamp" will light up next to either **L1** digital screen or **L2** digital screen to indicate the parameter selection.
2. Rotate the **Adjustment Length Knob** clockwise to increase the tape length. Rotate the **Adjustment Length Knob** counterclockwise to decrease the tape length. The tape length can be set from 4 inches(101mm) to 99.9inches(2537mm).
3. After the lengths are preset, press the **Adjustment Length Knob** button to exit the setting display.
4. Press the **L1** button or the **L2** button to use preset tape lengths.


Model no. 412477

Electronic Tape Dispenser for 1/2" - 3" Water Activated Kraft Tape

User Manual





Installation Procedures:

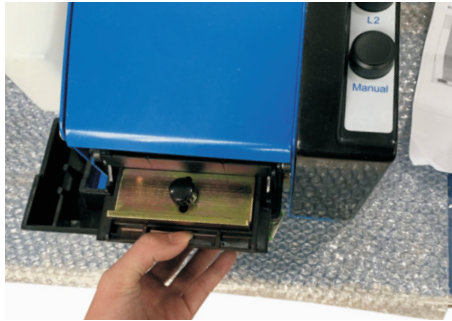


Step 1 Insert the brush in the water reservoir. Insert the water reservoir's pivot shaft into the slots on the inner sides of the dispenser. Move shaft up to the top of the slots. Slide reservoir down so bottom fits over tab on dispenser.


Step 2 Fill bottle with clean water. Cover the filler opening to prevent spilling, turn bottle over and place filler opening over desired water level peg in the water reservoir.

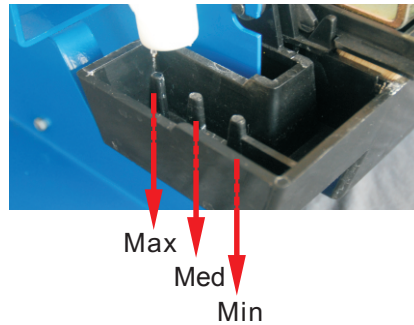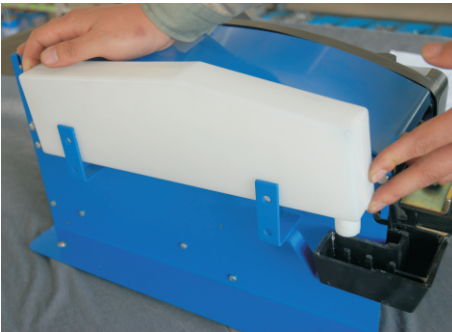



Step 3 Adjust roll guide plates (A and B) to fit tape width. The tape should be positioned centrally between the guide plates. **Note:** Maximum tape width should not exceed 3 inches(76.2mm).

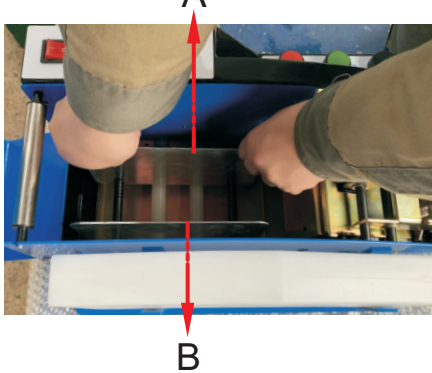

Step 4 Press the cutter lightly to take out the top board.

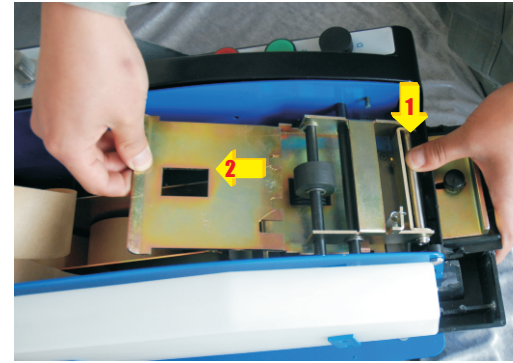

Step 5 Press the cutter lightly and insert the tape, positioned gummed side down, through the paper feed roller. *See tape threading diagram*

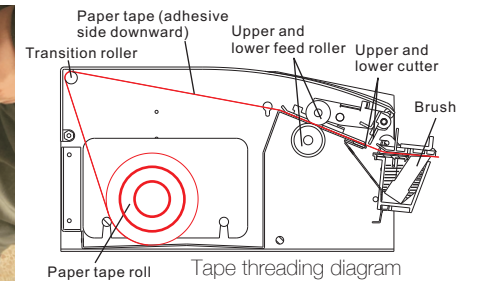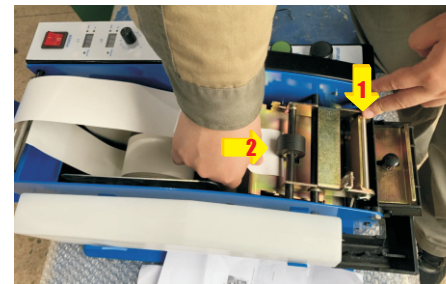

Step 6 Press the cutter lightly and install the top board back.

