

Assembly Instructions	Instrucciones de Ensamblaje	Directives d'assemblage
Customer Service US: 1-800-645-2986	Servicio de atención al Cliente US: 1-800-645-2986	Service à la clientèle Canada: 888-645-2986

Interion® Tractor Stools



Models	
B2304237	B2280965
B2304238	B2280966
B2304239	B2280967
B2304240	B2280968

1. Remove base, pneumatic cylinder, seat, foot ring (if included) and caster/glides from box.
2. Place base (1) upside down and insert casters/glides (5) (see figure 1).
3. Slide optional foot ring (4) over pneumatic cylinder from bottom (2) about halfway up the cylinder and tighten knob (6).
4. Flip the base so casters/glides are on the floor and insert pneumatic cylinder (2) as shown in (figure 2) into center hole of base with colored button up. Lightly push down. Adjust foot ring to desired height
5. Align the center hole of the underside of the seat assembly (3) with the top of the pneumatic cylinder (2) and lightly push down. With the weight of your body carefully sit on the seat. This will press the base, pneumatic cylinder, and seat together.
6. To raise the height of your stool, take your weight off of the stool and pull on the ring on the underside of the seat and adjust.
7. To lower the height of your stool you must be seated with your weight on the seat - lift up on the ring.

