

# interion®

globalindustrial.com  
1.800.645.1232

## Assembly Instructions

Customer Service  
US: 1-800-645-2986

## Instrucciones de Ensamblaje

Servicio de atención al Cliente  
US: 1-800-645-2986

## Directives d'assemblage

Service à la clientèle  
Canada: 888-645-2986

## Interion® Tractor Stools



Shown with  
Chrome Base

### Models

B2304237	B2280965	B2385439	B2385441	B2385443
B2304238	B2280966	B2385438	B2385440	B2385442
B2304239	B2280967	B2385435	B2385437	B2385445
B2304240	B2280968	B2385434	B2385436	B2385444

1. Remove base, pneumatic cylinder, seat, foot ring (if included) and caster/glides from box.
2. Place base (1) upside down and insert casters/glides (5) (see figure 1).
3. Slide optional foot ring (4) over pneumatic cylinder from bottom (2) about halfway up the cylinder and tighten knob (6).
4. Flip the base so casters/glides are on the floor and insert pneumatic cylinder (2) as shown in (figure 2) into center hole of base with colored button up. Lightly push down. Adjust foot ring to desired height
5. Align the center hole of the underside of the seat assembly (3) with the top of the pneumatic cylinder (2) and lightly push down. With the weight of your body carefully sit on the seat. This will press the base, pneumatic cylinder, and seat together.
6. To raise the height of your stool, take your weight off of the stool and pull on the ring on the underside of the seat and adjust.
7. To lower the height of your stool you must be seated with your weight on the seat - lift up on the ring.

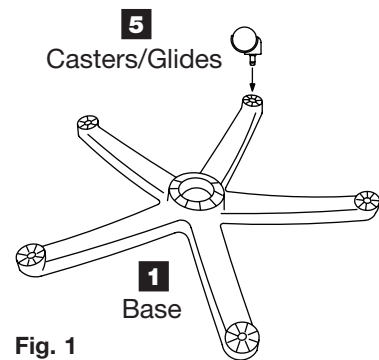


Fig. 1

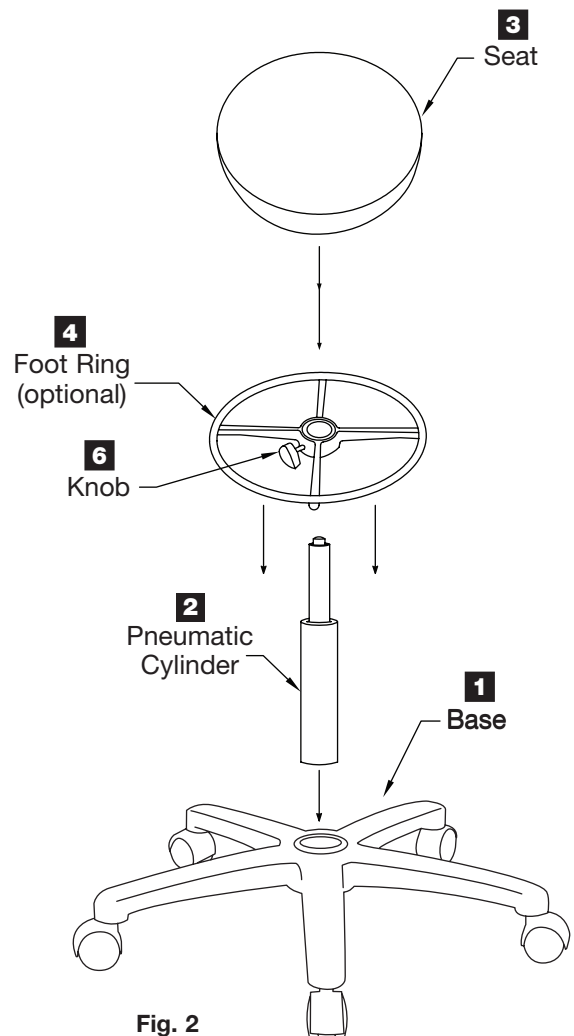


Fig. 2