

Assembly Instructions	Instrucciones de Ensamblaje	Directives d'assemblage
Customer Service	Servicio de atención al Cliente	Service à la clientèle
US: 1-800-645-2986	US: 1-800-645-2986	Canada: 888-645-2986

989068 SELF-PROPELLED, MANUAL LIFT PALLET LIFT TRUCK

Operation Maintenance Repair Parts List

Global Industrial www.globalindustrial.com

MANUAL NO. BL-GP33-0321 - 03-26-2021

WARNING

Do not operate this truck unless you have been authorized and trained to do so, and have read all warnings and instructions in Operator's Manual and on this truck.

Do not operate this truck until you have checked its condition. Give special attention to wheels, horn, battery, controller, lift system, brakes, steering mechanism, guards and safety devices.

Operate truck only from designated operating position. Do not carry passengers. Keep feet clear of truck and wear foot protection.

Observe applicable traffic regulations. Yield right of way to pedestrians. Slow down and sound horn at cross aisles and wherever vision is obstructed.

Start, stop, travel, steer and brake smoothly. Slow down for turns and on uneven or slippery surfaces that could cause truck to slide or overturn. Use special care when traveling without load as the risk of overturn may be greater. Always look in direction of travel. Keep a clear view, and when load interferes with visibility, travel with load trailing.

Use special care when operating on ramps travel slowly, and do not angle or turn. Travel with load downhill.

Do not handle loads which are higher than the chassis unless load is secured so that no part of it could fall backward. Before lifting, be sure load is centered, forks are completely under the chassis backrest.

When leaving truck, neutralize travel control, fully lower lifting mechanism and set brake. When leaving truck unattended, also shut off power.

TABLE OF CONTENTS

Section

Page

1	DESCRIF	2TION	. 1-1
	1 1	INTRODUCTION	1 1
	1-1.		1_1
	1-2.	SAFETY FEATURES	1-1
	. 0.		
2			2.1
2	2-1		.2-1
	2-1.	OPERATING PRECAUTIONS	2-1
	2-3.	BEFORE OPERATION	.2-1
	2-4.	DURING BREAK-IN	.2-2
	2-5.	CONTROLS	.2-4
	2-5.1.	POWER BUTTON	.2-4
	2-5.2.	KEY SWITCH (OPTIONAL)	.2-4
	2-5.3.	BELLY-BUTTON BUTTON	.2-4
	2-5.4.	FORWARD AND REVERSE BUTTONS	.2-4
	2-5.5.	BATTERY INDICATOR	2-4
	2-5.6.	HORN BUITON	2-4
	2-6.		.2-5
	2-0.1.	BRAKING	2-5
	2-0.2.		2-6
	2-0.0.		2-6
	2-8.	PARKING	.2-6
2			2.4
3	PLAININEL 2 1		. 3-1
	3-2	MONTHLY AND QUARTERLY CHECKS	.3-1
	3-3	BATTERY CARE	3-1
	3-3.1.	GENERAL	.3-1
	3-3.2.	SAFETY RULES	.3-1
	3-3.3.	BATTERY CARE AND CHARGING	.3-2
	3-3.4.	BATTERY CLEANING	.3-2
	3-3.5.	MAINTENANCE FREE BATTERIES	.3-2
	3-4.	CHARGING BATTERIES	.3-3
	3-5.	BATTERIES REPLACEMENT	.3-4
	3-6.	LUBRICATION.	. 3-4
4	TROUBLI	ESHOOTING	.4-1
	4-1.	GENERAL	.4-1
	4-2 .	CONTROLLER TROUBLESHOOTING	.4-3
	4-2.1.	FAULT DETECTION.	.4-3
	4-2.2.	HAND HELD PROGRAMMER (OPTIONAL)	.4-3
	4-2.3.		.4-3
	4-2.4.		.4-5
1	4-2.5.		4-5
	4-2.0.	DIAGNOSTICS AND TROUBLESHOOTING	4-5
5	CONTRO		
9		MPARTMENT	5-1
	5-1		5-1
	5-1.1.	CONTROL HEAD REMOVAL	.5-1
	5-1.2.	CONTROL HEAD INSTALLATION	.5-1
	5-1.3.	BELLY-BUTTON SWITCH REPLACEMENT	.5-3
	5-1.4.	REVERSE SWITCH REPLACEMENT	.5-3
	5-1.5.	OPTIONAL KEY SWITCH REPLACEMENT	. 5-3
	5-1.6.	POWER SWITCH REPLACEMENT.	. 5-3
	5-1.7.	HORN SWITCH REPLACEMENT.	.5-3
	5-1.8.	FORWARD SWITCH REPLACEMENT.	. 5-3

	5-2.	TRANSMISSION COVERS	5-4
	5-2.1.	REMOVAL	5-4
	5-2.2.	INSTALLATION	5-4
	5-3.	CONTROL HANDLE	5-5
	5-3.1.	CONTROL ROD REMOVAL.	5-5
	5-3.2.	CONTROL ROD INSTALLATION.	5-5
	5-3.3.	CONTROL HANDLE REMOVAL	5-5
	5-3.4.	CONTROL HANDLE INSTALLATION	5-5
6	BRAKES	FRVICING	6-1
0	6-1	BRAKES	6-1
	6-1 1	BRAKE ASSEMBLY REPLACEMENT	6-1
	0 1.1.		
7	TRANSM	ISSION, DRIVE WHEEL, LOAD WHEEL	7-1
	7-1.	DRIVE WHEEL	7-1
	7-2.	TRANSMISSION.	7-1
	7-3.	LOAD WHEEL (SINGLE WHEEL).	7-3
	7-3.1.	REMOVAL	7-3
	7-3.2.	REPAIR	7-3
	7-3.3.	LOAD WHEEL INSTALLATION	7-3
8	FI EVATIO	ON SYSTEM SERVICING	8-1
Č	8-1	LIFT LINKAGE (SINGLE WHEEL)	8-1
	8-1 1	REMOVAL	8-1
	8-1.2	REPAIR	8-2
	8-1.3		8-2
	0 1.0.		
9	HYDRAU	LIC SYSTEM SERVICING	9-1
	9-1.	HYDRAULIC ASSEMBLY REMOVAL	9-1
	9-1.1.	REMOVAL	9-1
	9-1.2.	INSTALLATION	9-2
	9-2.	HYDRAULIC PUMP SPRING REPLACEMENT	9-2
	9-3.	HYDRAULIC ASSEMBLY REPAIR	9-2
10	ELECTRI	CAL COMPONENTS	.10-1
	10-1.	ELECTRICAL CONTROL PANEL	.10-1
	10-1.1.	MAINTENANCE	.10-1
	10-1.2.	CONTROLLER REMOVAL	.10-1
	10-1.3.	CONTROLLER INSTALLATION.	.10-1
	10-1.4.	CHARGER REMOVAL	.10-1
	10-1.5.	CHARGER INSTALLATION.	.10-1
	10-1.6.	BATTERY DISCONNECT REMOVAL	.10-3
	10-1.7.	EMERGENCY DISCONNECT INSTALLATION.	10-3
	10-2.	DRIVE MOTOR	.10-3
	10-3.	DEADMAN SWITCH	.10-3
	10-3.1.	REPLACEMENT	.10-3
11	OPTIONA		11-1
12			12_1
12	ILLUGI KI		. 12-1

TABLE OF CONTENTS - Continued

LIST OF ILLUSTRATIONS

Figure	I	Page
1-1	NAME PLATE	. 1-1
1-2	989068 PALLET LIFT TRUCK	. 1-2
2-1	SAMPLE OF OPERATOR CHECK LIST	2-3
2-2	989068 PALLET LIFT TRUCK	. 2-4
2-3	BATTERY INDICATOR	. 2-4
2-4	989068 PALLET LIFT TRUCK	. 2-5
2-5	LIFT CONTROLS	2-6
3-1	BATTERY CHARGING	3-3
3-2	BATTERY REPLACEMENT	. 3-4
3-3	LUBRICATION DIAGRAM	. 3-5
4-1	CONTROLLER TERMINALS	4-3
4-2	HAND HELD PROGRAMMER	. 4-3
5-1	CONTROL HEAD	. 5-1
5-2	CONTROL HANDLE	5-2
5-3	COMPARTMENT COVER	. 5-4
6-1	TRANSMISSION, MOTOR, BRAKE	
	MOUNTING	6-2
7-1	TRANSMISSION, MOTOR, BRAKE	
	MOUNTING	. 7-2

Figure		Page
7-2	WHEEL ASSEMBLY (SINGLE WHEEL)	7-3
8-1	FRAME (SINGLE WHEEL)	8-1
8-2	LIFT LINKAGE ASSEMBLY	
	(SINGLE WHEEL)	8-3
9-1	COMPARTMENT COVER	
10-1	ELECTRICAL SYSTEM	10-2
12-1	STEERING ARM	12-2
12-2	CONTROL HEAD	12-6
12-3	COMPARTMENT COVER	12-8
12-4	TRANSMISSION MOTOR, BRAKE	
	MOUNTING	12-10
12-5	FRAME (SINGLE WHEEL)	12-14
12-6	LIFT LINK ASSEMBLY	
	(SINGLE WHEEL)	12-16
12-7	LOAD WHEEL (SINGLE WHEEL)	12-18
12-8	HYDRAULIC SYSTEM	12-20
12-9	ELECTRICAL SYSTEM	12-22
12-10	WIRING HARNESS	12-26
12-11	WIRING CABLES	12-28

LIST OF TABLES

	Page
OPERATOR CHECKS	2-2
MONTHLY AND QUARTERLY	
INSPECTION AND SERVICE CHART	3-1
RECOMMENDED LUBRICANTS	3-4
	OPERATOR CHECKS MONTHLY AND QUARTERLY INSPECTION AND SERVICE CHART RECOMMENDED LUBRICANTS

Table		Page
3-3	LUBRICATION CHART	
4-1	TROUBLESHOOTING CHART	

SECTION 1 DESCRIPTION

1-1. INTRODUCTION.

This publication describes the 24 volt 989068 lift truck distributed by Global Industrial. Included are operating instructions, planned maintenance instructions, lubrication procedures, corrective maintenance procedures and a complete parts list with part location illustrations.

Users shall comply with all requirements indicated in applicable OSHA standards and current edition of A.N.S.I. B56.1 Part II. By following these requirements and the recommendations contained in this manual, you will receive many years of dependable service from your 989068 lift truck.

1-2. GENERAL DESCRIPTION.

The self-propelled 989068 truck, Figure 1-2, lifts and transports payloads up to 3300 pounds on rigid forks. The fork frame is 27 inches wide with 48 inches long forks.

The forward and reverse motion is controlled by two buttons mounted on the control head. The control handle is used to control stopping and turning. Lift and Lower are controlled by the control handle and the control lever. The battery powered lift truck is quiet and without exhaust fumes.

The permanent magnet motor propels the lift truck in forward or reverse direction throughout the available speed range. The 989068 lift truck can be driven with forks raised or lowered. The lift truck must be protected from the elements.

The model number will be found on the name plate (Figure 1-1) along with the serial number, lifting capacity, and load center. Figure 1-2 shows the locations of the truck's main components and controls.

1-3. SAFETY FEATURES.

The 989068 is designed and engineered to provide maximum safety for operator and payload. Some of the safety features incorporated into the design are:

- Dead-man brake to apply the brake and cut off drive power when the steering arm is released.
- Belly-button switch to reverse truck should the operator accidentally pin himself against a wall or obstruction when backing up in slow speed.



Figure 1-1 Name Plate

- All control functions automatically return to "OFF" when released.
- Emergency Disconnect within operator's reach.
- Readily accessible horn button.
- Handle to provide a firm hand hold for operator.
- High visibility color scheme of truck provides visual alert of truck's presence.
- · Battery Indicator



Figure 1-2 989068 Pallet Lift Truck

ITEM	COMPONENT	ITEM	COMPONENT
1	Control Head	6	Balance Block
2	Control Handle	7	Batteries
3	Controller Cover	8	Battery Disconnect
4	Pump	9	Control Lever
5	Drive Wheel	10	Forks

SECTION 2 OPERATION

2-1. GENERAL.

This section gives detailed operating instructions for the 989068 lift truck. The instructions are divided into the various phases of operations, such as operating lift, driving, and stopping. Routine precautions are included for safe operation.

2-2. OPERATING PRECAUTIONS.

WARNING: Improper operation of the lift truck may result in operator injury, or load and/or lift truck damage. Observe the following precautions when operating the 989068 lift truck.

The following safety precautions must be adhered to at all times.

- Do not operate this truck unless you have been trained and authorized to do so and have read all warnings and instructions in this manual and on the truck.
- All warnings and instructions must be read and understood before using the equipment.
- Equipment must be inspected by a qualified person on a regular basis.
- Do not operate this truck until you have checked its condition. Give special attention to Wheels, Horn, Batteries, Controller, Lift System, Brakes, Steering Mechanism, Guards and Safety Devices
- Operate truck only from designated operation position. Wear foot protection. Do not carry passengers.
- Observe applicable traffic regulations. Yield right of way to pedestrians. Slow down and sound horn at cross aisles and wherever vision is obstructed.
- Start, stop, travel, steer and brake smoothly. Slow down for turns and on uneven or slippery surfaces that could cause truck to slide or overturn. Use special care when traveling without load as the risk of overturn may be greater.

- Always look in direction of travel. Keep a clear view, and when load interferes with visibility, travel with load or lifting mechanism trailing.
- Do not overload truck. Check nameplate for load weight and load center information.
- Before lifting, be sure load is centered, forks are completely under load, and load is as far back as possible against the chassis.
- Do not handle loads which are higher than the chassis unless load is secured so that no part of it could fall backward.
- When leaving truck, neutralize travel control. Fully lower lifting mechanism and set brake. When leaving truck unattended, turn off power switch or optional key switch and remove key.

2-3. BEFORE OPERATION

Table 2-1 covers important inspection points on the 989068 lift truck which should be checked prior to operation. Depending on use, some trucks may require additional checks.

Figure 2-1 shows a sample format for an Operator Checklist, which can be modified as necessary to fit your operation.

- **WARNING:** Periodic maintenance of this truck by a QUALIFIED TECHNICIAN is required.
- **CAUTION:** A QUALIFIED SERVICE TECHNICIAN should check the truck monthly for proper lubrication, proper fluid levels, brake operation, motor maintenance and other areas specified in the SECTION 3.
- WARNING: If the truck is found to be unsafe and in need of repair, or contributes to an unsafe condition, report it immediately to the designated authority. Do not operate it until it has been restored to a safe operating condition. Do not make any unauthorized repairs or adjustments. All service must be performed by a qualified maintenance technician.

2-4. DURING BREAK-IN

During the first 100 hours of operation, operate the truck under light load conditions:

- Prevent the new battery from over discharging.
- Perform specified preventive maintenance services carefully and completely.
- Avoid sudden stop, starts or turns.
- Perform oil changes and lubrication earlier than specified.
- Limit load to 70-80% of the rated load.

ITEM	PROCEDURE	ITEM	PROCEDURE
Transmission and hydraulic systems.	Check for signs of fluid leakage.	Wheels	Check drive wheel for cracks or damage. Move truck to check load for freedom of rotation.
Forks Safetv signs	Check for cracks and damage. Check that warning labels.	Hydraulic controls	Check operation of lift and lower to their maximum positions.
	nameplate, etc., are in good condition and legible.	Brake	Check that brake actuates when steering arm is raised to upright position
Horn	operated.	Deadman/	Check that steering arm raises to
Steering	Check for binding or looseness in steering arm when steering.	Parking brake	upright position when released and brake applies.
Travel controls	Check that speed controls on control head operate in all speed ranges in forward and reverse and that belly button	Battery disconnect	Check that battery can be disconnected and recon- nected. Check for connector damage.
	switch functions.	Battery charge	Check the battery indicator.

Table 2-1 Operator Checks

Date	Operator	r
ruck No.	Model No	0
ept	Shift _	
lour Meter Reading—Drive	Hoist	
Check	0.K. (~)	Need Maintenance
Tires		
_oad Wheels		
Horn		
_ift—Lower Control		
Attachment Operation		
Forward & Reverse Controls	_	
Steering		
Brakes Hydraulic Leaks, Cylinders, Valves, Hoses, Etc.		

Figure 2-1 Sample of Operator Check List

2-5. CONTROLS



Figure 2-2 989068 Pallet Lift Truck

2-5.1. Power Button

The power button (1, Figure 2-2) is used to switch control current on and off.

2-5.2. Key Switch (Optional)

The optional key switch is (2, Figure 2-2) has two positions, ON and OFF. Removing the key prevents use by unauthorized personnel.

2-5.3. Belly-Button Button

The belly-button button (3, Figure 2-2) minimizes the possibility of the driver being pinned by the steering arm. If the switch presses against the operator while the lift truck is being driven toward the operator, the switch changes the direction of the lift truck.

2-5.4. Forward and Reverse Buttons

The forward button (5, Figure 2-2) and the reverse button (4, Figure 2-2) provide fingertip control for driving the truck.

2-5.5. Battery Indicator

When the key switch is turned on the battery charge indicator (6, Figure 2-2) displays the battery status. The colors of the LED represent the following conditions Figure 2-3:

- The first LED lights when the battery is properly charged. As the battery charge decreases, additional LEDs will light.
- When the second to the last LED flashes, the battery is 70% discharged.
- When the last two LEDs flash alternately, the battery is 80% discharged and needs to be recharged.

The battery indicator has a memory function, it can remember the battery power after the power is shut down. The next time the power is turned on, it will show the last level of discharge



Figure 2-3 Battery Indicator

2-5.6. Horn Button

The horn button (7, Figure 2-2) located on the front of the control head activates the horn.

2-6. OPERATION

2-6.1. Forward and Reverse Travel.

- 1. Turn on the power switch (1, Figure 2-2) and the optional key switch (2). Grasp the grips of the steering head so that the forward and reverse controls can be comfortably operated by either thumb.
- 2. Lower the steering arm to a comfortable position to disengage the brake and to energize the electrical circuits.
- 3. To move forward (with load in front), slowly press the forward button (5, Figure 2-2).
- 4. To change directions or to stop the truck, press the reverse button (4, Figure 2-2). The truck will come to a stop and then, unless the button is released, accelerate in the opposition direction.

2-6.2. Braking.

Emergency Stop

Pull out the battery disconnect (8, Figure 2-4). All electrical functions are cut out and the brake is applied.

Automatic Braking

When the control handle (2, Figure 2-4) is released, it will automatically return to the vertical position and the brake will apply.

Regenerative Braking

When the travel button (4 or 5, Figure 2-2) is released, the truck automatically brakes regeneratively. Once the truck slows down the brake then fully applies.

Inversion Braking

Press the opposite direction travel button (4 or 5, Figure 2-2). The truck brake regeneratively until it starts to move in the opposite direction.



Figure 2-4 989068 Pallet Lift Truck

2-6.3. LIFT AND LOWER.

Lift

Push down on control lever (2, Figure 2-5) and move control handle (1) up and down until the desired lifting height is achieved. Reset lever (2) to the neutral position.

Lower

Pull up on control lever (2, Figure 2-5) until the desired lower height is achieved. Reset lever (2) to the neutral position.



Figure 2-5 Lift Controls

2-7. LOADING AND UNLOADING.

- 1. Move truck to location where load is to be picked up.
- 2. Move the truck into position so forks are within pallet or skid, and the load is centered over the forks and as far back as possible.
- 3. Raise forks to lift load.
- 4. Drive to area where load is to be placed.
- 5. Move truck to align load with its new position.
- 6. Lower the load until it rests squarely in place and the forks are free.
- 7. Slowly move the truck out from under the load.

2-8. PARKING.

When finished with moving loads, return the truck to its maintenance or storage area. Turn off the power switch (1, Figure 2-2) and optional key switch (2) and remove the key. Disengage the battery disconnect (8, Figure 2-4). Charge batteries as necessary. Refer to battery care instructions, SECTION 3.

SECTION 3 PLANNED MAINTENANCE

3-1. GENERAL.

Planned maintenance consists of periodic visual and operational checks, parts inspection, lubrication, and scheduled maintenance designed to prevent or discover malfunctions and defective parts. The operator performs the checks in SECTION 2, and refers any required servicing to a qualified maintenance technician who performs the scheduled maintenance and any required servicing.

3-2. MONTHLY AND QUARTERLY CHECKS.

Table 3-1 is a monthly and quarterly inspection and service chart based on normal usage of equipment eight hours per day, five days per week. If the lift truck is used in excess of forty hours per week, the frequency of inspection and service should be increased accordingly. These procedures must be performed by a qualified service technician or your Global Industrial Service Representative.

3-3. BATTERY CARE.

3-3.1. General

The 989068 may be equipped with maintenance free batteries.

The care and maintenance of the battery is very important to obtain efficient truck operation and maximum battery life.

CAUTION: Gases produced by a battery can be explosive. Do not smoke, use an open flame, create an arc or sparks in the vicinity of the battery. Ventilate an enclosed area well when charging.

CAUTION: Batteries contain sulfuric acid which may cause severe burns. Avoid contact with eyes, skin or clothing. In case of contact, flush immediately and thoroughly with clean water. Obtain medical attention when eyes are affected. A baking soda solution (one pound to one gallon of water) applied to spilled acid until bubbling stops, neutralizes the acid for safe handing and disposal.

Leakage voltage from battery terminals to battery case can cause misleading trouble symptoms with the truck's electrical system. Since components of the truck's electrical system are insulated from truck frame, leakage voltage will not normally affect truck operation unless a short circuit or breakdown of circuit wire insulation to truck frame occurs.

VISUAL CHECKS		
INTERVAL	INSPECTION OR SERVICE	
Monthly	Check electrical brake for proper operation.	
Monthly	Check load wheels for wear. A poly load wheel must be replaced if worn to within 1/16 inch of hub. Check for separation from hub.	
Monthly	Check drive wheel for wear. A poly drive wheel must be replaced if worn to within 3/4 inch of hub. Check for separation from hub.	
Monthly	Inspect wiring for loose connections and damaged insulation.	
Monthly	Inspect contactors for proper operation.	
Monthly	Check deadman brake switch for proper operation.	
Quarterly	Check lift for leakage.	
Quarterly	Check for excessive jerking of steering arm when stopping or starting.	

Table 3-1	Monthly and Quarterly Inspection and Service Chart	
	monthly and guarterly inspection and bervice on art	

3-3.2. Safety Rules

 Wear protective clothing, such as rubber apron, gloves, boots and goggles when performing any maintenance on batteries. Do not allow electrolyte to come in contact with eyes, skin, clothing or floor. If electrolyte comes in contact with eyes, flush immediately and thoroughly with clean water. Obtain medical attention immediately. Should electrolyte be spilled on skin, rinse promptly with clean water and wash with soap. A baking soda solution (one pound to one gallon of water) will neutralize acid spilled on clothing, floor or any other surface. Apply solution until bubbing stops and rinse with clean water.

- Do not bring any type of flame, spark, etc., near the battery. Gas formed while the battery is charging, is highly explosive. This gas remains in cell long after charging has stopped.
- Do not lay metallic or conductive objects on battery. Arcing will result.
- Do not touch non-insulated parts of DC output connector or battery terminals to avoid possible electrical shock.
- De-energize all AC and DC power connections before servicing battery.
- Do not charge a frozen battery.

3-3.3. Battery Care and Charging

- **CAUTION:** Never smoke or bring open flame near the battery. Gas formed during charging is highly explosive and can cause serious injury.
- 1. Charge the battery only in areas designated for that use.
- Battery terminals should be checked and cleaned of corrosion regularly. Good battery terminal contact is essential not only for operation, but also for proper charging of the battery.
- 3. The charging requirements will vary depending on the use of the truck. The battery should be given as equalizing charge on a weekly basis. This charge should normally be an additional three hours at the finish rate.

4. Make certain battery used meets weight and size requirements of truck. NEVER operate truck with an undersized battery.

3-3.4. Battery Cleaning

Always keep vent plugs tightly in place when cleaning battery. When properly watered and charged, the battery will remain clean and dry. All that is necessary is to brush or blow off any dust or dirt that may accumulate on them. However, if electrolyte is spilled or overflows from a cell, it should be neutralized with a solution of baking soda and water, brushing the soda solution beneath the connectors and removing grime from the covers. Then rinse the battery with cool water from a low pressure supply to remove the soda and loosen dirt. If batteries stay wet consistently, they may be either overcharged or over filled. This condition should be investigated and corrected.

3-3.5. MAINTENANCE FREE BATTERIES

Maintenance free batteries are completely sealed, will not require any watering and have a full 80% discharge available.

Sealed Maintenance Free batteries contain a pressure release valve and under normal operating conditions do not require any special ventilation.

CAUTION: Do not try to open this battery or remove the pressure release valve.

Only under severe overcharging, such as connected to an improperly sized charger, will any significant amount of gases be released from the battery. Also, being a valve regulated battery, it never requires watering.

3-4. CHARGING BATTERIES

Charging requirements will vary depending on depth of discharge and temperature. Follow safety rules when placing a battery on charge.

Proceed as follows:

- 1. Park truck at charging station with forks lowered and turn the key switch off.
- 2. Check the condition of the AC cord and battery cables. If there are any cuts in the cable, any exposed wires, loose plugs or connectors, DO NOT attempt to charge the batteries. Contact appropriate personnel for repairs to be made.
- 3. Pull out charger cord (1, Figure 3-1) and connect to the appropriate power supply. The LED (2) will indicate the charge status as follows:
 - a. Flashing red indicates the battery is charging.
 - b. Green light indicates the battery is fully charged.
 - c. Flashing yellow indicates that the charging circuit needs to be checked.



Figure 3-1 Battery Charging



R7006

3-5. BATTERIES REPLACEMENT

- 1. Park the truck and turn off the power.
- 2. Lift the forks to the highest position by moving control handle (1, Figure 3-2) up and down and rotate handle (1) a few degrees to the left or right.
- 3. Remove two screws (2) and remove cover (3).
- 4. Tag and disconnect the battery cables.
- 5. Replace batteries.
- 6. Install in the reverse order of removal.

3-6. LUBRICATION.

Refer to Table 3-2 for the recommended types of grease and oil. Table 3-3 in conjunction with Figure 3-3 identifies the items requiring lubrication.

Table 3-2 Recommended Lubricants (See Table 3-3 for Application)

No. 1	Hydraulic oil-HM32	
No. 2	Grease—Containing Mus ₂).	



Figure 3-2 Battery Replacement

R7165

Figure 3-3 Lubrication Diagram

Table 3-3 Lubrication Chart

FIG 3-2 INDEX NO.	LOCATION	METHOD OF APPLICATION	TYPE (Table 3-3)	APPLICATION OF LUBRICANT
1	Hydraulic oil filler neck	Can	No. 1	With lift carriage fully lowered, fill with hydraulic oil
2	Lift Linkage Fittings*	Brush	No. 2	Lubricate contact surfaces
3	Transmission oil filler neck	Can	No. 2	Fill with grease.

* Raise lift carriage to gain access to grease fittings.

NOTES

SECTION 4 TROUBLESHOOTING

4-1. GENERAL

Use Table 4-1 as a guide to determine possible causes of trouble. The table is divided into five main categories: Truck and Hydraulic System Will Not Oper-

ate: Truck Does Not Operate Forward or Reverse: Trouble With Braking: Trouble With Lifting Or Lowering, and Miscellaneous malfunctions.

Table 4-1 Troubleshooting Chart

MALFUNCTION	PROBABLE CAUSE	CORRECTIVE ACTION
TRUCK AND HYDRAULIC SYSTEM WILL NOT OPER-	a. Battery dead or disconnected.	Check battery connections and check battery voltage.
ATE Truck will not travel nor will lift sys-	b. Power switch defective.	Bypass power switch to determine if it is malfunctioning.
	c. Optional keyswitch defective.	Bypass keyswitch to determine if it is malfunctioning.
	d. Defective wiring.	Check for open circuit. Repair as required.
TRUCK DOES NOT OPERATE FORWARD OR REVERSE Truck does not travel forward or	a. Check all wiring. A loose con- nection may be the cause of malfunction.	Tighten all loose connections before further troubleshooting.
reverse. All other functions operate normally.	b. Defective deadman switch.	Check and replace switch if defective.
	c. Defective controller.	Check for proper operation and replace if necessary.
Truck travels forward but not in reverse.	Defective reverse switch in control head.	Check and replace switch if defec- tive.
Truck travels reverse but not in forward.	Defective forward switch in control head.	Check and replace switch if defec- tive.
TROUBLE WITH BRAKING Truck does not slow with brake, or brake does not engage.	a. Defective deadman switch.	Check deadman switch for continuity. If none found when the control arm is in the brake position, replace switch.
	b. Defective electric brake.	Replace brake.
Brake will not release.	a. Brake temperature above 281° F (140° C).	Allow to cool.
	b. Open brake circuitry or wiring.	Make voltage checks.
Brake drags.	Defective electric brake.	Replace.
Brake grabs.	Defective electric brake.	Replace.
Abnormal noise and chatter when brake is applied.	Defective electric brake.	Replace.

MALFUNCTION	PROBABLE CAUSE	CORRECTIVE ACTION
TROUBLE WITH LIFTING OR LOWERING		
Oil sprays or flows from the top of the hydraulic assembly.	Defective hydraulic assembly	Repair or replace hydraulic assembly.
Squealing sounds when lifting	a. Oil level too low.	Identify oil leak.
forks.	b. Lift linkage binding.	Apply grease.
Forks do not lift to top.	Oil level too low.	Add oil to reservoir.
Forks lift, but will not go down.	Control rod out of adjustment.	Loosen nut and adjust nut (to allow lowering. Secure adjust- ment, tighten nut.
Load will not hold	a. Control rod out of adjustment.	Loosen nut and adjust nut to allow lever to return to neutral posi- tion. Secure adjustment, tighten nut.
	b. Defective hydraulic assembly	Repair or replace hydraulic assembly.
MISCELLANEOUS		
Control handle does not return to	a. Defective control handle.	Replace control handle.
the upright position.	b. Binding.	Check and free the binding item. Repair or replace as needed.
Truck moves forward when control handle is pulled down.	a. Belly-button switch defective.	Check for short, and repair or replace as necessary.
	b. Short in control head.	Check wiring and repair as required.
Steering arm jerks excessively starting or stopping the truck.	Drive wheel worn.	Replace drive wheel if worn to within 3/4 inch of hub.
Drive motor is jerky.	Motor internally damaged or worn.	Replace motor.

Table 4-1 Troubleshooting Chart - Continued

4-2. CONTROLLER TROUBLESHOOTING

4-2.1. Fault Detection.

The controller provides diagnostics information to assist technicians in troubleshooting drive system problems. When a fault is detected it is stored inside the controller.

4-2.2. Hand Held Programmer (Optional)

The hand held programmer is available that is designed specifically for use with the controller. The programmer is available through your Global Industrial dealer.

4-2.3. Fault Recording.

Fault events are recorded in the controller's memory. However, multiple occurrences of the same fault are recorded as one occurrence.

The fault event list can be loaded into the programmer for readout. The Special Diagnostics mode provides access to the controller's diagnostic history file. The history file contains the entire fault event list created since the diagnostic history file was last cleared. The standard Diagnostics mode provides information about only the currently active faults.

4-2.4. General Checkout.

Carefully complete the following checkout procedure. If you find a problem during the checkout, refer to paragraph 4-2.7. for further information.

CAUTION: Put the vehicle up on blocks to get the drive wheel off the ground before beginning these tests.

Turn the keyswitch off and make sure the brake is applied, the throttle is in neutral, and the forward/reverse switches are open.

Do not stand, or allow anyone else to stand directly in front of or behind the vehicle during the tests.

1. Disconnect the battery charger and connect the programmer to the 4-pin connector (Figure 4-1) on the controller.



Figure 4-1. Controller Terminals

 Turn the lift truck key switch to the ON position. The programmer should "power up" with an initial display (2, Figure 4-2), and the controllers Status LED should begin steadily blinking a single flash. If neither happens, check for continuity in the key switch circuit and controller ground.



Figure 4-2. Hand Held Programmer

 Put the controller into the diagnostic mode by pressing the "Menu Navigation Key" (1, Figure 4-2). Using the Navigation key, select the Faults menu. Display the Faults menu by pressing the Right side of the Navigation key. Press the Right side of the Navigation key again to display the list of System Faults. The display should indicate "No Known Faults."

- 4. With the brake released, select a direction and operate the throttle. The motor should begin to turn in the selected direction. If it does not, verify the wiring to the forward/reverse switches and motor. The motor should run proportionally faster with increasing throttle. If not, refer to Paragraph 4-2.7.
- 5. Put the controller into the test mode by using the Navigation key (1) to select the "Monitor" menu. Select the Monitor mode by pressing the "Right" arrow on the Navigation key. Press the Navigation key "Down" arrow to scroll down to observe the status of the forward, reverse, brake, emergency reverse, and mode switches. Cycle each switch in turn, observing the programmer. Each input should show the correct state on the programmer.
- 6. Check the controller's fault detection circuitry as described in Paragraph 4-2.5.
- 7. Take the vehicle off the blocks and drive it in a clear area. It should have smooth acceleration and good top speed.
- 8. Test the plug braking of the vehicle. The vehicle should smoothly slow to a stop and reverse direction, with the audible plugging tone.
- Verify that all options, such as high pedal disable (HPD), static return to off (SRO), and anti-tiedown, are as desired.
- 10. Check to see whether the emergency reverse (belly button) feature is working correctly. Verify that the circuit is operational by momentarily disconnecting one of the emergency reverse wires. The vehicle should be disabled and a fault indicated.

4-2.5. Diagnostic History

The handheld programmer can be used to access the controller's diagnostic history file. When the programmer is connected to the unit, the error log file is automatically uploaded into the handheld programmer.

To see the present status of the unit, use the Menu Navigation Key (1, Figure 4-2) to select:

Faults->System Faults.

To access this log, use the Menu Navigation Key to select:

Faults->Fault History

The faults are shown as a code and descriptive text. If there are multiple faults, you have to scroll through the list using the Up and Down Buttons on the Menu Navigation Key

The faults may be intermittent faults, faults caused by loose wires, or faults caused by operator errors. Faults such as HPD or over-temperature may be caused by operator habits or by overloading.

After a problem has been diagnosed and corrected, clearing the diagnostic history file is recommended. This allows the controller to accumulate a new file of faults. By checking the new diagnostic history file at a later date, you can quickly determine whether the problem has been completely fixed.

To clear the diagnostic history file, select:

Faults->Clear Fault History.

You will be asked to confirm your actions. Use the "plus" arrow (+) for yes to clear the menu and the "minus" arrow (-) (3) to cancel your selection and not clear the Fault History.

4-2.6. Test the Fault Detection Circuitry

- 1. Put the vehicle up on blocks to get the drive wheel off the ground.
- 2. Turn off the key power switch or key switch (8) depending what is on the truck.

- Using an inline fuse holder fitted with a 10 amp fuse and alligator clips, connect the controller's M and B- terminals.
- 4. Turn on the power switch (9) and key switch (8). Release the brake and apply the throttle. The motor should not operate.
- 5. Leave the key switch on and remove the in-line fuse wire. The vehicle status should continue to remain off.
- 6. Cycle the key switch off and on. Release the brake and apply the throttle. The vehicle should now operate normally.

4-2.7. Diagnostics and Troubleshooting.

The motor controller provides diagnostics information to assist in troubleshooting drive system problems. The diagnostics information can be obtained in two ways:

· Reading the appropriate display on the programmer

NOTES

SECTION 5 CONTROL HANDLE, CONTROL HEAD AND COMPARTMENT

5-1. CONTROL HEAD

5-1.1. Control Head Removal

- 1. Turn off the power switch or key switch depending what is on the truck.
- 2. Remove three screws and separate cover and cap from control handle .
- 3. Tag and disconnect harness from switches.

5-1.2. Control Head Installation

- 1. Reconnect harness to switches.
- 2. Position cover and cap on control handle and secure with three screws.
- 3. Turn on the power switch or key switch depending what is on the truck.



R7146



R7166

Figure 5-1 Control Head





5-1.3. Belly-Button Switch Replacement.

- 1. Remove the control head as described in paragraph 5-1.1.
- 2. Remove button and springs from cover.
- 3. Remove bracket from cover and remove switch.
- 4. Unsolder harness from switch.
- 5. Solder harness to new switch.
- 6. Position new switch in bracket and install in cover.
- 7. Install the control head as described in paragraph 5-1.2.

5-1.4. Reverse Switch Replacement.

- 1. Remove the control head as described in paragraph 5-1.1.
- 2. Remove reverse switch from the top of cover.
- 3. Position new switch in cover
- 4. Install the control head as described in paragraph 5-1.2.

5-1.5. Key Switch Replacement.

- 1. Remove the control head as described in paragraph 5-1.1.
- 2. Remove optional key switch from the back of cover.
- 3. Position new switch in cover

4. Install the control head as described in paragraph 5-1.2.

5-1.6. Power Switch Replacement.

- 1. Remove the control head as described in paragraph 5-1.1.
- 2. Remove power switch from the back of cover.
- 3. Position new switch (8) in cover
- 4. Install the control head as described in paragraph 5-1.2.

5-1.7. Horn Switch Replacement.

- 1. Remove the control head as described in paragraph 5-1.1.
- 2. Remove horn switch from the front of cap.
- 3. Position new switch in cap
- 4. Install the control head as described in paragraph 5-1.2.

5-1.8. Forward Switch Replacement.

- 1. Remove the control head as described in paragraph 5-1.1.
- 2. Remove forward switch from the top of cap.
- 3. Position new switch in cap
- 4. Install the control head as described in paragraph 5-1.2.

5-2. TRANSMISSION COVERS

5-2.1. Removal.

- 1. Turn off the power switch or key switch (8) depending what is on the truck.
- 2. Remove cover.
- 3. Remove four screws, four lock washers and four flat washers
- 4. Remove cover.

5-2.2. Installation.

- 1. Place cover into position.
- 2. Secure with four screws, four lock washers and four flat washers.
- 3. Turn on the power switch or key switch depending what is on the truck.



Figure 5-3 Compartment Cover

5-3. CONTROL HANDLE

5-3.1. Control Rod Removal.

- 1. Remove control head as described in paragraph 5-1.1.
- 2. Remove cover from control handle.
- 3. Remove nuts and from rod.
- 4. Remove pin and remove control lever with rod .
- 5. Remove pin to remove spring and leaf spring from control handle.
- 6. Remove pin to free rod from lever.

5-3.2. Control Rod Installation.

- 1. Position rod and lever together and install pin.
- 2. Position spring and leaf spring in control handle and secure with pin.
- 3. Position control lever with rod in control handle and secure with pin.
- 4. Position rod in lever and install nut on rod.
- 5. Adjust nut to obtain proper operation of lever.
- 6. Install nut and jam against nut to secure the adjustment.
- 7. Install cover on control handle.
- 8. Install control head as described in paragraph 5-1.2.

5-3.3. Control Handle Removal.

- 1. Remove switch as described in paragraph 10-3.
- Remove control rod as described in paragraph 5-3.1.
- 3. Attach a hoist to control handle.
- 4. Remove pins from shaft.
- 5. Remove shaft from control handle and lift the handle from the hydraulic assembly.
- 6. Remove bushings from control handle.
- 7. Remove pin remove shaft, roller and bushing from control handle.
- 8. Remove two screws and remove bumper from handle.

5-3.4. Control Handle Installation.

- 1. Install bumper on handle and secure with two screws.
- 2. Install shaft, roller and bushing in control handle and secure with pin.
- 3. Install bushings in control handle.
- 4. Position control handle over the hydraulic assembly and secure with shaft and pins.
- 5. Install control rod as described in paragraph 5-3.2.
- 6. Install switch as described in paragraph 10-3.

NOTES

SECTION 6 BRAKE SERVICING

6-1. BRAKES.

The brake system consists of a transmission mounted brake. This brake is spring applied and electrically released.

6-1.1. Brake Assembly Replacement

- 1. Block load wheels.
- 2. Remove transmission covers as described in paragraph 5-2.
- 3. Disconnect electric brake from harness.

- 4. Remove the three mounting screws and the brake.
- 5. Place the new brake into position and secure with the three mounting screws.
- 6. Reconnect electric brake to harness.
- 7. Remove load wheel blocks and check operation.
- 8. Install the transmission covers as described in paragraph 5-2.



Figure 6-1 Transmission, Motor, Brake Mounting

SECTION 7 TRANSMISSION, DRIVE WHEEL, LOAD WHEEL

7-1. DRIVE WHEEL.

- 1. Turn off the power switch or key switch depending what is on the truck.
- 2. Remove transmission covers as described in paragraph 5-2.
- 3. Jack up the truck so the drive wheel is off the ground; then securely block the truck to prevent movement.
- 4. Disconnect cables from drive motor.
- 5. Remove five screws, lock washers, and free motor with drive wheel from housing.
- 6. Remove the six screws, six lock washers and gear.
- 7. Remove drive wheel from motor.
- 8. Remove bearings from wheel.
- 9. Install new drive wheel in reverse order of removal.
- 10. Install the transmission covers as described in paragraph 5-2.

11. Turn on the power switch (or key switch depending what is on the truck.

7-2. TRANSMISSION.

- 1. Turn off the power switch or key switch depending what is on the truck.
- 2. Remove transmission covers as described in paragraph 5-2.
- 3. Remove the brake as described in paragraph 6-1.1.
- 4. Remove the control handle as described in paragraph 5-3.
- 5. Remove four screws, four lock washers, four flat washers and remove hydraulic assembly.
- 6. Support the housing and remove five screws, five lock washers and plate
- 7. Free housing (8) from frame.
- 8. Install new transmission by reversing the steps above.



Figure 7-1 Transmission, Motor, Brake Mounting

SECTION 8 ELEVATION SYSTEM SERVICING

8-1. Lift Linkage (SINGLE WHEEL)

8-1.1. Removal

- 1. Lift complete truck to height sufficient to permit access to lift linkage under forks. Provide blocking under frame, transmission and at tips of the forks.
- 2. Turn off power switch or key switch depending what is on the truck.
- 3. Remove pins and remove shafts.
- 4. Remove pins from each side of frame. Support link assembly and remove shaft.
- 5. Remove pins and remove shafts and washers.
- 6. Lower link assembly to the floor.



Figure 8-1 Frame (Single Wheel)

8-1.2. Repair

- 1. Remove pins, shafts and load wheels from brackets.
- 2. Remove pins and shafts. Free brackets from tension bars.
- 3. Remove bushings from brackets if replacement is necessary,
- 4. Remove pins from tension bars and free tension bars from link.
- 5. Loosen nuts and remove clevises from tension bars.
- 6. Install reassemble by reversing the steps above.

8-1.3. Installation

- 1. Position link assembly under frame.
- 2. Raise link assembly into position and install shaft through frame Secure shaft with pins.
- 3. Position wheel brackets in frame and install shafts. Secure shafts with pins).
- 4. Position link assembly and install shafts Secure shafts with pins,
- 5. Remove blocking and lower the truck to the ground.
- 6. Turn on power switch or key switch depending what is on the truck.


Figure 8-2 Lift Linkage Assembly (Single Wheel)

NOTES

SECTION 9 HYDRAULIC SYSTEM SERVICING

9-1. HYDRAULIC ASSEMBLY REMOVAL

The hydraulic system and electrical system can be removed as an assembly to provide additional clearance for various maintenance procedures.

WARNING: When forks are raised, pressure exists in the hydraulic system lines and fittings. To ensure release of pressure, forks must be fully lowered and the batteries disconnected before performing any maintenance on the hydraulic system.

9-1.1. Removal

- 1. Fully lower forks.
- 2. Turn off power switch or key switch depending what is on the truck.
- 3. Remove screw.
- 4. Lift the fork frame high enough to free piston rod from the frame. Provide blocking under forks.
- 5. Remove the controller as described in paragraph SECTION 10
- 6. Remove the transmission covers as described in paragraph 5-2.



Figure 9-1 Hydraulic System

- 7. Remove the control handle as described in paragraph 5-3.3.
- 8. Remove four screws, four lock washers, four flat washers and assembly.

9-1.2. Installation

- 1. Position assembly on the frame and secure with four screws, four lock washers, four flat washers.
- 2. Lift the fork frame and remove blocking from under forks. Slowly lower the fork frame inserting piston rod in position in the fork frame.
- 3. Install screw.
- 4. Install the control handle as described in paragraph 5-3.4.
- 5. Install the transmission covers as described in paragraph 5-2.
- 6. Install controller as described in paragraph SEC-TION 10
- 7. Turn on power switch or key switch depending what is on the truck.

9-2. HYDRAULIC PUMP SPRING REPLACEMENT

- 1. Fully lower forks.
- 2. Turn off power switch or key switch depending what is on the truck.
- 3. Remove the control handle as described in paragraph 5-3.3.
- 4. Remove piston rod, seat, wiper, seal and spring.
- 5. Replace the spring and reassembly in reverse order.

9-3. HYDRAULIC ASSEMBLY REPAIR

- 1. Fully lower forks.
- 2. Turn off power switch or key switch depending what is on the truck.
- 3. Remove the control handle as described in paragraph 5-3.3.
- 4. Refer to Figure 9-1 for disassembly.
- 5. Reassembly in reverse order.

SECTION 10 ELECTRICAL COMPONENTS

10-1.ELECTRICAL CONTROL PANEL

10-1.1. Maintenance

NOTE: Erratic operation of the truck may be caused by defective controller components. Before removing the electrical panel, perform troubleshooting procedures per SECTION 4, to determine corrective action to be taken.

There are no user-serviceable parts inside the controller. No attempt should be made to open the controller. Opening the controller may damage it and will void the warranty.

The controller is programmed at the factory specifically for the truck model on which it is equipped. It is important to replace the controller with the correct preprogrammed unit to assure proper performance settings intended for that particular truck. See Figure 12-12 for the preprogrammed controller number.

It is recommended that the controller exterior be cleaned periodically, and if a Curtis Handset is available, this periodic cleaning provides a good opportunity to check the controller's diagnostic history file. It is also recommended that the controller's fault detection circuitry be checked whenever the vehicle is serviced.

10-1.2. Controller Removal.

- 1. Turn off power switch or key switch depending what is on the truck.
- 2. Remove screw, lock washer and clamp securing the wiring to the cover.
- Remove remaining four screws, lock washers (6) and cover and free the cover from the hydraulic assembly.
- 4. Tag and disconnect harnesses from controller.
- 5. Tag and disconnect cables from controller.

6. Remove two nuts, two lock washers, two screws and separate controller from cover.

10-1.3. Controller Installation.

- 1. Position controller in cover and secure with two screws, two nuts and two lock washers.
- 2. Reconnect harness to controller.
- 3. Reconnect cables from controller.
- 4. Secure cover with controller to the hydraulic assembly with four screws and cover.
- 5. Secure wiring to cover with clamp, lock washer and screw.
- 6. Turn on power switch or key switch depending what is on the truck.

10-1.4. Charger Removal.

- 1. Turn off power switch or key switch depending what is on the truck.
- 2. Remove cap. Tag and disconnect cable from charger.
- 3. Tag and disconnect charger lead from LED lamp.
- 4. Tag and disconnect remaining two charger leads.
- 5. Remove four nuts, four screws and two brackets. Remove charger.

10-1.5. Charger Installation.

- 1. Reposition charger and secure with two brackets, four screws and four nuts.
- 2. Reconnect charger lead to LED lamp.
- 3. Reconnect the two remaining charger leads.
- 4. Reconnect cable to charger and install cap.
- 5. Turn on power switch or key switch depending what is on the truck.



Figure 10-1 Electrical System

10-1.6. Battery Disconnect Removal.

- 1. Turn off power switch or key switch depending what is on the truck.
- 2. Remove battery disconnect from connector.
- 3. Tag and disconnect connector from the battery and controller.
- 4. Remove two screws, two flat washers and bracket.
- 5. Remove two screws and remove battery disconnect from the frame.

10-1.7. Emergency Disconnect Installation.

- 1. Position connector on the frame and secure with two screws.
- 2. Install bracket and secure with two screws and two flat washers.
- 3. Reconnect connector to the battery and controller.
- 4. Reinstall battery disconnect to connector.
- 5. Turn on power switch or key switch depending what is on the truck.

10-2.DRIVE MOTOR.

The drive motor exposed surfaces should be cleaned at least once a month to assure proper cooling of motor. Use an air hose to blow dust off of motor surfaces.

The drive motor is replaceable but not repairable. Refer to paragraph 7-1.

10-3.DEADMAN SWITCH

10-3.1. Replacement

- 1. Turn off power switch or key switch depending what is on the truck.
- 1. Disconnect wiring from the deadman switch.
- 2. Remove the two screws, bracket and switch.
- 3. Position the new switch, bracket and secure with the two screws.
- 4. Turn on power switch or key switch depending what is on the truck.

NOTES

SECTION 11 OPTIONAL EQUIPMENT

NOTES

SECTION 12 ILLUSTRATED PARTS BREAKDOWN

Following is an illustrated parts breakdown of assemblies and parts associated with the 989068 Lift Truck.



STEERING ARM

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-320000-00	CONTROL HANDLE	1	
2	1121-300001-00	COVER	1	
3	0000-000179-00	SCREW	2	
4	0000-000908-00	BUSHING	2	
5	1121-300004-00	SHAFT	1	
6	0000-001232-10	COTTER PIN, M4 X 50	2	
7	1121-300003-00	ROLLER	1	
8	0000-001242-10	BUSHING, 1220	1	
9	1121-300002-00	SHAFT	1	
10	0000-001233-10	PIN, M4 X 20	1	
11	1121-330001-00	LEAF SPRING	1	
12	1121-330002-00	TORSIONAL SPRING	1	
13	0000-000679-00	PIN, M4 X 30	1	
14	1121-330004-00	CONTROL LEVER	1	Used up to serial number E2410609
14a	1121-330003-00	ROLLER	1	NOT PICTURED - Used up to Serial # E2410609
14b	0000-001234-10	ROUND PIN Ø4×18	1	NOT PICTURED - Used up to Serial # E2410609
14c	1121-330004-00-B	CONTROL LEVER	1	Used from serial number E2410610
15	0000-000077-00	SCREW M6×12	2	
16	0000-000380-00	FLATWASHER Ø6	2	
17	0000-001235-10	PIN, M6 X 30	1	
18	0000-001236-10	PIN, M4 X 12	1	
19	1121-330006-00-В	PULL ROD	1	
20	0000-000108-00	NUT	1	
21	0000-000923-00	NUT	1	
22	1115-500017-00	LIFT LIMIT SWITCH ASSEMBLY	1	



STEERING ARM - CONTINUED

Pos.	Part Number	Description	Qty. Reqd.	Notes
23	1115-500014-00	BRACKET	1	
24	0000-001238-00	SCREW, M3 X 16	2	
25	1121-310000-00-B	CONTROL HEAD	1	Used up to serial number E2410609
25a	1121-310000-0A-B	CONTROL HEAD	1	Used from serial number E2410610
26	2107-300001-00	BUMPER	1	Used up to serial number 424170700
26a	1121-300005-00	BUMPER	1	Used from serial number 424170701



Figure 12-2 Control Head - Used up to Serial # E2410609

CONTROL HEAD - Used up to Serial # E2410609

Pos.	Part Number	Description	Qty. Reqd.	Notes
_	1121-310000-00-В	CONTROL HEAD	1	
1	1121-310002-00	COVER	1	
2	1121-310001-00	САР	1	
3	1121-310003-00	BUTTON, REVERSE	1	
4	1280-360013-00	BUTTON BRACKET	1	
5	1121-522000-00	FOR, REV & HORN SWITCHES	3	
6	1121-310004-00	SPRING	1	
7	1121-521000-00	BELLY-BUTTON SWITCH ASSY	1	
8	1121-523000-00	POWER SWITCH	1	Used up to serial number E2319422
8a	1115-520019-0A	KEY SWITCH	1	Std. as of serial number E2319423, before that it was Optional.
9	0000-001243-00	SCREW, M3 X 6	3	
10	1121-520005-00	BATTERY DISCHARGE	1	
11	0000-000004-00	SCREW	3	
12	1220-560002-00	BELLY-BUTTON SWITCH	1	
13	0000-001133-00	O-RING ø3.15×1.8	3	



Pos.	Part Number	Description	Qty. Reqd.	Notes
_	1121-310000-0A-B	CONTROL HEAD	1	
1	1121-310002-0A-B	COVER	1	
2	1121-310001-0A-B	САР	1	
3	0000-000004-00	SCREW M5×12	3	
4	1121-310003-00	BUTTON REVERSER COVER	1	
5	1121-310004-00	SPRING	1	
6	0000-001243-00	SCREW M3×6	3	
7	1121-520013-00	INTEGRATED MODULE	1	
8	0000-001133-00	O-RING Ø3.15×1.8	3	
9	1120-500016-10	KEY	1	One set of keys (2) - Without Cap
9a	1115-500016-00	KEY	1	One set of keys (2) - With Cap

CONTROL HEAD - Used from Serial # E2410610



COMPARTMENT COVER

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-141000-00	LOWER COVER	1	Used up to serial number 424210520 - After that replaced by Pos. # 14
2	1121-140001-00	UPPER COVER	1	Used up to serial number 424210520 - After that Replaced by Pos. # 14
3	1121-100002-10	BATTERY COVER, FRAME WIDTH 27" (685MM)	1	Frame Width 27" (685mm)
4	1121-100001-0A	CHARGER BRACKET	1	Used up to serial number E2320233
4a	1121-510000-00	CHARGER BRACKET	1	Used from serial number E2320234
5	0000-000109-00	SCREW	4	
6	0000-000159-00	LOCK WASHER	4	
7	0000-000176-00	WASHER	4	
8	0000-000077-00	SCREW	2	
9	0000-000056-00	WASHER	2	
10	2112-410005-00	RUBBER CUSHION	2	
11	0000-000380-00	FLAT WASHER	2	
12	1121-100004-00	RUBBER CUSHION	2	
13	0000-000923-00	NUT	3	
14	1121-143000-00	COVER	1	Used between serial number 424210521 - 4281501872
14a	1121-143000-0A	COVER	1	Used from serial number 4281501873



Figure 12-5 Transmission Motor, Brake Mounting - Used up to serial number 426150000

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-200000-00	DRIVE UNIT	1	Includes 2 - 27
2	1115-520012-00	BRAKE ASSEMBLY	1	
3	0000-000662-00	KEYWAY	2	
4	1115-220000-00	DRIVE WHEEL	1	
5	1115-200010-00	DRIVE BAFFLE	1	
6	1115-250000-00	MOTOR	1	
7	0000-000663-00	BEARING	2	
8	1121-210001-00	TRANSMISSION HOUSING	1	
9	0000-000671-00	OIL SEAL	1	
10	1115-200007-00	TRANSMISSION CAP	1	
11	0000-000386-00	SCREW	8	
12	0000-000056-00	WASHER	8	
13	0000-000013-00	GREASE FITTING	1	
14	0000-000704-00	PIN	2	
15	1115-200001-00	GEAR BOX CAP	1	
16	0000-000658-00	CLIP	1	
17	0000-000659-00	CLIP	2	
18	0000-000667-00	BEARING	1	
19	1115-GSX-10	SPIRAL GEAR SET	1	Includes two gears pos. # 19
20	0000-000680-00	BEARING	1	
21	1115-GSX-20	GEAR RING SET	1	Includes two gears pos. # 21
22	0000-000660-00	КЕҮ	1	
23	0000-000026-00	SCREW	5	
24	0000-000159-00	LOCK WASHER	10	
25	0000-000670-00	OIL SEAL	1	
26	0000-000661-00	SCREW	6	

TRANSMISSION MOTOR, BRAKE MOUNTING - USED UP TO SERIAL NUMBER 426150000



Figure 12-5 Transmission Motor, Brake Mounting - Continued - Used up to serial number 426150000

Qty. Description Pos. Part Number Notes Reqd. 0000-000206-00 WASHER 27 6 28 1115-240001-00 BRAKE DISC 1 29 0000-000665-00 SCREW 3 30 0000-001230-00 BEARING 1 31 BEARING 1 0000-001231-00 1115-231000-00 32 TERMINAL BLOCK 1 0000-000004-00 2 33 SCREW 34 1115-250001-00 BRUSH 4 BRUSH SPRING 4 35 1115-250002-00 36 1115-250003-00 BRUSH HOLDER 1 37 1121-200001-00 CONNECTING PLATE 1 SCREW 38 0000-000151-00 5

TRANSMISSION MOTOR, BRAKE MOUNTING - CONTINUED - USED UP TO SERIAL NUMBER 426150000



Figure 12-6 Transmission Motor, Brake Mounting Used between serial number 426150001 - 427202925

TRANSMISSION MOTOR, BRAKE MOUNTING USED BETWEEN SERIAL NUMBER 426150001 - 427202925

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-200000-A0	DRIVE UNIT	1	Includes pos. # 2 - 27
2	1115-520012-00	BRAKE ASSEMBLY	1	Used up to serial number 426200143
2a	1115-520012-0A	BRAKE ASSEMBLY	1	Used between serial number 426200144 - 427190826
2b	1115-520012-10	BRAKE ASSEMBLY	1	Used between serial number 427190827 - 427202925
3	0000-000662-00	KEYWAY	2	
4	1115-220000-A0	DRIVE WHEEL	1	
5	1115-200010-00	DRIVE BAFFLE	1	
6	1115-250000-00	MOTOR	1	
7	0000-000663-00	BEARING	2	
8	1121-210001-00	TRANSMISSION HOUSING	1	
9	0000-000671-00	OIL SEAL	1	
10	1115-200007-00	TRANSMISSION CAP	1	
11	0000-000386-00	SCREW	14	
12	0000-000056-00	WASHER	14	
13	0000-000013-00	GREASE FITTING	1	
14	0000-000704-00	PIN	2	
15	1115-200001-00	GEAR BOX CAP	1	
16	0000-000658-00	CLIP	1	
17	0000-000659-00	CLIP	2	
18	0000-000667-00	BEARING	1	
19	1115-GSX-10	SPIRAL GEAR SET	1	Includes 2 gears.
20	0000-000680-00	BEARING	1	
21	1115-GSX-20	GEAR RING SET	1	Includes 2 gears.



Figure 12-6 Transmission Motor, Brake Mounting Used between serial number 426150001 - 427202925 - Continued

TRANSMISSION MOTOR, BRAKE MOUNTING USED BETWEEN SERIAL NUMBER 426150001 - 427202925 - CONTINUED

Pos.	Part Number	Description	Qty. Reqd.	Notes
22	0000-000660-00	KEY	1	
23	0000-000026-00	SCREW	5	
24	0000-000159-00	LOCK WASHER	10	
25	0000-001788-00	OIL SEAL	1	
26	3020-010000-91	SCREW	6	
27	0000-000206-00	WASHER	6	
28	1115-240001-00	BRAKE DISC	1	
29	0000-000665-00	SCREW M4×45	3	Used up to serial number 426200143
29a	1115-240003-0A	SCREW M4×40	3	From serial number 426200144
30	0000-001230-00	BEARING	1	
31	0000-001231-00	BEARING	1	
32	1115-231000-00	TERMINAL BLOCK	1	
33	0000-000004-00	SCREW	2	
34	1115-250001-00	BRUSH	4	
35	1115-250002-00	BRUSH SPRING	4	
36	1115-250003-00	BRUSH HOLDER	1	
37	1121-200001-00	CONNECTING PLATE	1	
38	0000-000151-00	SCREW	5	
39	1115-200001-A0	INNER RIM	1	
40	1115-240002-0A	SCRAPER SEAL	1	Used from serial number 426200144
41	1115-200020-00	PLATE	1	Used between serial number 427190827 - 427202925



Figure 12-7 Transmission Motor, Brake Mounting Used from serial number 427202926

TRANSMISSION MOTOR, BRAKE MOUNTING USED FROM SERIAL NUMBER 427202926

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-200000-03	DRIVE UNIT	1	Includes pos. # 2 - 27
2	1115-520012-10	BRAKE ASSEMBLY	1	
3	0000-000662-00	KEYWAY	2	
4	1115-220000-A0	DRIVE WHEEL	1	Used up to serial number 427211547
4a	1115-220000-D0	DRIVE WHEEL	1	Used from serial number 427211548
5	1115-200010-00	DRIVE BAFFLE	1	
6	1115-250000-00	MOTOR	1	
7	0000-000663-00	BEARING	2	
8	1121-210001-0E	TRANSMISSION HOUSING	1	
9	0000-000671-00	OIL SEAL	1	
10	1115-200007-00	TRANSMISSION CAP	1	
11	0000-000386-00	SCREW	14	
12	0000-000056-00	WASHER	14	
13	0000-000013-00	GREASE FITTING	1	
14	0000-000704-00	PIN	2	
15	1115-200001-00	GEAR BOX CAP	1	
16	0000-000658-00	CLIP	1	
17	0000-000659-00	CLIP	2	
18	0000-000667-00	BEARING	1	
19	1121-GB03-00	SPIRAL GEAR SET	1	Includes 2 gears.
20	3090-010000-42	BEARING	1	
21	1121-GB03-10	GEAR RING SET	1	Used between serial number 427202926-427211547, 2 gears.
21a	1121-GB03-1A	GEAR RING SET	1	Used from serial number 427211548, Includes 2 gears.



Figure 12-7 Transmission Motor, Brake Mounting Used from serial number 427202926 - Continued

TRANSMISSION MOTOR, BRAKE MOUNTING USED FROM SERIAL NUMBER 427202926 - CONTINUED

Pos.	Part Number	Description	Qty. Reqd.	Notes
22	0000-000660-00	KEY	1	
23	0000-000026-00	SCREW	5	
24	0000-000159-00	LOCK WASHER	10	
25	0000-001788-00	OIL SEAL	1	
26	3020-010000-91	SCREW	6	Used up to serial number 427211547
26a	1115-200021-D0	SCREW	6	Used from serial number 427211548
27	0000-000206-00	WASHER	6	
28	1115-240001-00	BRAKE DISC	1	
29	0000-000665-00	SCREW M4×45	3	Used up to serial number 426200143
29a	1115-240003-0A	SCREW M4×40	3	From serial number 426200144
30	0000-001230-00	BEARING	1	
31	0000-001231-00	BEARING	1	
32	1115-231000-00	TERMINAL BLOCK	1	
33	0000-000004-00	SCREW	2	
34	1115-250001-00	BRUSH	4	
35	1115-250002-00	BRUSH SPRING	4	
36	1115-250003-00	BRUSH HOLDER	1	
37	1121-200001-00	CONNECTING PLATE	1	
38	0000-000151-00	SCREW	5	
39	1115-200001-A0	INNER RIM	1	Used up to serial number 427211547
39a	1115-200001-D0	INNER RIM	1	Used from serial number 427211548
40	1115-240002-0A	SCRAPER SEAL	1	Used from serial number 426200144
41	1115-200020-00	PLATE	1	Used between serial number 427190827 - 427202925
42	0000-000386-00	SCREW M6×25	6	Used up to serial number 427211547
42a	1115-200022-D0	SCREW M6×25	6	Used from serial number 427211548



FRAME (SINGLE WHEEL)

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-110000-1A-01	FORK FRAME	1	Frame Width 27" (685mm) , Fork Length 45" (1150mm)
2	1121-120000-00	BACK FRAME	1	
3	0000-000708-00	ROLL PIN	4	Used up to serial number E24150468 and 424150330
За	0000-001456-00	ROLL PIN	4	Used from serial number 424150331
4	1121-130001-10	LONG SHAFT	1	
5	1121-130002-00	SHORT SHAFT	2	
6	1115-130004-0A	FRONT PULL ROD SHAFT	2	
7	0000-001333-00	PIN Ø5×35	1	


LIFT LINK ASSEMBLY (SINGLE WHEEL)

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-131000-10	DOWN LINK, FRAME WIDTH 27"	1	Frame Width 27" (685mm)
2	1115-130008-00	LOAD WHEEL SHAFT ROLLER	4	
3	1121-130003-00	SHAFT	2	
4	1121-132010-00	NUT M22×1.5	2	
5	1121-132001-00	ROD END	2	
6	1121-132000-00-01	LONG LINK, FORK LENGTH 48"	2	Fork Length 48" (1220mm)
7	0000-000907-00	BUSHING	4	
8	1115-130005-4A	WHEEL BRACKET	2	
9	0000-000908-00	BUSHING	4	
10	1115-130003-00	LOAD WHEEL BRACKET PIVOT SHAFT	2	
11	0000-000708-00	ROLL PIN	8	Used up to serial number E24150468 and 424150330
11a	0000-001456-00	ROLL PIN	8	Used from serial number 424150331
12	1115-130007-40	LOAD WHEEL SHAFT	2	
13	1121-132200-00-01	LONG ROD FORK LENGTH 48"	1	Fork Length 48" (1220mm)
14	1115-133000-40	LOAD WHEEL ASSY. (WITH BEARINGS)	2	
15	0000-000011-00	BUSHING	2	
16	0000-001241-00	BUSHING	2	
17	1115-130005-4A-B	WHEEL BRACKET ASSEMBLY	2	



LOAD WHEEL (SINGLE WHEEL)

Pos.	Part Number	Description	Qty. Reqd.	Notes
_	1115-133000-40	LOAD WHEEL ASSY	1	
1	0000-000020-00	BEARING	2	Used up to serial number 427171687
1a	3090-000000-04	BEARING	2	Used from serial number 427171688
2	1115-133002-40	LOAD WHEEL	1	



HYDRAULIC SYSTEM

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-410000-00	HYDRAULIC ASSEMBLY	1	Includes 6-26
2	0000-000151-00	SCREW	4	
3	0000-000159-00	LOCK WASHER	4	
4	0000-000176-00	WASHER	4	
5	0000-000077-00	SCREW	1	
6	1121-410001-00	STEEL BALL	1	
7	1121-410007-00	PISTON ROD	1	
8	1121-410008-00	SPRING SEAT	1	
9	1121-410009-00	SPRING	1	
10	1121-410010-00	PRESSURE RELEASE LEVER	1	
11	0000-001237-10	PIN, M8 X 45	1	
12	1121-410011-00	ROD	1	
13	0000-000108-00	NUT	1	
14	1121-410012-00	UNLOADING VALVE	1	
15	1121-410013-00	RELIEF VALVE	1	
16	1121-410014-00	CONTROL VALVE	1	
17	1121-410015-00	RING, WIPER 18	1	
18	1121-410016-00	XY SEAL 18	1	
19	1121-410017-00	RING, WIPER 32	1	
20	1121-410018-00	O-RING 32 X 3.55	1	
21	1121-410002-00	PISTON ROD	1	
22	1121-410019-00	SEAL 32	1	
23	1121-410020-00	O-RING 37.5 X 2.65	2	
24	1121-410021-00	O-RING 65 X 2.65	1	
25	1121-410022-00	САР	1	
26	1121-410023-00	CYLINDER	1	
	1121-ZZG-0A	SEAL KIT FOR HYDRAULIC ASSY	1	Includes 17-20 & 22-24



Figure 12-12 Electrical System

ELECTRICAL SYSTEM

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-142000-00	CONTROLLER COVER	1	Used up to serial number E2321553
1a	1121-142000-0A	CONTROLLER COVER	1	Used from serial number E2321554
2	1115-510004-00-90	CONTROLLER	1	
3	0000-000121-00	SCREW	2	
4	0000-000196-00	NUT M8	2	
5	0000-000651-00	SCREW	5	
6	0000-000122-00	LOCK WASHER	7	
7	1121-500002-00	CLAMP	1	
8	0000-000139-00	NUT M4	2	
9	1121-532000-00-B	BATTERY DISCONNECT ASSY	1	Used up to serial number E2320233
9a	1121-500004-10-B	BATTERY DISCONNECT ASSY	1	Used from serial number E2320234
10	0000-000981-00	SCREW, M3 X 20	4	
11	1121-532000-00	BATTERY DISCONNECT	1	
12	1121-500003-00	T HANDLE	1	Used up to serial number E2320233
12a	1121-500004-00	T HANDLE	1	Used from serial number E2320234
13	0000-000982-00	NUT, M3	2	
14	1115-100006-Z0	MOUNTING BRACKET	1	
15	0000-000077-00	SCREW	2	
16	0000-000380-00	FLAT WASHER	2	
17	1121-100004-00	RUBBER CUSHION	1	
18	1121-520007-00	LED LAMP	1	
19	1115-510009-00	LED SOCKET	1	
20	1121-520004-0A	CHARGER - 4A	1	
21	1115-500006-10	CHARGER CABLE	1	



Figure 12-12 Electrical System - Continued

ELECTRICAL SYSTEM - CONTINUED

Pos.	Part Number	Description	Qty. Reqd.	Notes
22	1115-500009-00	CHARGER BRACKET	2	
23	0000-000004-00	SCREW	4	
24	0000-001026-00	NUT M5	4	
25	1115-120002-00	CHARGER CAP	1	
26	1121-531000-0A	BATTERY CONNECTOR	1	
27	1120-540001-00-В	FUSE HOLDER	1	
28	1115-510003-00	FUSE 100A	1	
29	0000-000126-00	SCREW	2	
30	0000-000176-00	WASHER	4	
31	1115-520021-00	GROUND WIRE	1	Used from serial number 426191250



WIRING HARNESS - USED UP TO SERIAL NUMBER E2410609

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-520001-00	HARNESS, MASTER	1	
2	1121-520002-00	CONTROLLER WIRE HARNESS	1	
3	1121-520006-0A	BRAKE WIRE HARNESS	1	
4	1121-520008-00	CHANGER WIRE HARNESS	1	



WIRING HARNESS - USED FROM SERIAL NUMBER E2410610

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-520011-00	HARNESS, MASTER	1	
2	1121-520012-00	CONTROLLER WIRE HARNESS	1	
3	1121-520006-0A	BRAKE WIRE HARNESS	1	Used up to serial number 427190826
3a	1121-520006-0D	BRAKE WIRE HARNESS	1	Used from serial number 427190827
4	1121-520008-00	CHANGER WIRE HARNESS	1	



WIRING CABLES

Pos.	Part Number	Description	Qty. Reqd.	Notes
1	1121-530002-00	CABLE, BATTERY CONNECTOR	1	
2	1121-530001-0A	CABLE, B-	1	
3	1121-530003-00	CABLE, M1	1	
4	1121-530004-00	CABLE, M2	1	
5	1121-500001-00	BATTERY	2	Used up to serial number 427153349
5a	1121-500001-0A	BATTERY	2	Used from serial number 427153350. Battery has a strap.
6	1121-531000-0A	BATTERY CONNECTOR	1	
7	1121-532000-00	BATTERY DISCONNECT	1	
8	1121-530005-00	FUSE-BATTERY CABLE	1	

NOTES

