



LOCK CORE KIT



1 Core



1 Core Removal Key



2 Keys

INSTALLATION INSTRUCTIONS

Remove Original Core from Cabinet

- 1) The lock currently in the cabinet must be in the unlocked position.
- 2) Insert Core Removal Key into lock. **Be sure Core Removal Key snaps completely into the lock core.**
- 3) Place a slight twisting force on the Core Removal Key and slowly pull the Key and old core out of the lock barrel.

Install New Core in Cabinet

- 4) Insert the Core Removal Key into the new Core. **Be sure it snaps completely in.**
- 5) Slide the new Core into the lock barrel remaining in the cabinet.
- 6) Once the core is completely inserted, place your thumb over the core front surface and hold into place while removing the Core Key.

Your new lock is now ready to use.

Customer Service: 800-383-7414