CONTENTS

REF.	QTY.	DESCRIPTION
1	1	CHAIR BASE
2	1	GAS SPRING
3	1	SEAT PLATE MECHANISM
4	1	SEAT CUSHION
5	1	BACK REST CUSHION
6	1	RIGHT ARM REST
7	1	LEFT ARM REST
H1	5	Caster
H2	1	Base Cover
H3	6	3/8-16 x 1 ½ Lg. hex flange socket head screw
H4	10	Plain Washer
H5	4	3/8-16 x 1 ¾ Lg. hex flange socket head screw
H6	4	3/8-16 x 2 ¼ Lg. hex socket head cap screw
H7	2	Upper end cap
H8	2	lower end cap
	1	5mm Hex Key



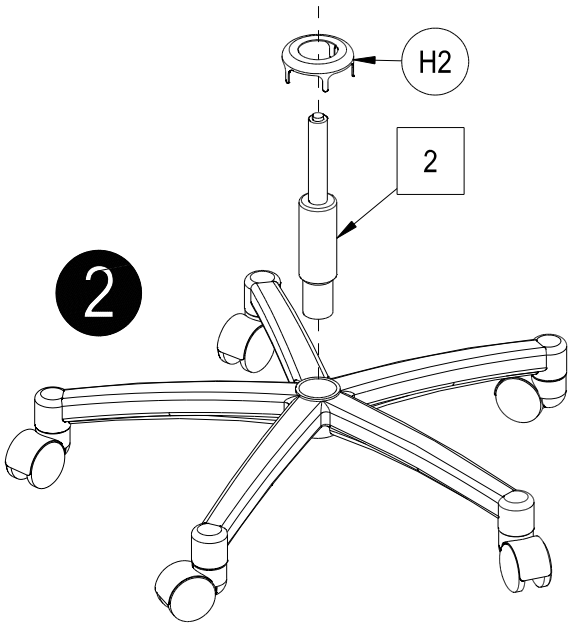
GLOBAL

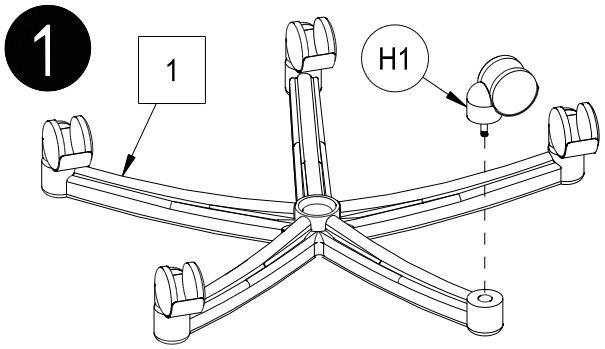
www.globalindustrial.com
US: 888-628-3466
Canada: 888-645-2986
Mexico: 01.800.681.6940

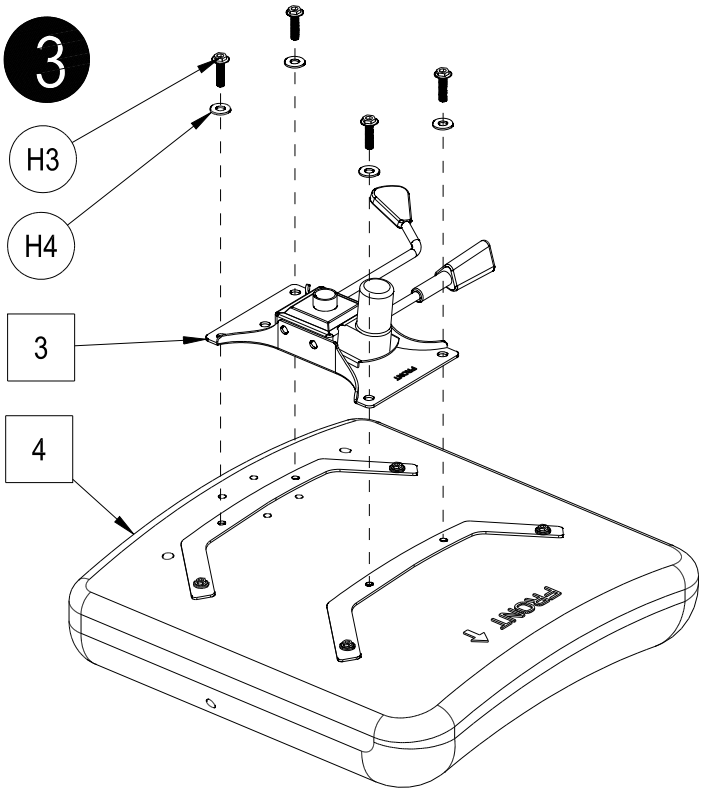
PARAMOUNT BIG & TALL TASK CHAIR

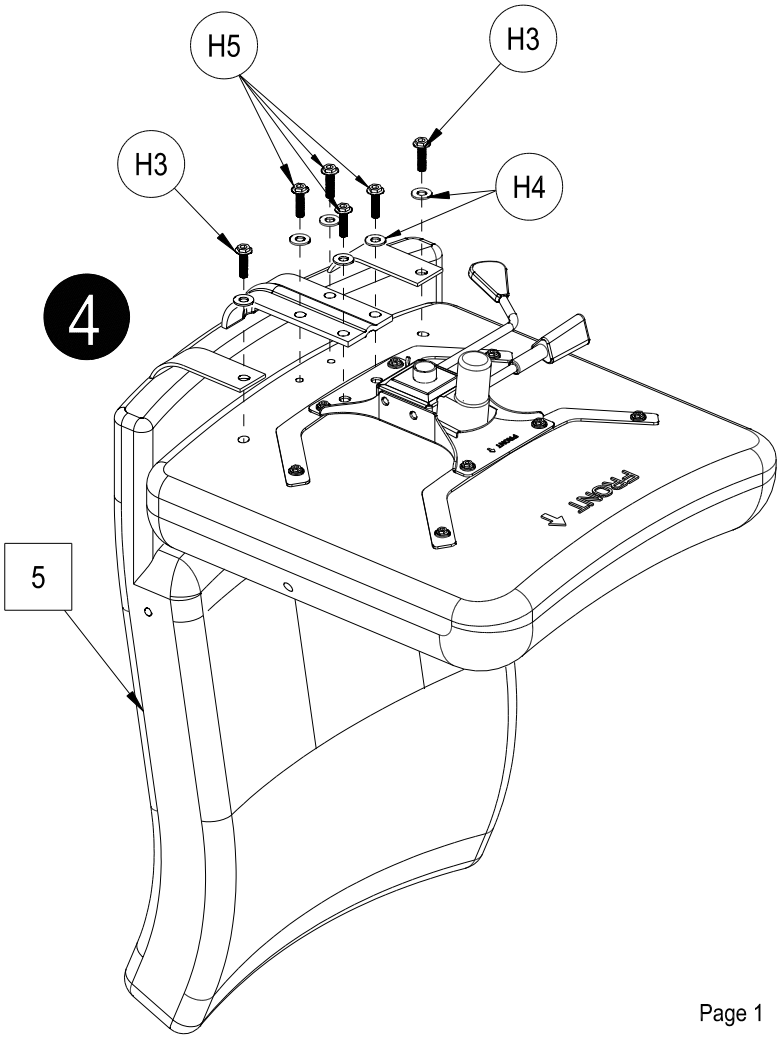
MODEL 238524

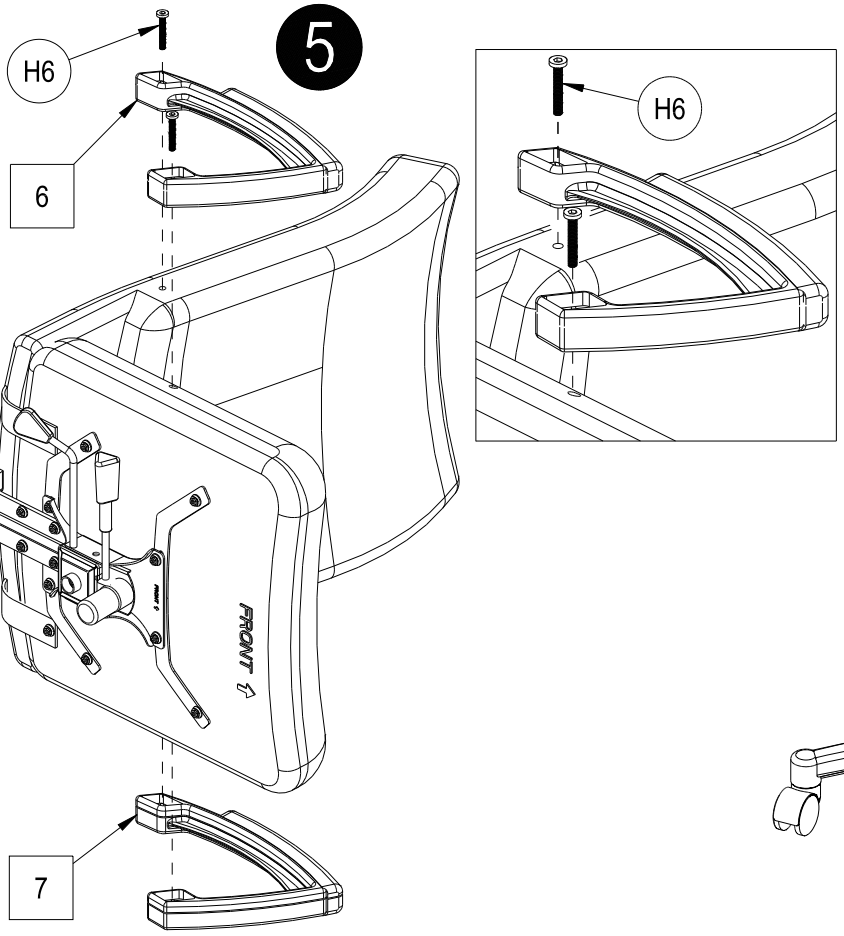
ASSEMBLY INSTRUCTION

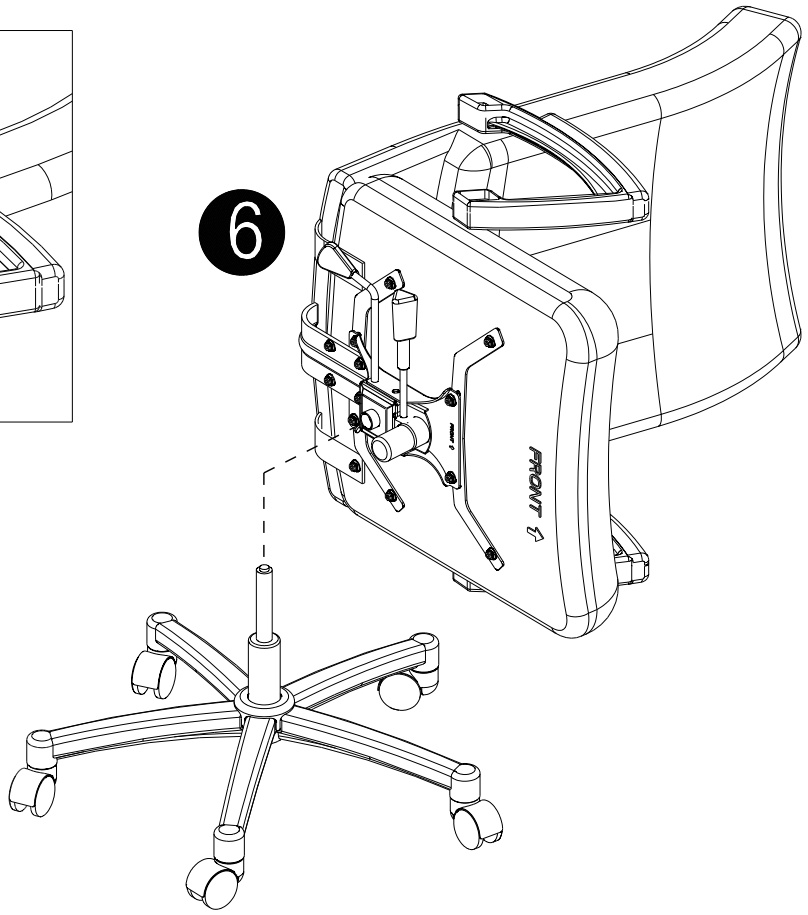


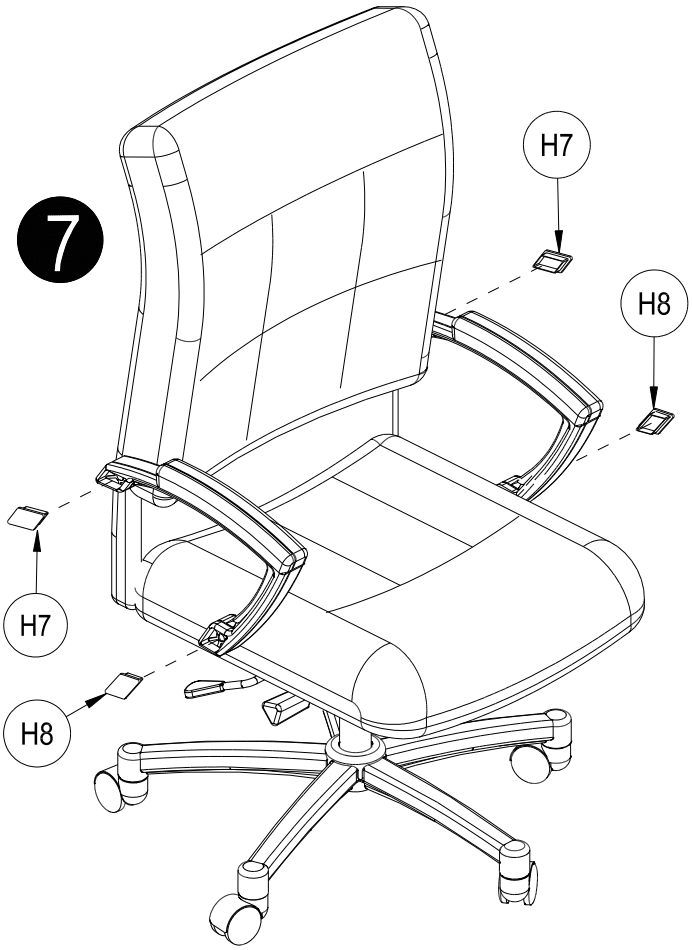


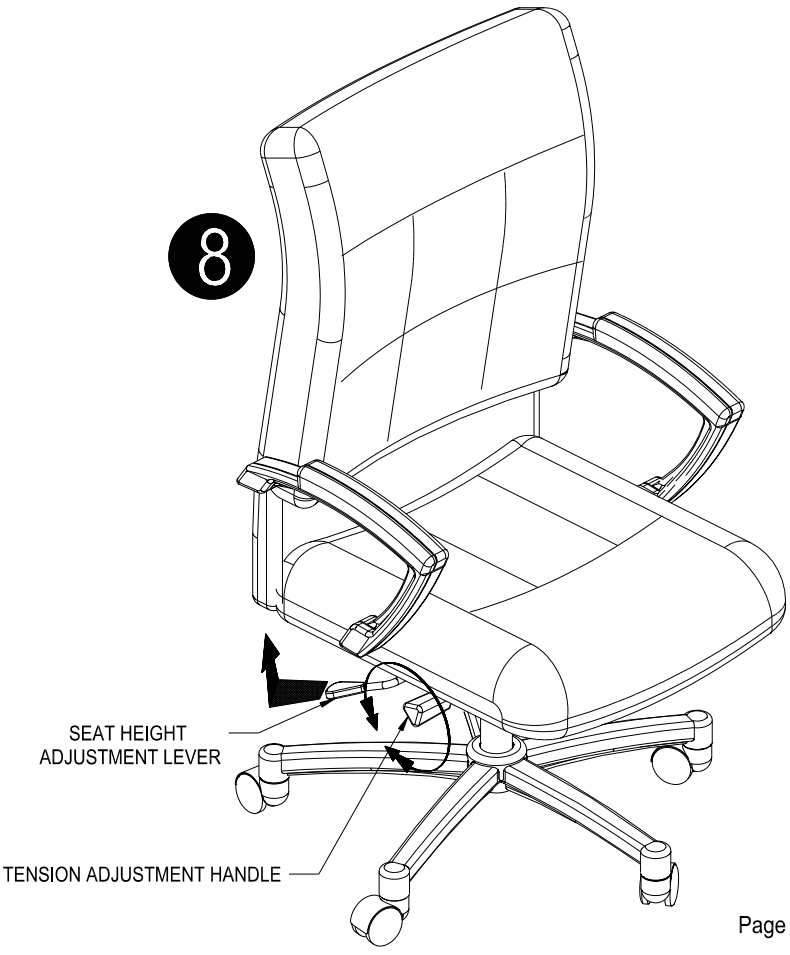





5
H6
6
7
FRONT
H6


6
FRONT


7
H7
H8
H7
H8


8
SEAT HEIGHT
ADJUSTMENT LEVER
TENSION ADJUSTMENT HANDLE

CONTENIDO

REF.	CANT.	DESCRIPCIÓN
1	1	BASE
2	1	AMORTIGUADOR DE GAS
3	1	PLACA DE MECANISMO DE SILLA
4	1	ASIENTO ACOJINADO
5	1	RESPALDO ACOJINADO
6	1	REPOSABRAZO DERECHO
7	1	REPOSABRAZO IZQUIERDO
H1	5	Rueda
H2	1	Cubierta de Base
H3	6	Tornillo de cabeza dado hexagonal 3/8-16 x 1 1/2 Lg
H4	10	Arandela Plana
H5	4	Tornillo de cabeza dado hexagonal 3/8-16 x 1 3/4 Lg.
H6	4	Tornillo de cabeza dado hexagonal 3/8-16 x 2 1/4 Lg.
H7	2	Tapa superior
H8	2	Tapa inferior
	1	Llave hexagonal 5mm

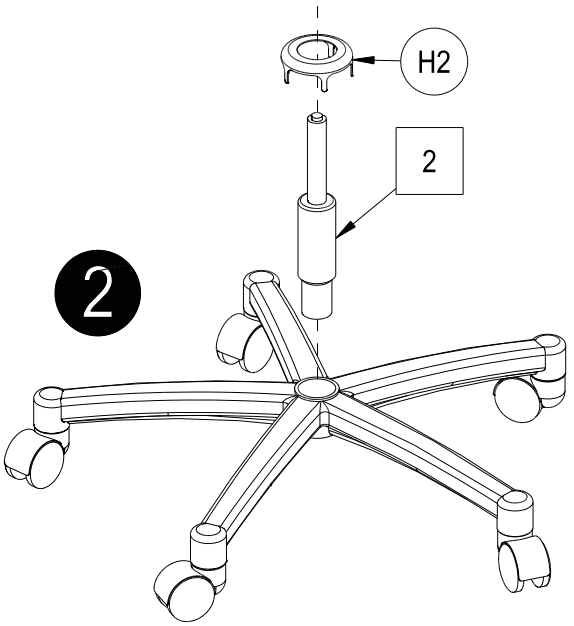
www.globalindustrial.com
EUA: 888-628-3466
Canadá: 888-645-2986
México: 01.800.681.6940

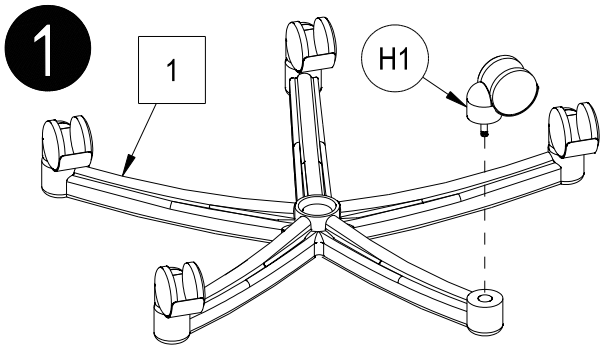


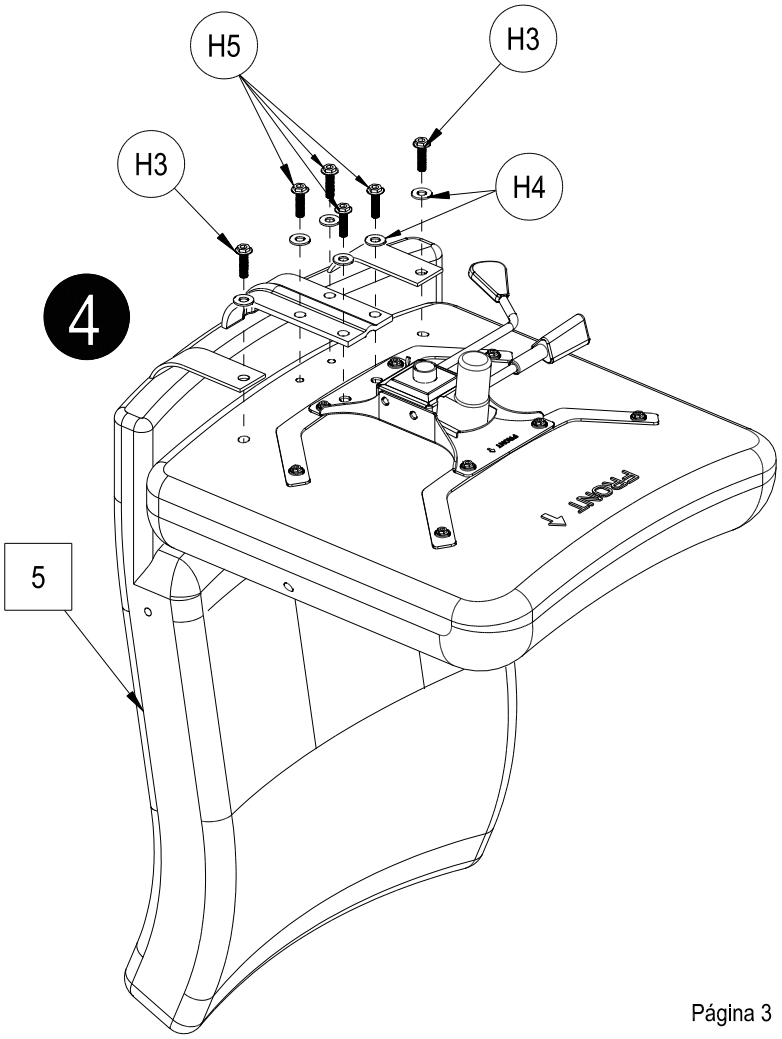
SILLA EJECUTIVA GRANDE Y ALTA PARAMOUNT

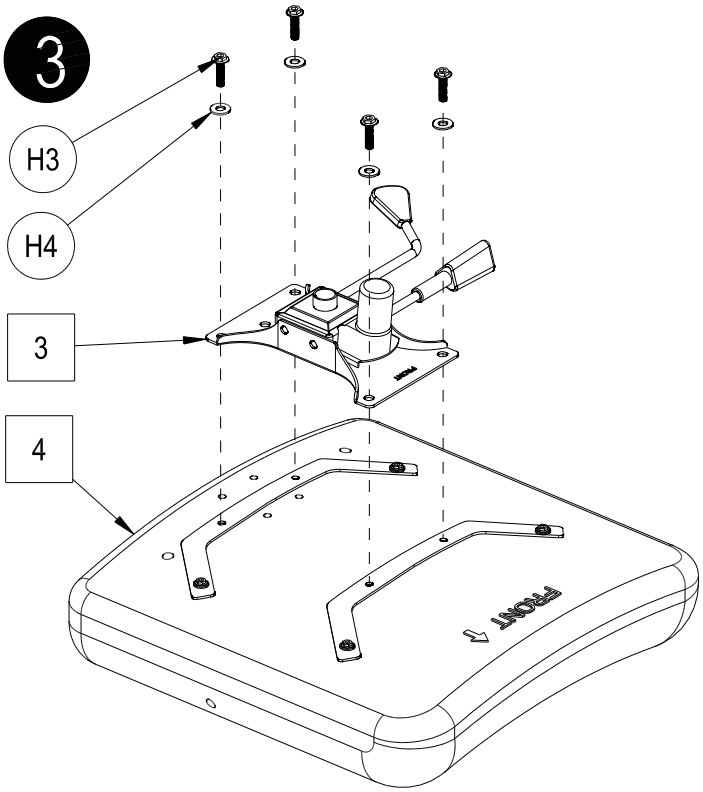
MODELO 238524

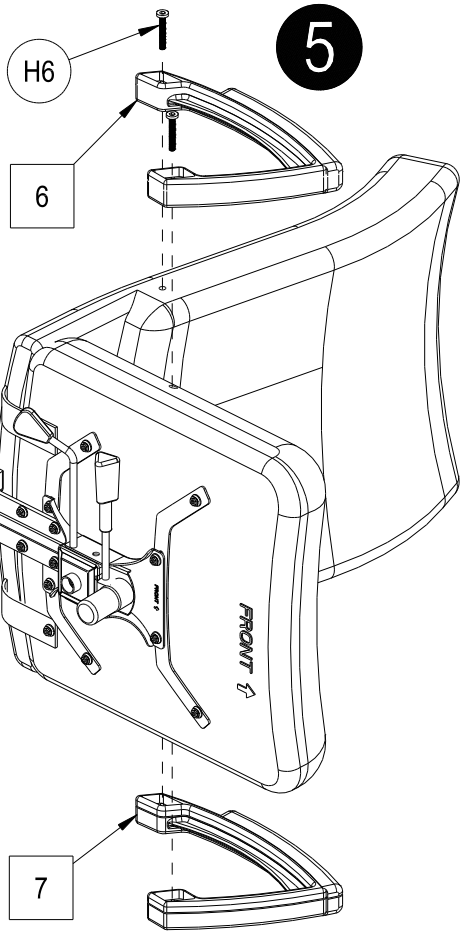
INSTRUCCIÓN DE ENSAMBLAJE

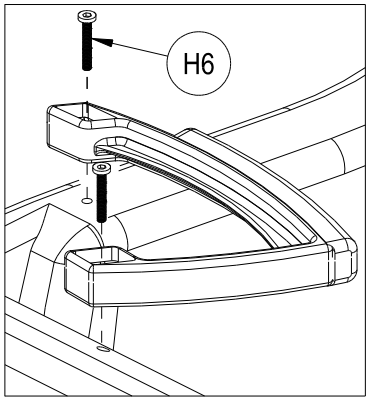


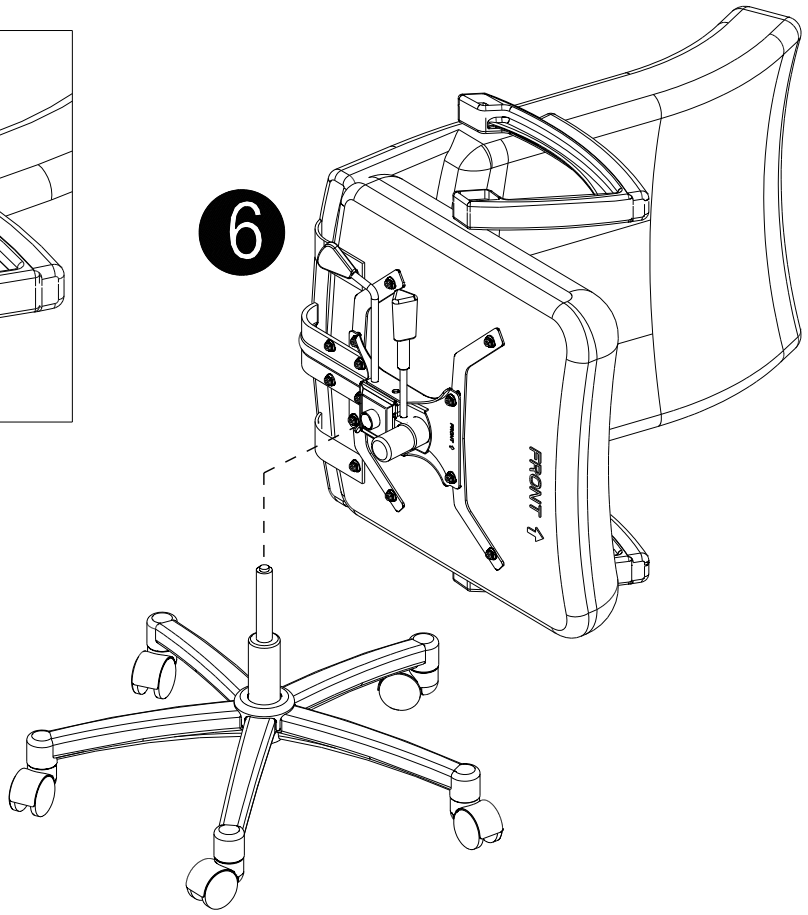


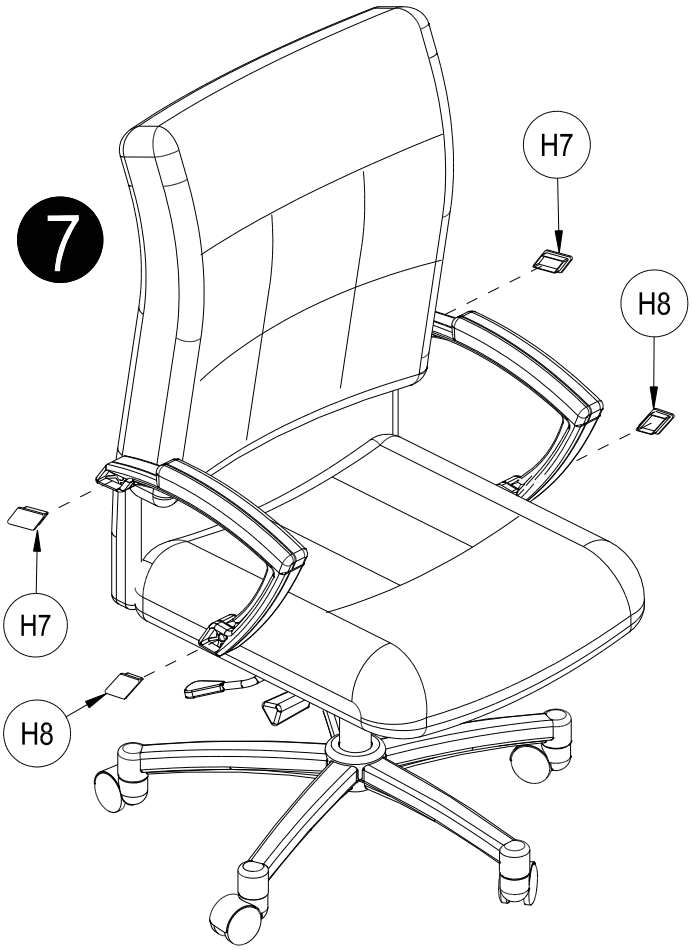


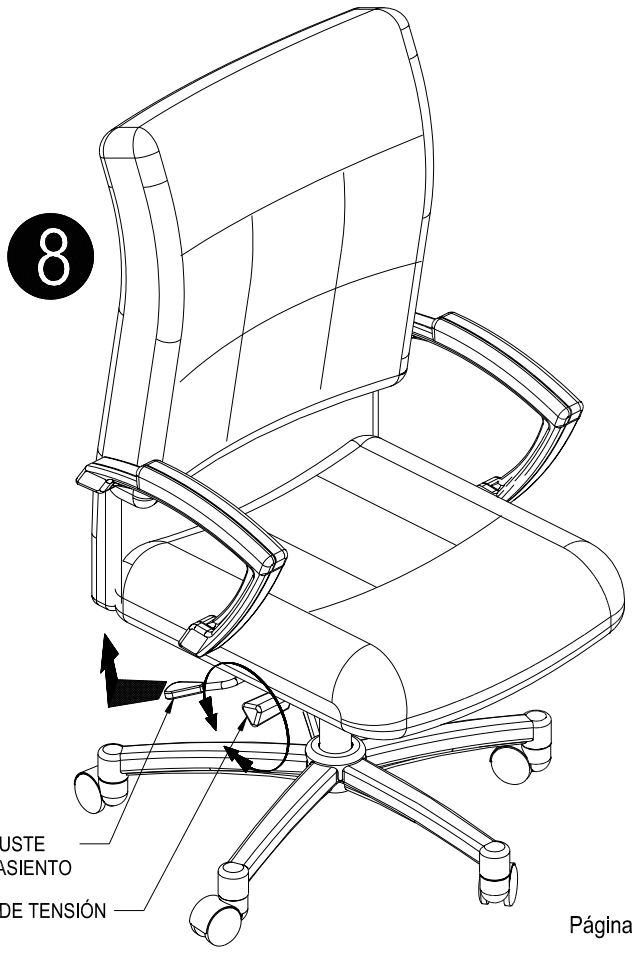



5
H6
6
7
FRONT


H6


6
FRONT


7
H7
H8
H7
H8


8
PALANCA DE AJUSTE
DE ALTURA DE ASIENTO
PALANCA DE AJUSTE DE TENSIÓN