US: 800-245-6682
México: 01.800.681.6940
Canada: 888-645-2986

nexelwire.com

Instruction Manual
Model 242944

C 258678 US

1.7 cu. ft. Compact Refrigerator



⚠ WARNING:
IMPORTANT SAFETY INSTRUCTIONS:

Read all instructions before using the appliance.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and/or injury to persons, including the following:

1. This appliance must be grounded. Connect only to a properly grounded outlet. See important grounding instructions.
2. Install or locate refrigerator only in accordance with the provided installation instructions.
3. To protect against electric shock, do not place cord, plug, or refrigerator in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not operate this appliance if it contains a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
6. This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility or call our toll-free customer service number for information on examination, repair, or adjustment.
7. Do not cover or block any openings or air vents on this appliance.
8. Do not store this appliance outdoors or use near water.
9. Do not locate this appliance near heat sources or open flame.
10. Do not use or store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
11. Do not place heavy objects or magnet items on top of refrigerator.
12. The refrigerant of this product is R600a, which is flammable. Make sure not to damage the cooling system during transportation and installation.
13. To minimize the risk of possible ignition due to improper service or the use of incorrect parts, this unit must be serviced by factory authorized personnel only.

PLEASE SAVE THESE INSTRUCTIONS

⚠ DANGER:
RISK OF CHILD ENTRAPMENT
Prior to discarding old refrigerators or freezers:

1. Remove doors.
2. Leave shelves in place so that children may not climb inside


Note: All refrigeration products contain refrigerants, which under federal law must be removed prior to disposal. If disposing an old refrigerator, verify with a qualified disposal company for instructions.

IMPORTANT GROUNDING INSTRUCTIONS

This appliance must be grounded. The plug must be plugged into an outlet that is properly installed and grounded.

⚠ WARNING:
Improper use of grounding can result in a risk of electric shock.

1. Consult a qualified electrician if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.
2. If an extension cord is required, use only a 3-wire extension cord with a 3-blade grounding plug, and 3-slot receptacle that will accept the unit plug. The marked electrical rating of the extension cord should be equal to or greater than the rating of the appliance.

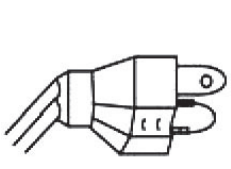


Three-pronged (grounding plug)



Properly polarized and grounded outlet

1.7 cu. ft. Compact Refrigerator

PARTS AND FEATURES

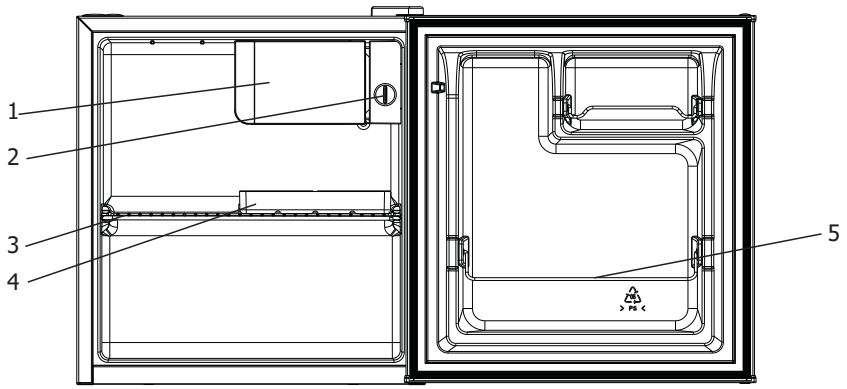

1. Freezer compartment
2. Temperature control dial
3. Removable Shelf
4. Drip tray
5. Bottle Storage

INSTALLATION INSTRUCTIONS

1. Before initial use, remove all packing materials, including foam base and adhesive tape.
2. The refrigerator should be located on a sturdy, flat surface that can support the refrigerator when it is fully loaded.
3. Choose a location unexposed to direct sunlight, high temperatures, heat sources such as a stove or radiator, or moist areas. Avoid locations where temperatures drop below 55°F as this may cause improper unit functionality.
4. Leave a minimum of ½" between each side of the appliance and the wall. The top and back of the unit should have a minimum of 1½" clearance to allow for proper air circulation. This appliance is intended to be free-standing and should not be built-in or placed in a recessed area.
5. The leveling legs on the front corners should be adjusted to slope the appliance backwards slightly to ensure door closes tightly.

OPERATING INSTRUCTIONS

1. Allow refrigerator to stand upright for 4 hours prior to use.
2. Plug into a grounded outlet or appropriate extension cord (see important grounding instructions).
3. The temperature of refrigerator can be controlled manually by the knob. However, the number shown on the knob does not directly represent the temperature. Instead, the larger the number is, the lower the interior temperature will be. 0 stands for off. Turn the knob to state 4 when it is normal used, turn it to the state during 4-7 if a lower interior temperature is required; contrarily, to the state during 4-1, when a higher one is needed.
4. Food should be kept in sealed containers to prevent odor or drying.
5. Hot food should be cooled before placing into the appliance to prevent increased interior temperature and power consumption. Placing food inside too quickly will impact the performance.



6. Reducing door opening frequency can lower power consumption

CLEANING

Interior

Clean the interior of the appliance with a mixture of warm water and baking soda, using about 1 – 2 tablespoons per quart of water. Use a sponge or soft cloth and be sure to wring excess moisture out before cleaning around the controls. Rinse thoroughly with warm water and dry with a clean, soft cloth.

Exterior

The exterior surface can be cleaned using warm water and a mild detergent. Rinse thoroughly and dry with a clean, soft cloth.

Door Gasket

The door gasket must be kept clean to ensure a proper seal. Be sure to clean the gasket frequently, using the interior cleaning method described above.

DEFROSTING

Frost build-up will increase energy consumption and reduce appliance efficiency. Defrost the freezer section whenever the frost reaches a thickness of ¼".

1. Remove food and ice cube trays from the refrigerator and freezer compartments.
2. If model includes a drip tray, be sure to place it under the freezer compartment to collect water. It may be necessary to empty the drip tray during the defrosting process.
3. Turn off unit and unplug it from the outlet.
4. The defrosting process may take several hours. Open door to reduce defrost time.
5. When defrosting is completed, wipe the compartment with a soft cloth to remove any remaining water.
6. Reset the refrigerator temperature, following the operating instructions.

ATTENTION: Do not use sharp or pointed objects to remove frost or ice from the surfaces of the freezer compartment. This can cause damage to the compartment walls and cooling coils, and will void the warranty.

POWER FAILURE

When a power failure occurs, the refrigerator can normally store food for several hours. Do not put additional food into the appliance during a power failure, and do not open door. Disconnect the plug from the outlet, and reconnect when the power has been restored. **Always inspect for, and discard, any spoiled or thawed food in the refrigerator or freezer before resuming use of the appliance.**

VACATION

Before extended leaves, remove food that may spoil. If planning to be away for an extended period of time, we recommend that all food be removed from appliance and appliance should be turned off and unplugged from the outlet. Clean the interior according to the directions provided in the cleaning section of this manual, and leave the door open.

MOVING THE REFRIGERATOR


1. Turn off the refrigerator and unplug it from the outlet.
2. Remove all food and securely tape down all loose items inside.
3. Tape the door shut.
4. Do not lift or pull the door or door handle during transportation.
5. When moving, the appliance cannot be tilted over 45 degrees, as damage to the sealed system may occur.
6. Take care to avoid strong vibration or impact to the appliance.

TROUBLESHOOTING

Problem	Possible Cause	Corrective Action
Refrigerator does not operate	Not plugged in tightly	Unplug, wait 10 seconds, then plug in again
	Tripped circuit breaker or blown fuse	Replace fuse or reset circuit breaker
	Problem with electrical outlet	Consult with a professional electrician
Refrigerator is too warm/ food is not cold	Temperature setting may be too warm	Lower the temperature setting
	Door opened too frequently	This is normal
	Door not closed tightly	Check to make sure nothing inside is preventing the door from closing. Clean door gasket.
	Warm weather	This is normal
Compressor runs too long, or cycles on and off frequently	Hot weather	This is normal
	Door opened too frequently	This is normal
	Door not closed tightly	Check for obstructions preventing the door from closing
	Temperature control set at coldest setting	Adjust temperature to a warmer setting
	Large amounts of food placed in refrigerator	This is normal
Moisture forms on the outside of the appliance	This is normal during periods of high humidity	Wipe the surface dry using a soft cloth
	The door is slightly open	Close the door tightly
Moisture forms on the inside of the appliance	This is normal during periods of high humidity	This is normal
	Door is opened too long or too frequently	Do not open the door too long or too frequently
Vibration noise	Refrigerator is on an uneven surface	Adjust the leveling legs
	Refrigerator is touching a wall	Move the refrigerator away from the wall

1.7 cu. ft. Compact Refrigerator

REVERSING THE DOOR

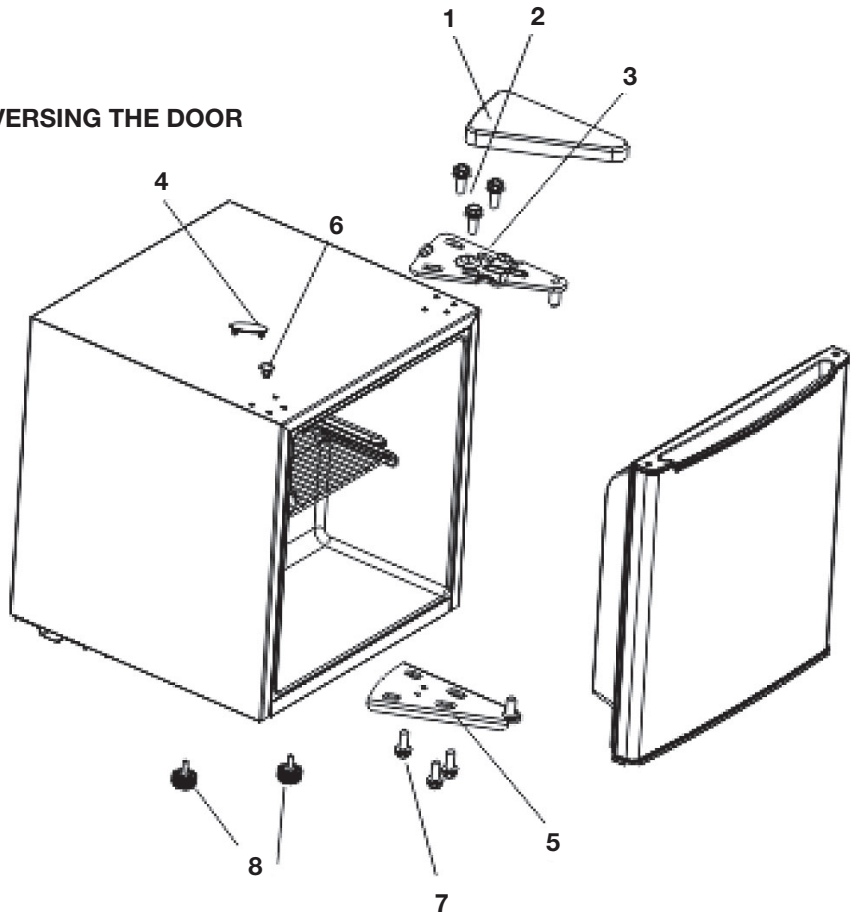

1. Top hinge cover
2. Top hinge screw
3. Top hinge
4. Cabinet plug
5. Bottom hinge
6. Door handle plug
7. Bottom hinge screw
8. Leveling leg

Do not tilt the appliance over 45° when revising the door as possible damage to the sealed system may occur.

1. Remove top hinge cover and 3 top hinge screws below it. Remove top hinge.
2. Remove 1 cabinet plug and 1 door handle plug.
3. Remove the door.
4. Remove right and left leveling legs.
5. Remove the bottom hinge and 3 bottom hinge screws.
6. Install the bottom hinge on the other side of the leveling legs with 3 bottom hinge screws.
7. Install right and left leveling legs. There are two holes below the refrigerator to fit the two leveling legs.
8. Install the door.
9. Install the top hinge on the other side with 3 top hinge screws.
10. Install top cover above the top hinge and install 1 cabinet plug and 1 door handle plug on the other side.
11. Adjust the leveling legs.

SPECIFICATIONS		
Model		242944
Climate		T
Electric shock protection type		I
Capacity (cu. ft.)	Freezer	/
	Refrigerator	1.7
Voltage (V)		120
Frequency (Hz)		60
Current (A)		0.8
Voice (dB)		≤42
Energy consumption (kWh/24h)		0.57
Refrigerant		R600A/0.64 oz
Weight		27.8 lbs
Interior temperature (F)	Freezer	< 32
	Refrigerator	32 ~ 46.4
Unit dimensions (in inches)	Width	17.48
	Depth	19.09
	Height	19.49