The Diner High Chair Tray Usage Instructions

P/N KB851

Please Note: The Diner High Chair is designed to be used by an infant or child capable of sitting upright and unassisted. Waist restraint should be buckled at all times when in use.

⚠WARNING:

- Always keep child in view while in the high chair. Stay near and watch child during use.
- Always use restraints, and adjust to fit snugly. The child should be secured in the high chair at all times by the restraining system.
- It is recommended that the high chair be used only by children capable of sitting upright unassisted.
- Do not use the high chair unless all components are correctly fitted and adjusted.
- FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if a child is not restrained properly.
- Tray is not designed to hold the child.

You are responsible for the safe operation of this unit.

Tray Instructions

The tray can be attached to (and removed from) the high chair by compressing both tray clips, located on the bottom of the high chair tray, and clipping to the notches on the high chair arm.
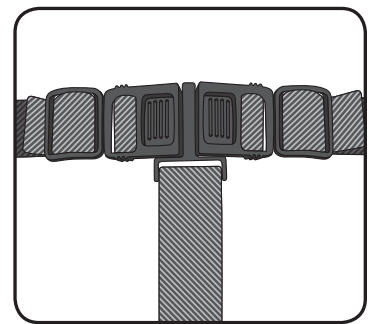
The tray can be moved into three positions by pulling up on the clips and sliding the tray forward or backward.

To order replacement parts call 888.733.3456 or 303.539.8300 or visit www.koalabear.com.

Restraint Usage

To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place with an audible "click".

The waist restraint can be adjusted to make the strap tighter or looser.

Maintenance

Clean and sanitize regularly. Wipe down tray with a soft rag using a non-abrasive cleaner.

Important: DO NOT USE BLEACH on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.