

GLOBAL™ INDUSTRIAL
We can supply that.®

User Manual	Manual de Usuario	Manuel de l'Utilisateur
Customer Service US: 1-800-645-2986	Servicio de atención al Cliente US: 1-800-645-2986	Service à la clientèle Canada: 888-645-2986

46" Hexagon Picnic Table,Recycled Plastic,(271671 GN/GY/CD)
46"ADA Hexagon Picnic Table,Recycled Plastic,(271676 GN/GY/CD)




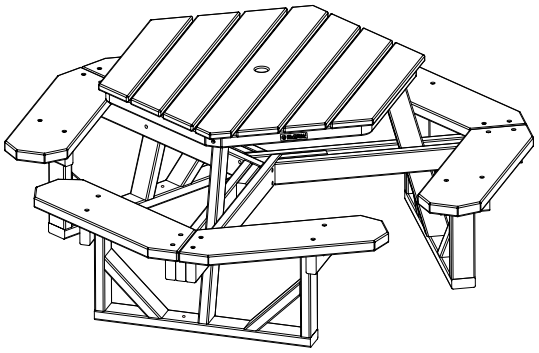






271671 GN/GY/CD

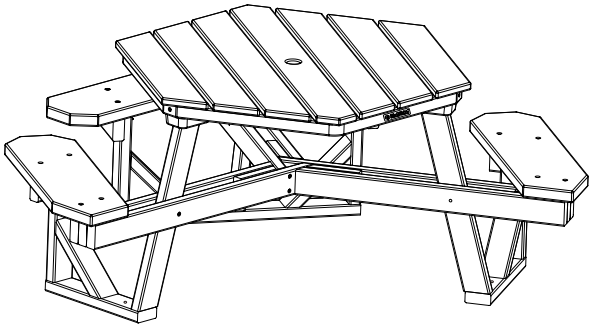


271676 GN/GY/CD

Parts List

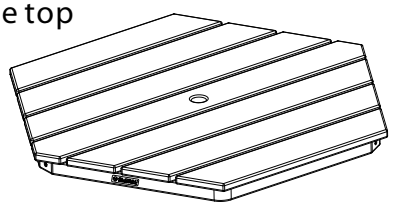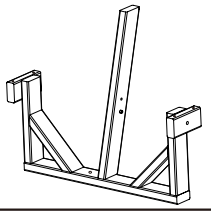271671 GN/GY/CD		
A: Table top  1pc	B: Seats  6pcs C: Arms  3pcs	E: Full Base Supports  3pcs

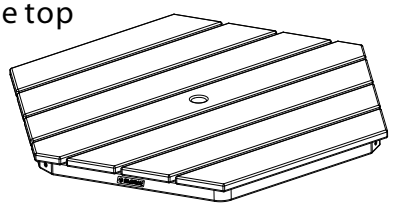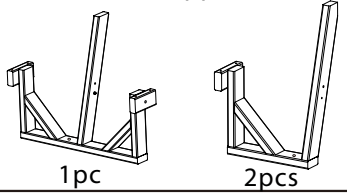271676 GN/GY/CD		
A: Table top  1pc	B: Seats (2) D: Long Seats (2)  4pcs C: Arms  3pcs	E: Full Base Supports(1) F: Half Base Supports(2)  1pc 2pcs


Hardware	271671	271676
H1 : M8 x80mm 304 SS Countersunk Head Hex Screws 	24pcs	16pcs
H2 : M8 x50mm 304 SS Hex Socket Cap Self Tapping Screws and Washers 	9pcs	9pcs
H3 : M8 x80mm 304 SS Hex Socket Cap Self Tapping Screws and Washers 	3pcs	3pcs
H4 : M8 x110mm 304 SS Hex Socket Screws and Nuts and Washers 	3pcs	3pcs
H5 : M10 x80mm Concrete bolts and Washers 	3pcs	3pcs

46" Hexagon Picnic Table,Recycled Plastic
46"ADA Hexagon Picnic Table,Recycled Plastic

Step1

The three (3) base support legs and two(2) anchor blocks are rotated for shipping purposes.A single deck screw is pre-installed, rotate 90 degrees and align the pre-drilled holes.Secure the leg with screw.
Repeat for all legs and anchor blocks.


H2 x3

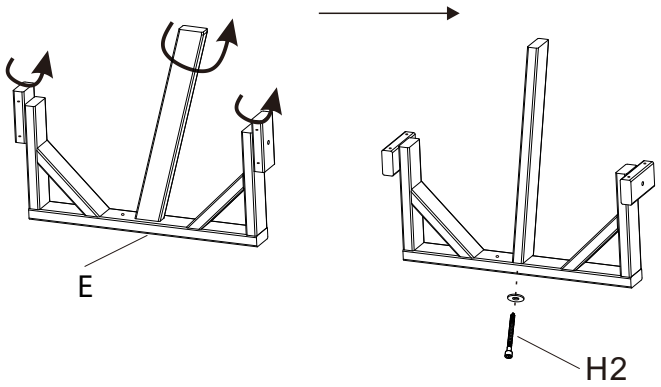

Step2

Fasten the arms together with H2, two (2) per side.

C x3 H2 x6

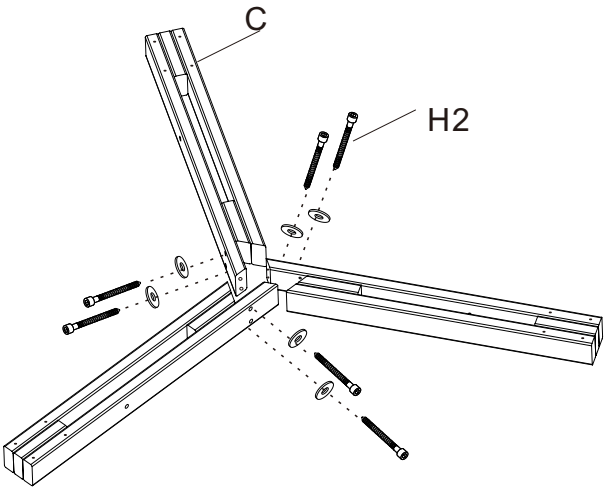



Step3

Insert a base leg inside an arm with the pre-drilled hole in arm aligned on the base leg .
Pre-install H4, not need tightened.

Installation of 271671


E x3 H4 x3

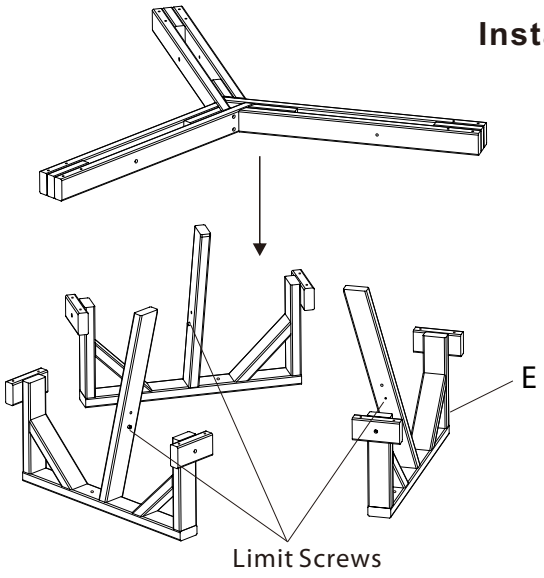


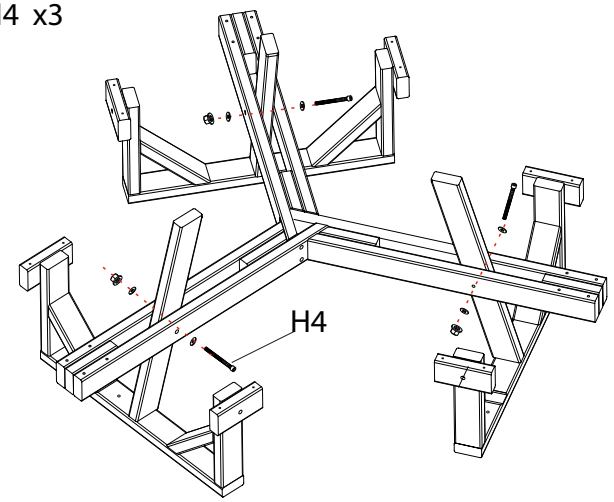

Installation of 271676

E x1 F x2 H x3

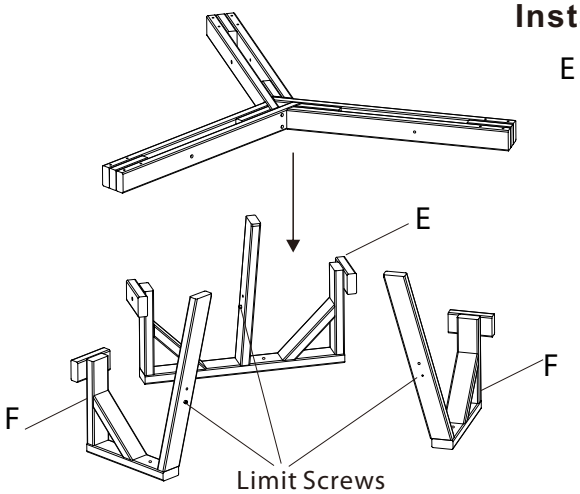

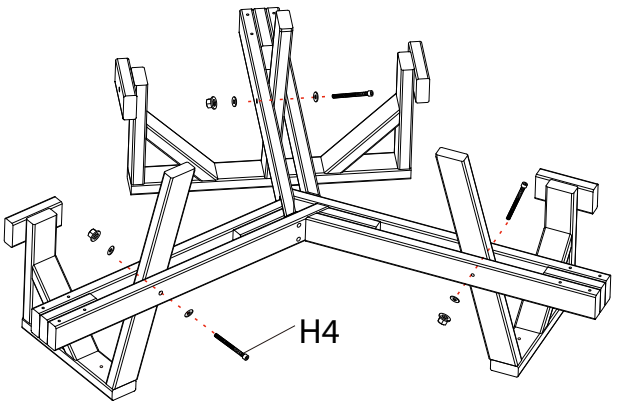


46" Hexagon Picnic Table,Recycled Plastic
46"ADA Hexagon Picnic Table,Recycled Plastic

Step4

The seat flat edges aligned at the center point of the middle board of the arm.
① Attach seats to the Arms with H1 .
② Attach seats to the Anchor blocks of Base Supports with H1.


Installation of 271671

H1 x24 B x6

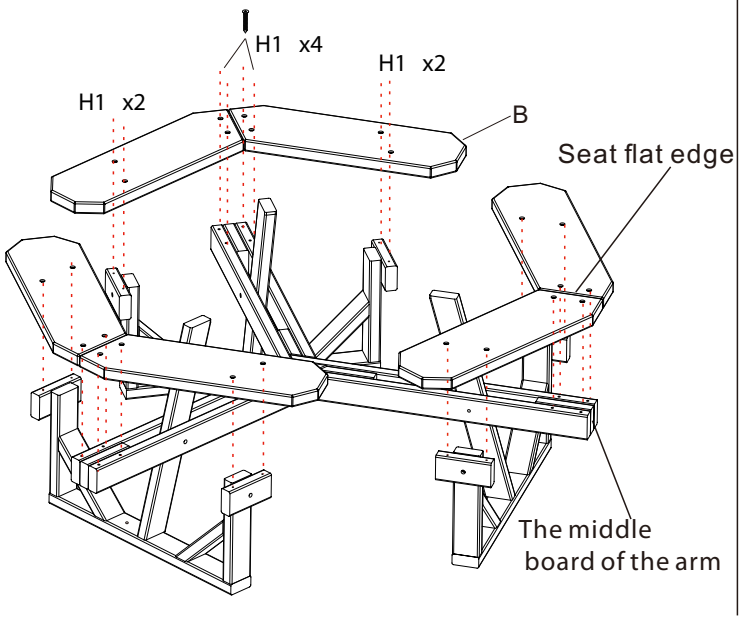

Installation of 271676


H1 x16 B x2 D x2

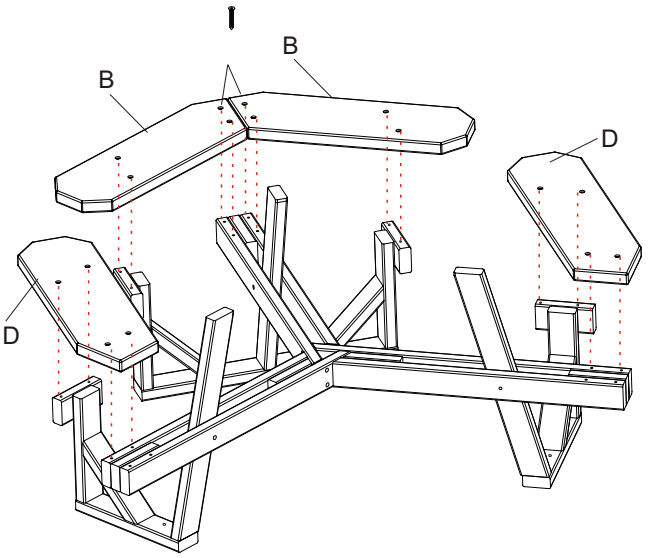


Step5


Attach the slots in the table top underside frame to the three (3) base legs,
Ensure each base leg is fully engaged in the slot and the top is resting even and level.

A x1

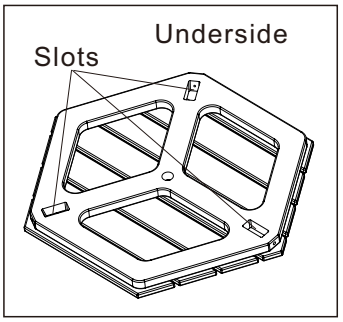

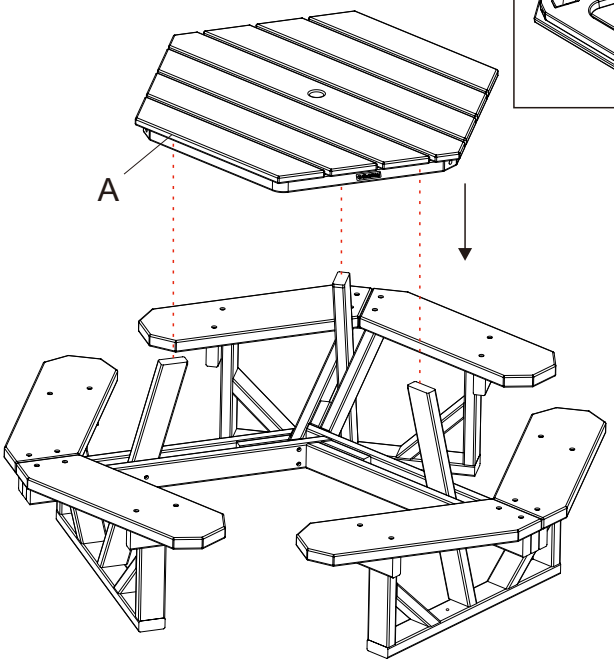

Installation of 271671

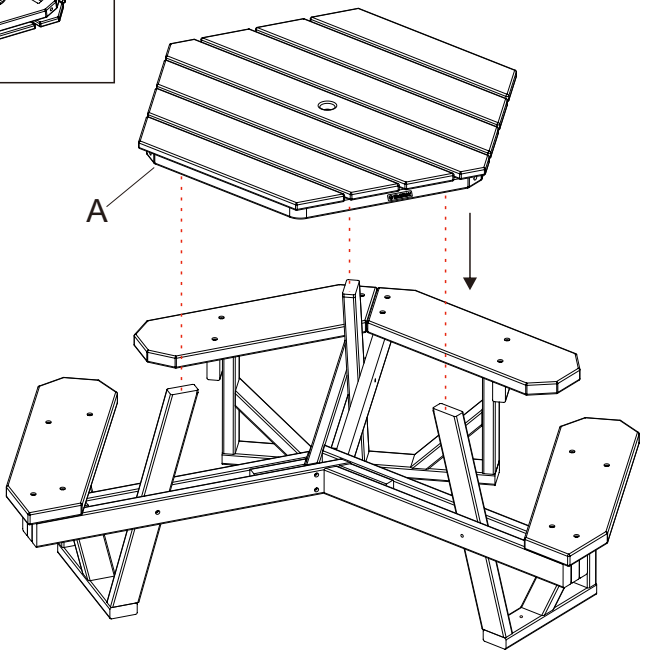

Installation of 271676


46" Hexagon Picnic Table,Recycled Plastic
46"ADA Hexagon Picnic Table,Recycled Plastic

Step6


① Attach the table top to the base legs with H3 （3）
② Fasten the arms and Base legs with H4 （3）

H3 x3

Installation of 271671

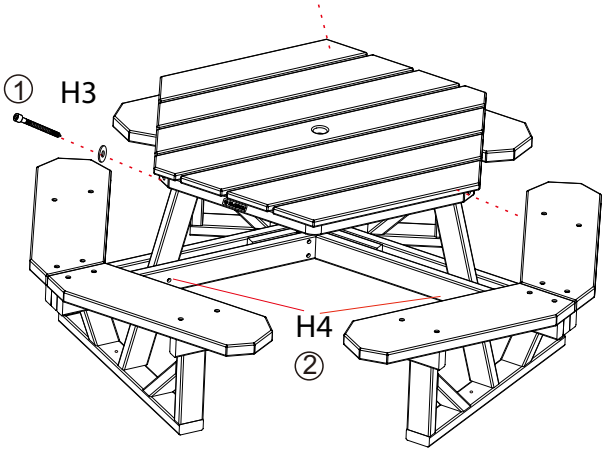

Installation of 271676

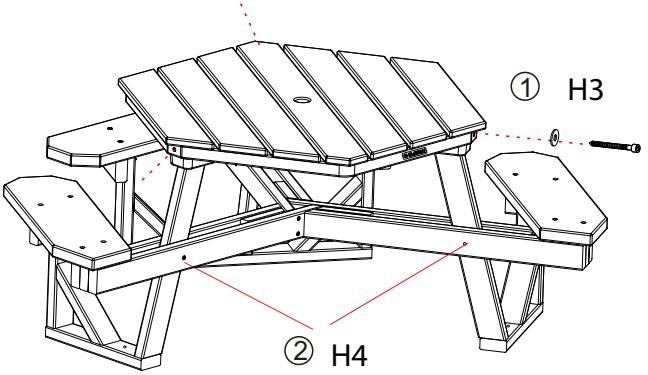


Step7

Secure the table to the floor with 3 screws.

H5 x3

Installation of 271671

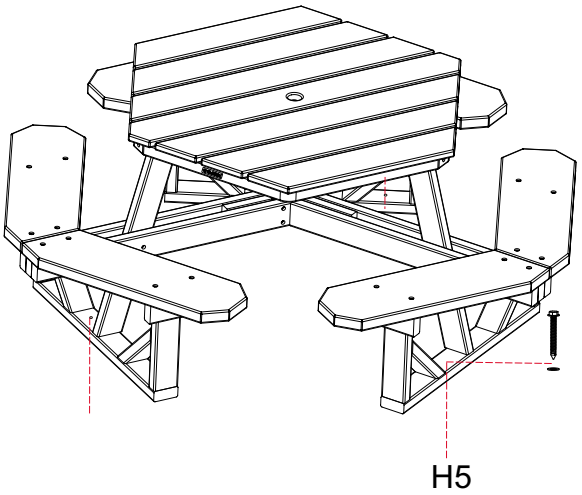

Installation of 271676

