
Industrial Push Sweeper

Operation Manual



GLOBAL™ INDUSTRIAL


We can supply that.®

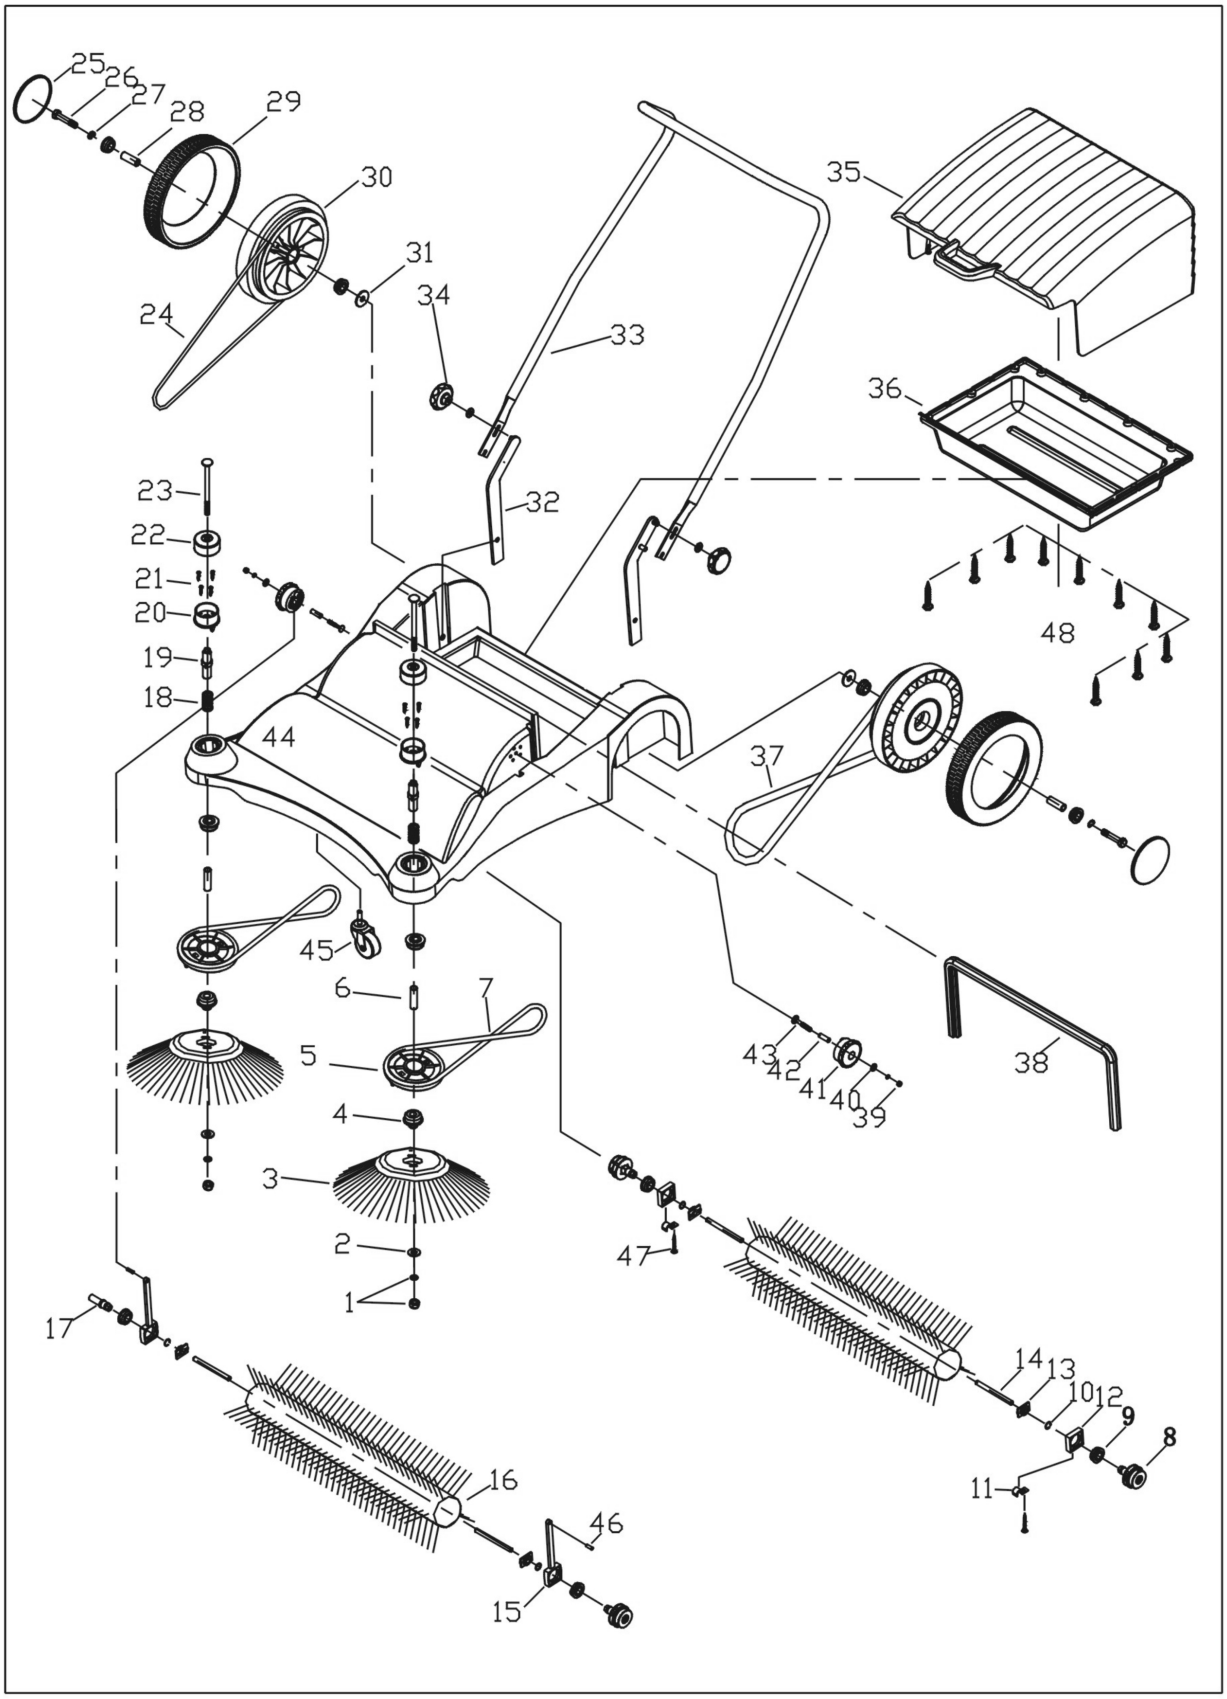


GLOBAL™ INDUSTRIAL

We can supply that.®

11 Harbor Park Drive Port Washington, NY 11050

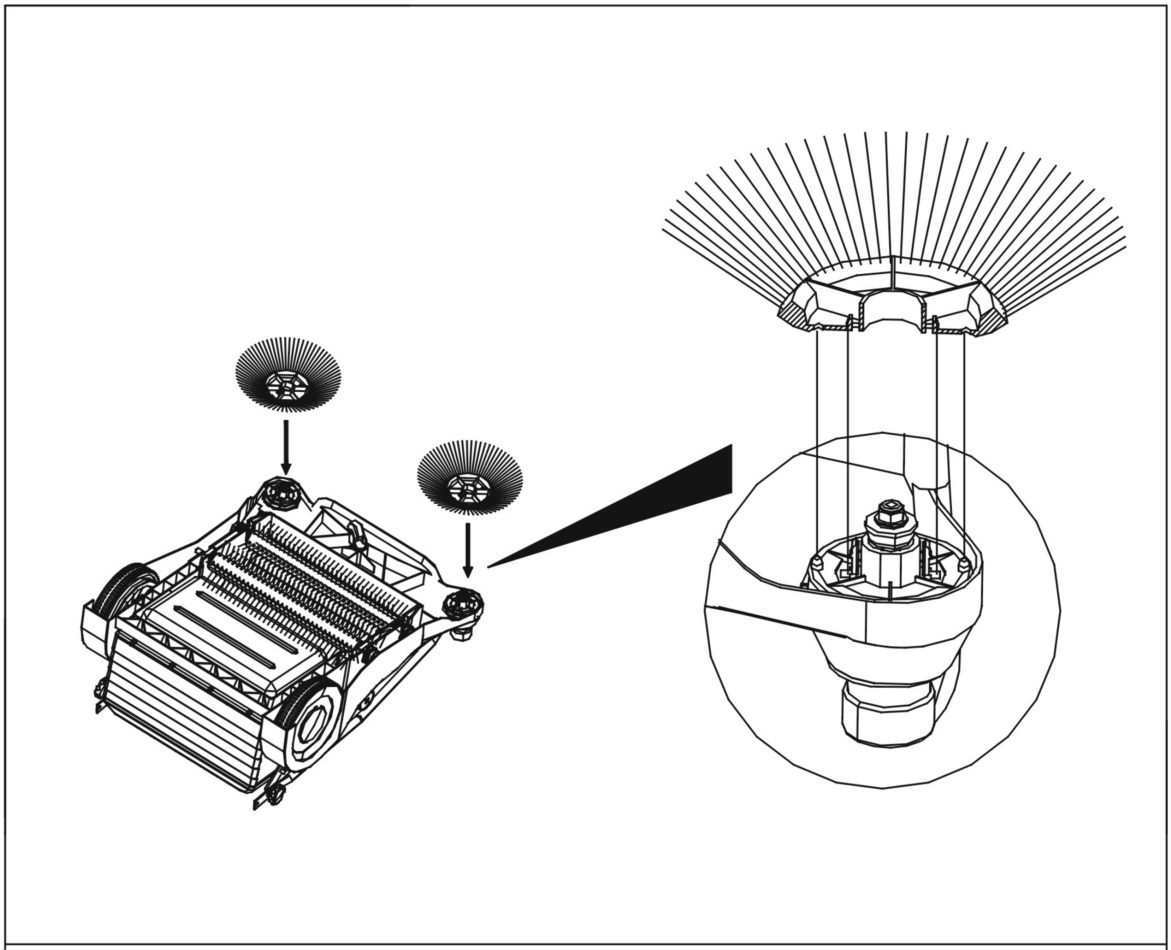

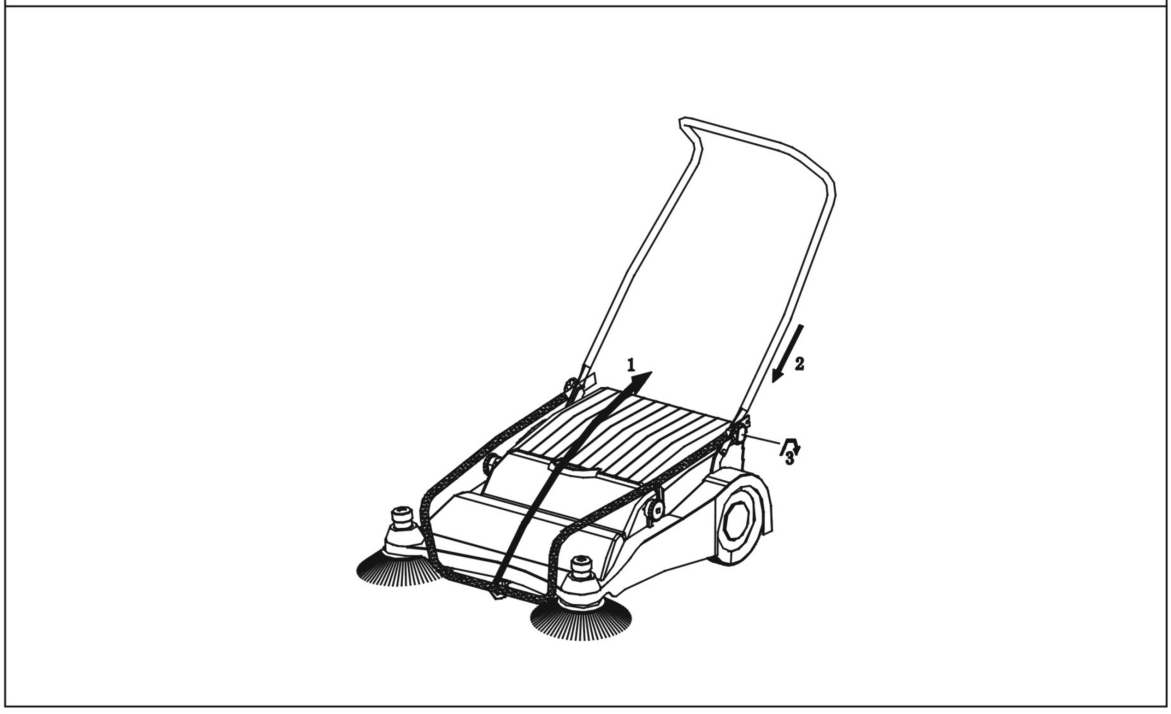
1
2
3

Assembly

1. Align side brushes into the allotted slots on the underside of each brush axle and snap the brush into place.

Note: Handle is shipped in the folded position.

2a. For upright handle positioning, unwind the hand screw knobs on each end to loosen the handle.

2b. The bottom of each post on the handle frame has notched cut-outs. Unfold the handle when loosened until the notched cut-outs are lined up with the steel pins and slide the handle in to insert the posts onto the pins.

3. Tighten the hand screw knobs.

Brush Height Adjustment

1. Align side brushes into the allotted slots on the underside of each brush axle and snap the brush into place.

Note: Each brush offers 5 height settings for optimal cleaning efficiency on various surfaces. Each side brush has a brush adjustment knob on top. The two side knobs adjust the height of the rear roller brush, located under the unit.

Maintenance

1. Before each use, check and inspect all parts for any clogged parts or jammed rollers.
2. After use, clean sweeper and brushes.
3. After use, empty and dispose of contents within hopper and replace hopper when cleared of dirt and debris.
4. For storage, keep the sweeper in a clean and dry area.

TROUBLESHOOTING

Problem	Cause	Solution
Side brushes do not rotate	1. Belt is drawn-out 2. Belt abruption	Replace the belt
Cylinder brushes do not rotate	1. Belt is drawn-out 2. Belt abruption	Replace the belt
Vibration during use	Loose screws and/or fittings	Tighten screws
Uneven adjustment of the cylinder brush	Dirt/debris is blocking the slipway	Clear out debris/ Clean off dirt