

Todd Gas Caddy Pump Installation

P/N 2400-02 & P932400P


Parts List:

Pump w/ elbow and pipe nipple installed, pump handle, Teflon tape.

Tools Required:

(2) large adjustable wrenches.

1. Remove nozzle from hose using (2) adjustable wrenches.

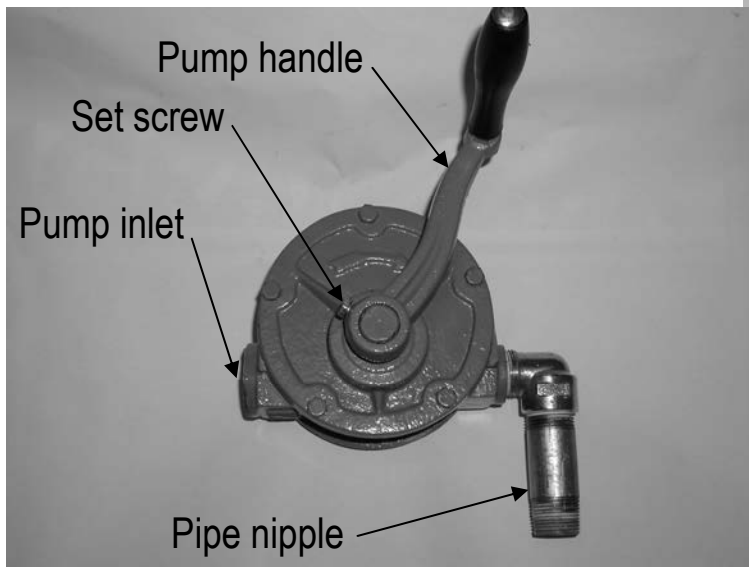

2. Wrap 3 layers of Teflon tape around the end of the hose and end of pipe nipple in direction opposite of thread engagement.
3. Thread end of hose into inlet of pump and tighten securely.
4. Thread nozzle onto end of pipe nipple and tighten securely.
5. Place pump handle onto shaft and tighten set screw.

