


Panel Shield Set-Up

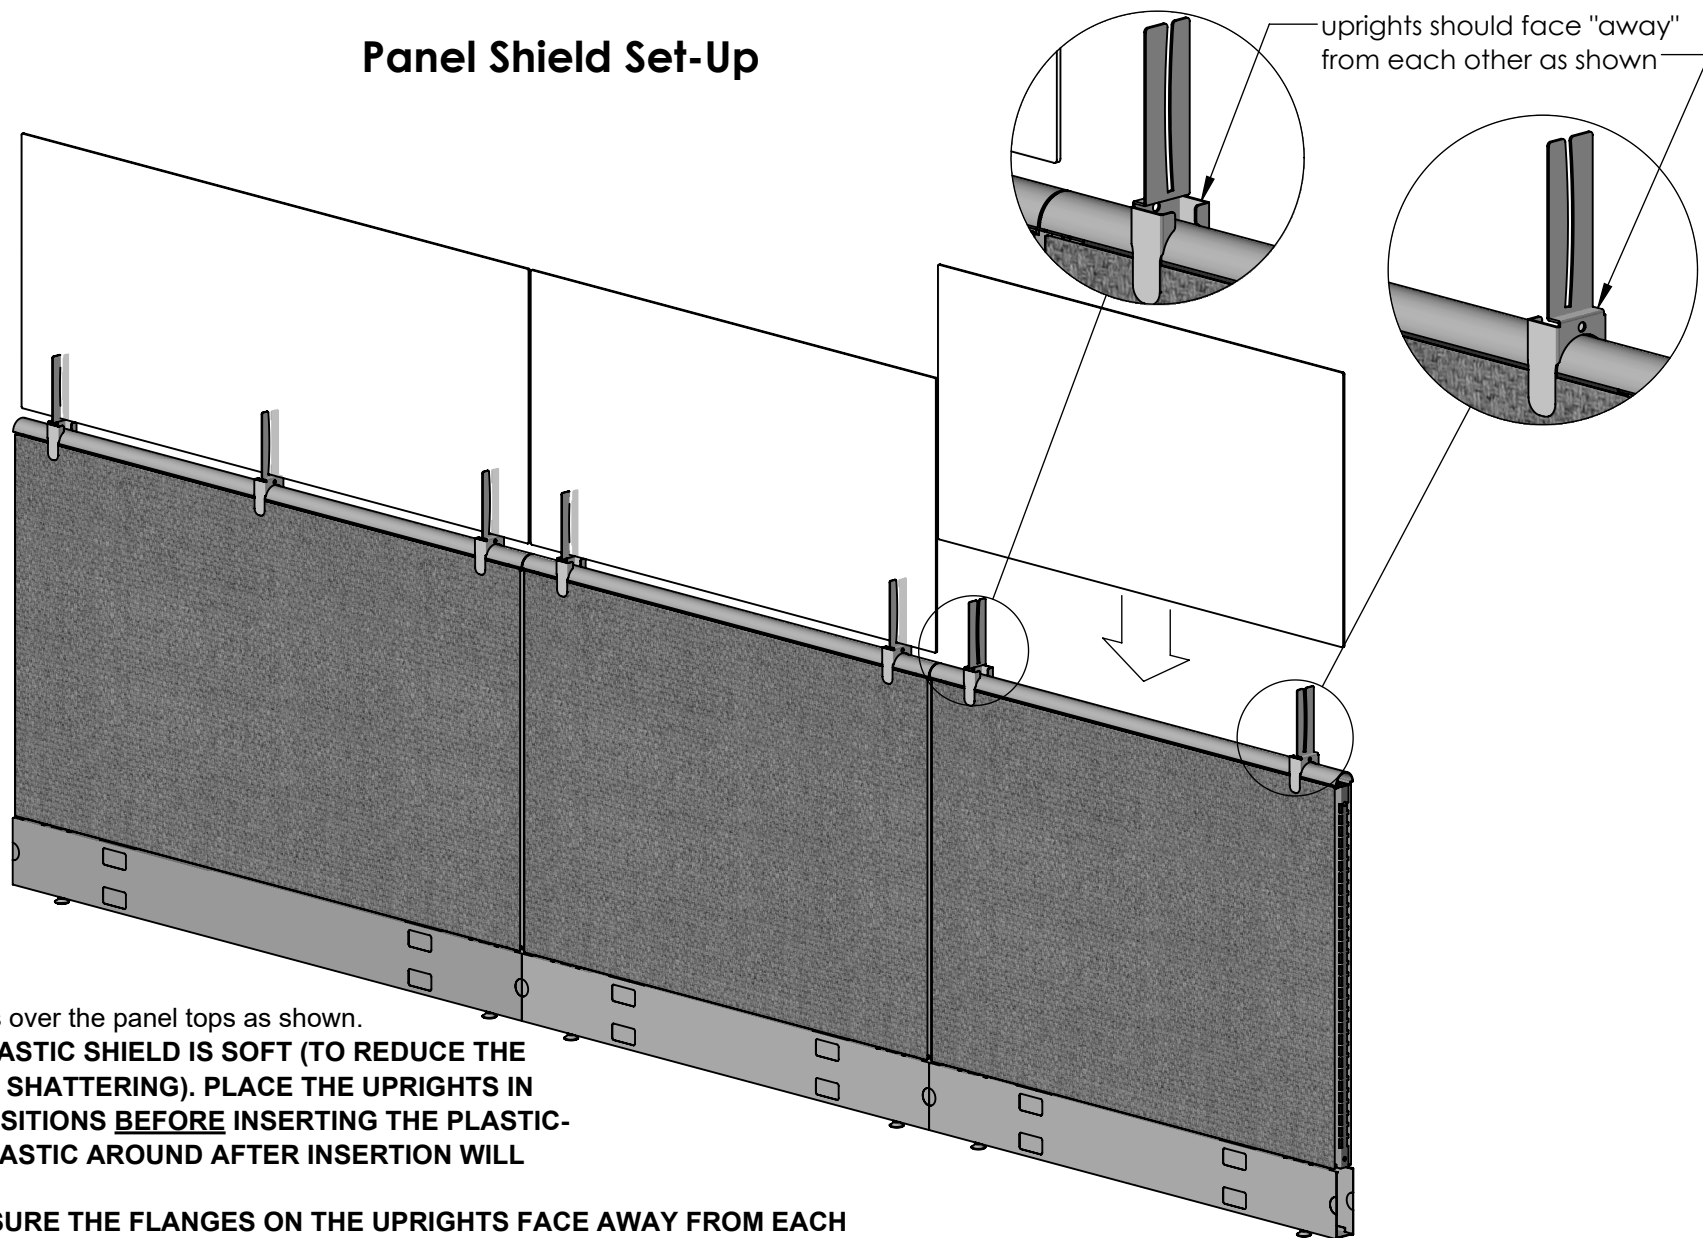

Insert the uprights over the panel tops as shown.

NOTE 1- THE PLASTIC SHIELD IS SOFT (TO REDUCE THE POSSIBILITY OF SHATTERING). PLACE THE UPRIGHTS IN THEIR FINAL POSITIONS BEFORE INSERTING THE PLASTIC- MOVING THE PLASTIC AROUND AFTER INSERTION WILL SCRATCH IT.

NOTE 2- MAKE SURE THE FLANGES ON THE UPRIGHTS FACE AWAY FROM EACH OTHER AS SHOWN IN THE DETAILS.

Remove the protective backer on the shield, and carefully insert the shield vertically down into the slots on the uprights. Note again- the shield stands up better if the upright flanges face away from each other.

Also note- The 60" wide panel shield uses three uprights.

The shields may be cleaned using a mild detergent and a soft cloth.

R05277 05/29/2020

SHEET 1 OF 1

MARVEL

© 2020 The Marvel Group, Inc. All rights reserved. Reproduction of this drawing either in whole or in part, including any form of copying and/or preparation of derivative works thereof, for any reason without prior written permission is strictly prohibited.