

1-800-645-1232

Assembly Instructions



Rev.C Page 1 of 2



1-800-645-1232

Mobile Instrument Stand Assembly Instructions

Step 1

Put Outer Tube (2) into Base (1) Place washers; small (6) then Large (7) on to the Base (1). Thread the Hexagonal Bolt (8) into the washers (6, 7) and Base. (1)

Step 2

Insert the Plug End of the Inner Tube (3) into Outer Tube (2).


Adjust height of Inner Tube (3) and tighten knob.

Step 3

Thread the Hexagonal Screw (9) through the center hole of the

Tray Frame (5) and into the Inner Tube (3). Tighten Hexagonal Screw (9) with the Allen Wrench (11)

Put the Tray (4) on the completed frame.

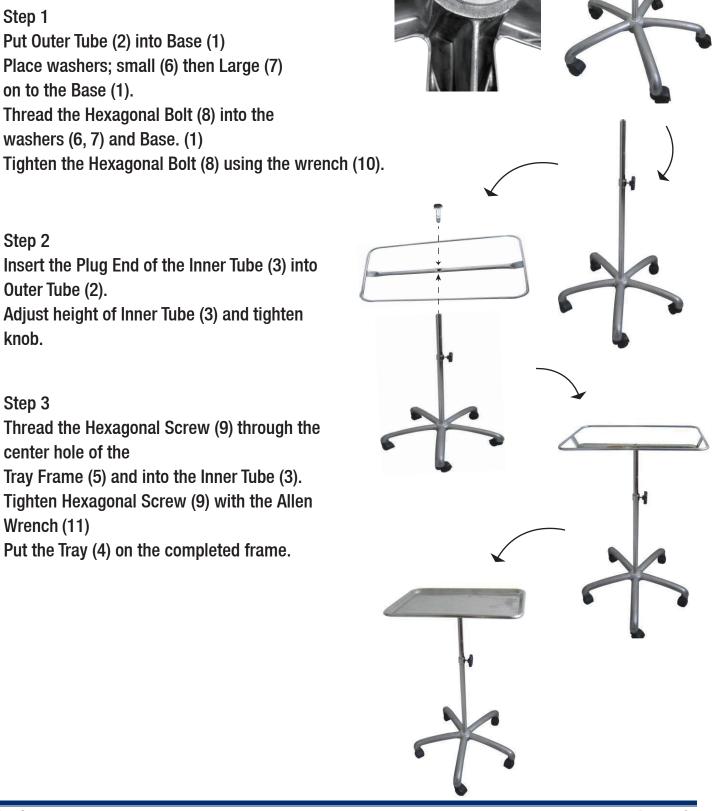

Rev.C Page 2 of 2