Customer Service 1-800-645-2986

GLOBAL INDUSTRIAL

Assembly Instructions

SIDE SIDE TOP/BOTTOM

Single Wide Locker Assembly

Before Assembly

Please read the complete instructions.

Check for missing or damaged parts.

Only use the specified hardware. Always use a #1 Bolt with bolt head out unless otherwise specified.

CAUTION: Some parts have sharp edges and corners, wear gloves during assembly.

Assembly will require the following tools:

- 2 drift pins (or 2 nail punches) for hole alignment
- 3/8" socket wrench

Lockers should be assembled on a flat, level surface and anchored according to the instructions found in Section 7 & 9.

DOOR & FRAME ASSEMBLY

TOP



HARDWARE:




(huma (g) (huma

NO. 2 BOLT & NUT #10 × 1/2" ROUND HEAD

6-Tier


Locker Assembly


 Bolt together top and bottom with bends facing down and the back with the bends facing up. Top and bottom are identical. For single and double-tier models, bolt hook to back.

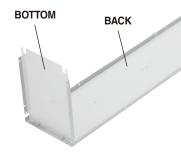



2. Bolt on side with bend in rear and facing in. Omit 2 bolts near bottom rear for legs. Install shelf by bolting to side with bend facing down and 45° bend in front. (See Section 8 Punching Patterns for single, double and 6-tier shelf hole locations.)

#10 X 3/8" ROUND HEAD

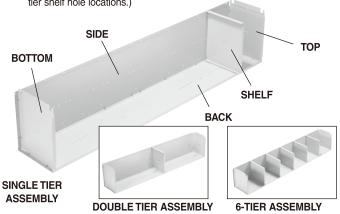


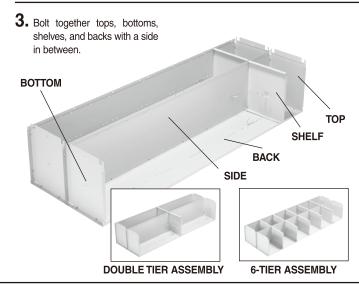


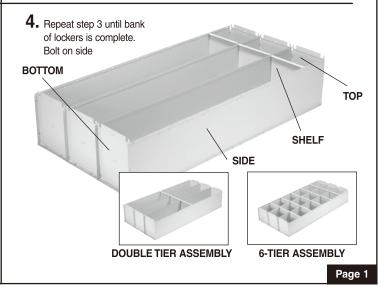



- 18" deep, single-tier lockers include both a coat rod and back and side hooks
- 12" and 15" deep single and double-tier lockers include back, side and top double prong hooks
- Six-tier models do not include coat rods or hooks

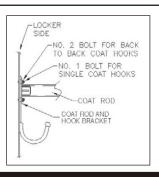

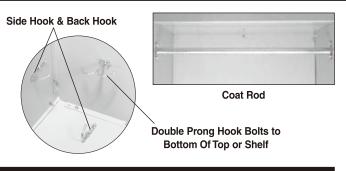


Leg

Locker

Foot

6. Insert rear legs in each end of locker. Bolt each leg in two places. Rear legs must be a maximum of 36" apart. Attach additional legs as required.

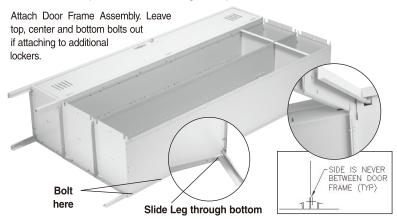


7. Bolt locker foot to leg. Stand locker in place. Level them and adjust rear legs to touch floor and tighten bolts. Floor anchor not included. Bolt banks of lockers together using holes omitted in step #5.

Anchor individual lockers using locker foot on all four legs. For banks of lockers, anchor extreme ends plus intermediate lockers on 36" centers maximum.

WARNING:

- -FLOOR ANCHOR MUST HAVE A MINIMUM PULL-OUT VALUE OF 190 LBS.
- -WALL ANCHOR MUST HAVE A MINIMUM PULL-OUT VALUE OF 150 LBS.

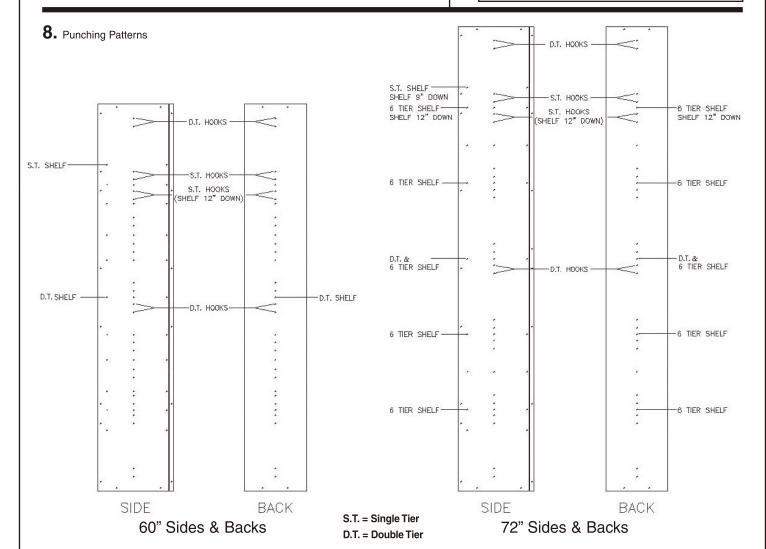

Three Wide Locker Assembly Instructions

Customer Service 1-800-645-2986

9. Recommended Anchoring Methods

