




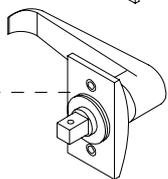




INDUSTRIAL STORAGE CABINET
ASSEMBLY INSTRUCTION





CONTENTS

REF	QTY	DESCRIPTION	REF	QTY	DESCRIPTION
1	1	LEFT SIDE BACK PANEL	H1	3	M5X10mm ROUND PHILLIP SCREW 
2	1	RIGHT SIDE BACK PANEL	H2	3	5.25mm PLAIN WASHER 
3	1	LEFT SIDE PANEL	H3	4	6.5mm PLAIN WASHER 
4	1	RIGHT SIDE PANEL	H4	4	M6X19mm ROUND PHILLIP HEAD SCREW 
5	1	SUPPORT BEAM	H5	6	HINGE PIN 
6	1	BOTTOM FRONT CHANNEL	H6	2	BUMPER 
7	1	BOTTOM FRONT KICK PLATE	H7	12	PLASTIC HINGE CAP 
8	1	BOTTOM SHELF	H8	16	SHELF CLIP 
9	1	TOP PANEL	H9	6	PLASTIC INSERT 
10	1	LEFT DOOR	H10	1	RIGHT HAND DOOR HANDLE 
11	1	RIGHT DOOR	H11	2	BACK PLATE 
12	4	SHELF	H12	4	5.5mm SPLIT WASHER 
13	4	GUSSET REINF OR CEMENT PLATE	H13	4	M5X8mm ROUND PHILLIP HEAD SCREW 
			H14	1	COTTER PIN 
			H15	1	LOCK LATCH 
			H16	2	LOCKING ROD 
			H17	1	LOCKING BRACKET 
			H18	1	LEFT HAND DOOR HANDLE 
			H19	2	ROD GUIDE 
			H20	16	SCREW 
				2	KEY 



WARNING.

1. USE 2 PEOPLE TO ASSEMBLE.
2. LAY PARTS ON SOFT SMOOTH NON-SCRATCH SURFACE.
3. DO NOT OVERLOAD SHELVES.
4. LOAD LOWER SHELF FIRST.
5. DO NOT CLIMB OR STAND ON SHELVES.

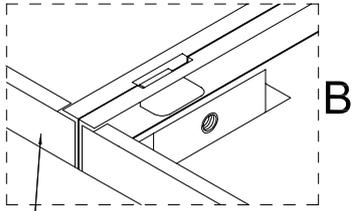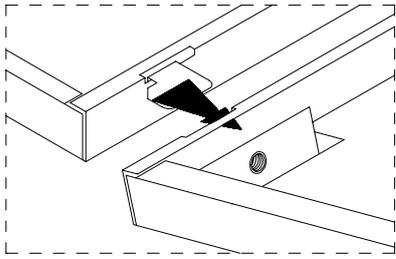

1

1

SEE DETAIL A and B

1

2

1

1

LEFT SIDE
BACK PANEL

RIGHT SIDE
BACK PANEL

SEE DETAIL C and D

3

2

4

LEFT SIDE PANEL

RIGHT SIDE PANEL

C

3

D


3

5

H2

H1

5

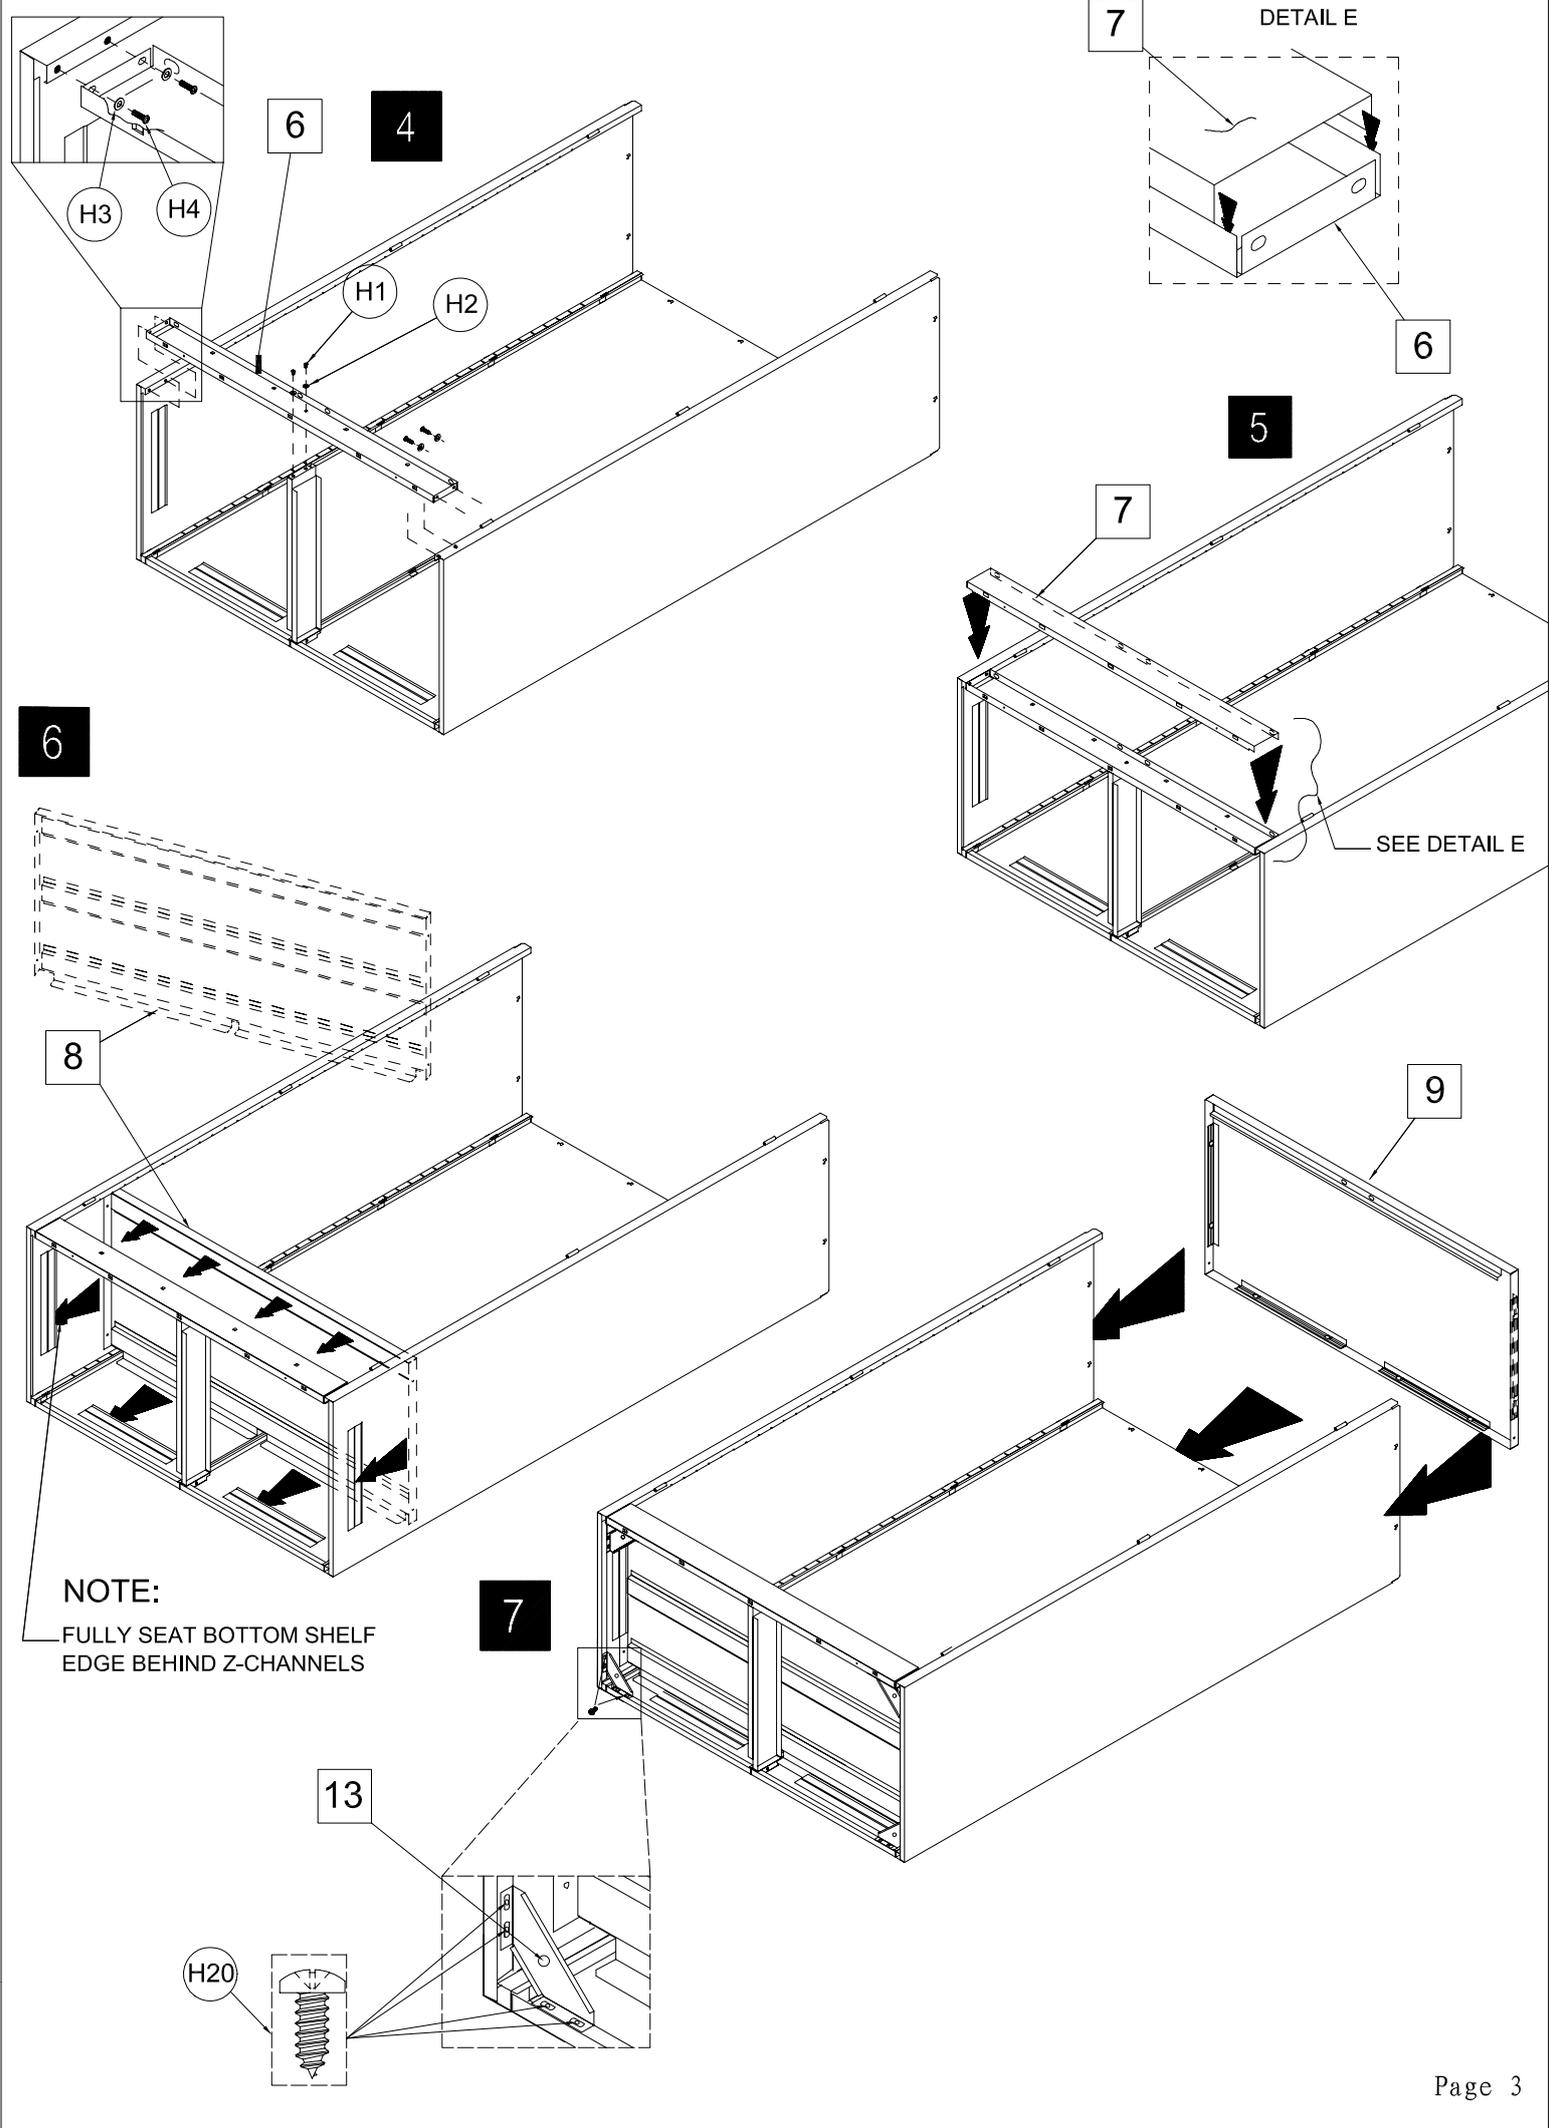

4

6

H3

H4

H1

H2

7

DETAIL E

6

5

7

SEE DETAIL E

6

8


9


7

13


H20

NOTE:
FULLY SEAT BOTTOM SHELF
EDGE BEHIND Z-CHANNELS





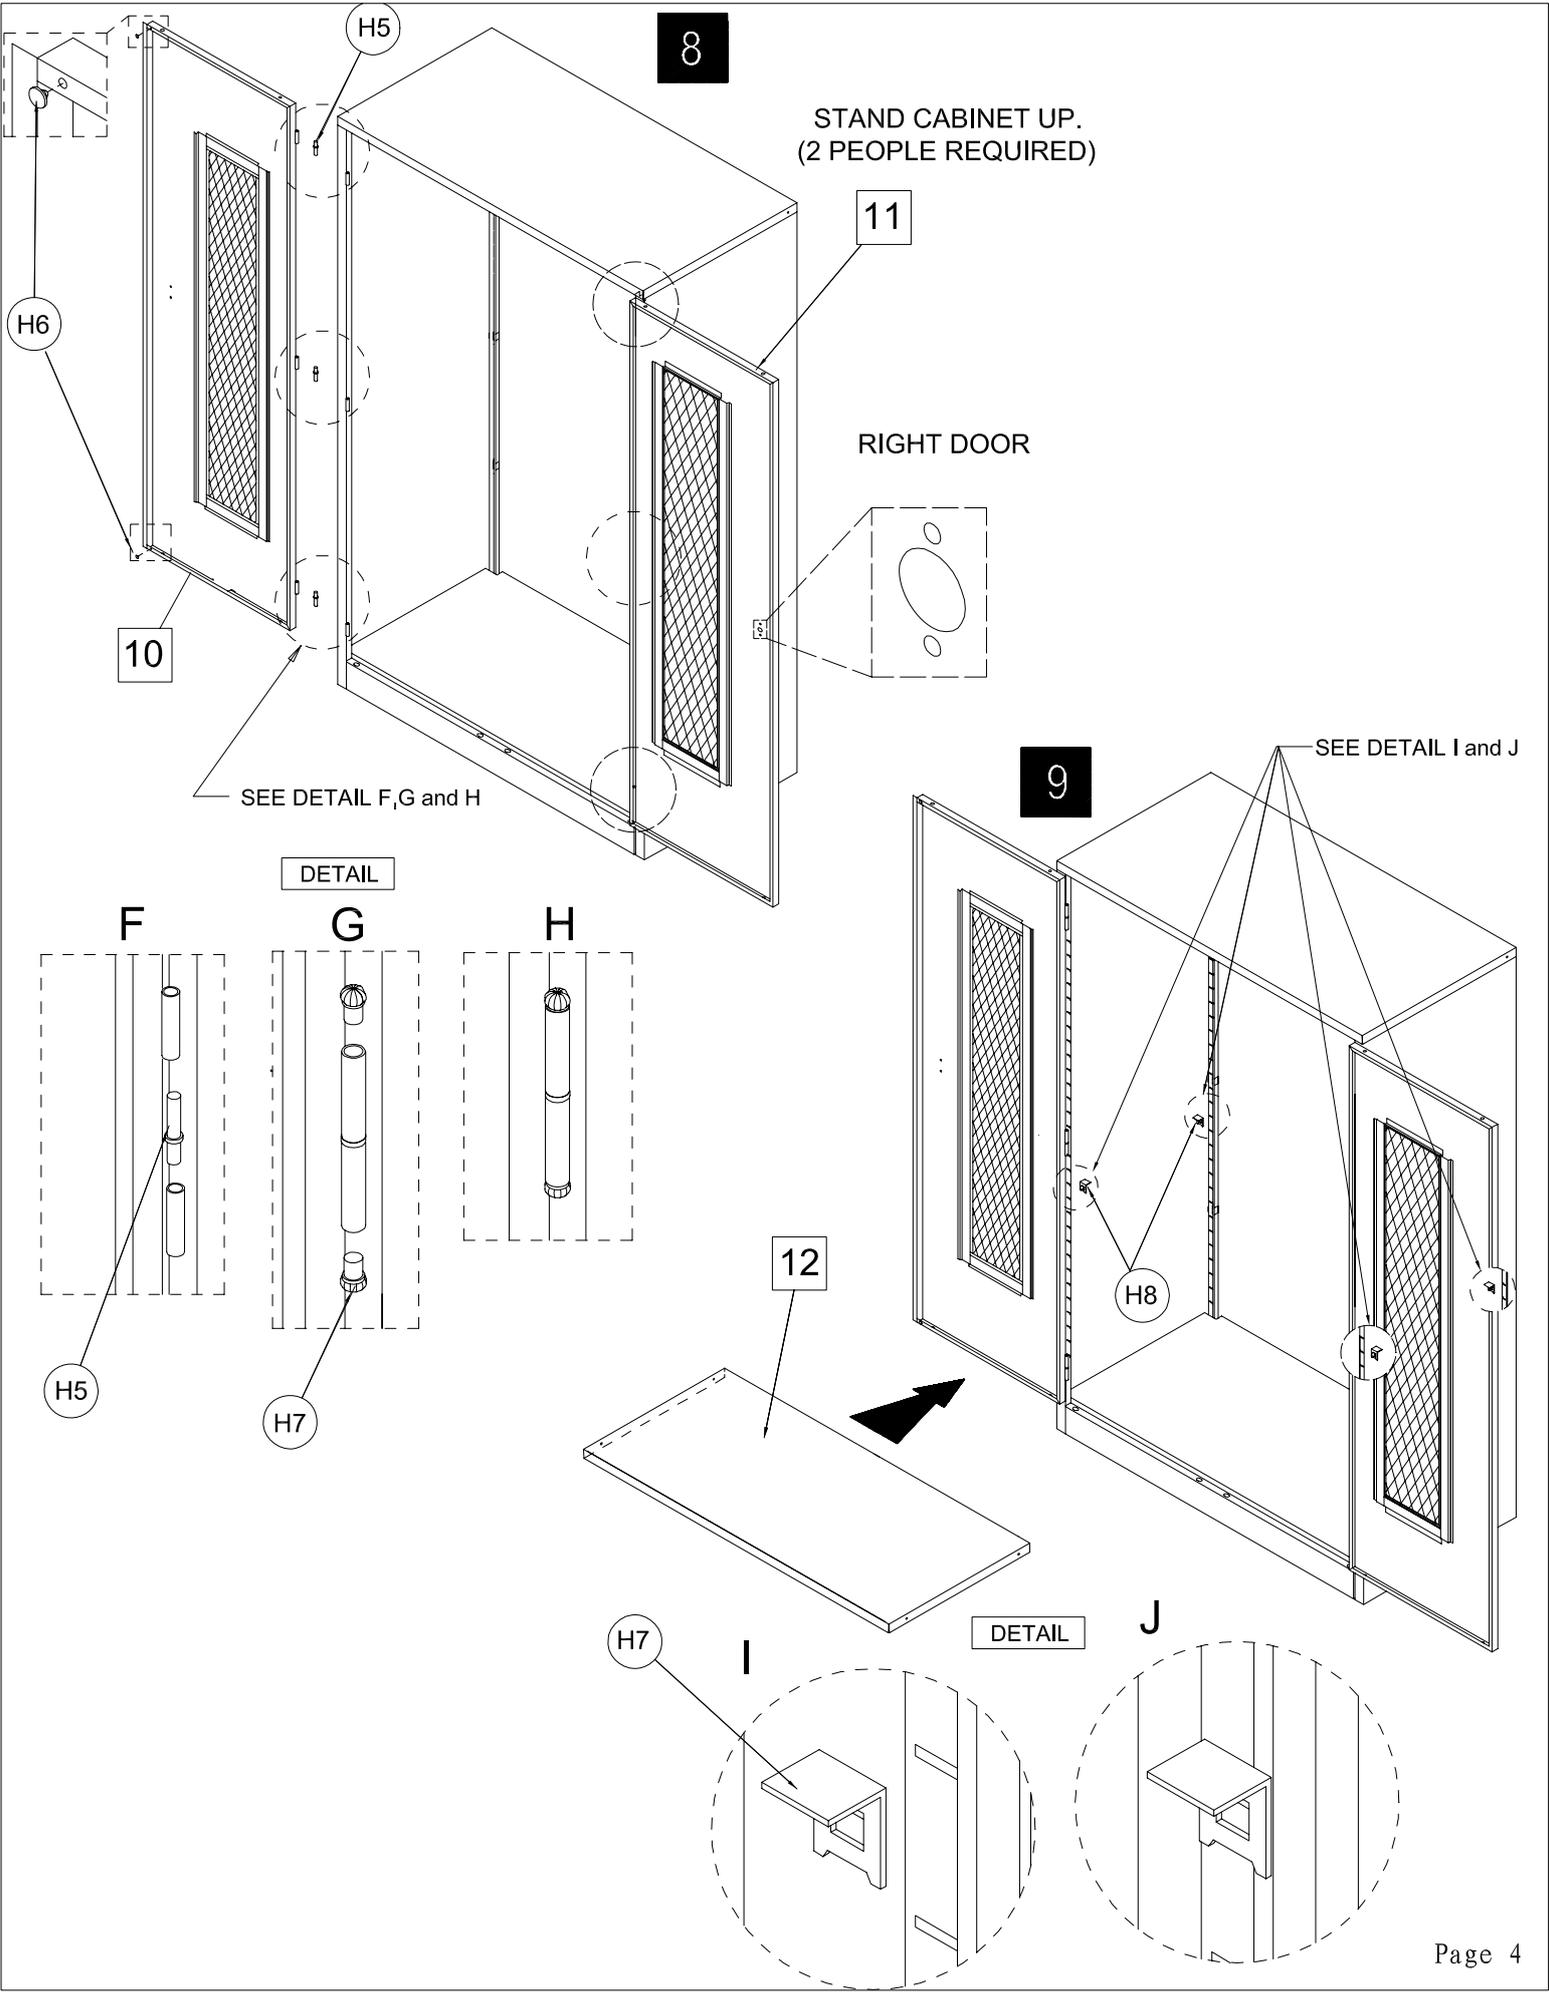


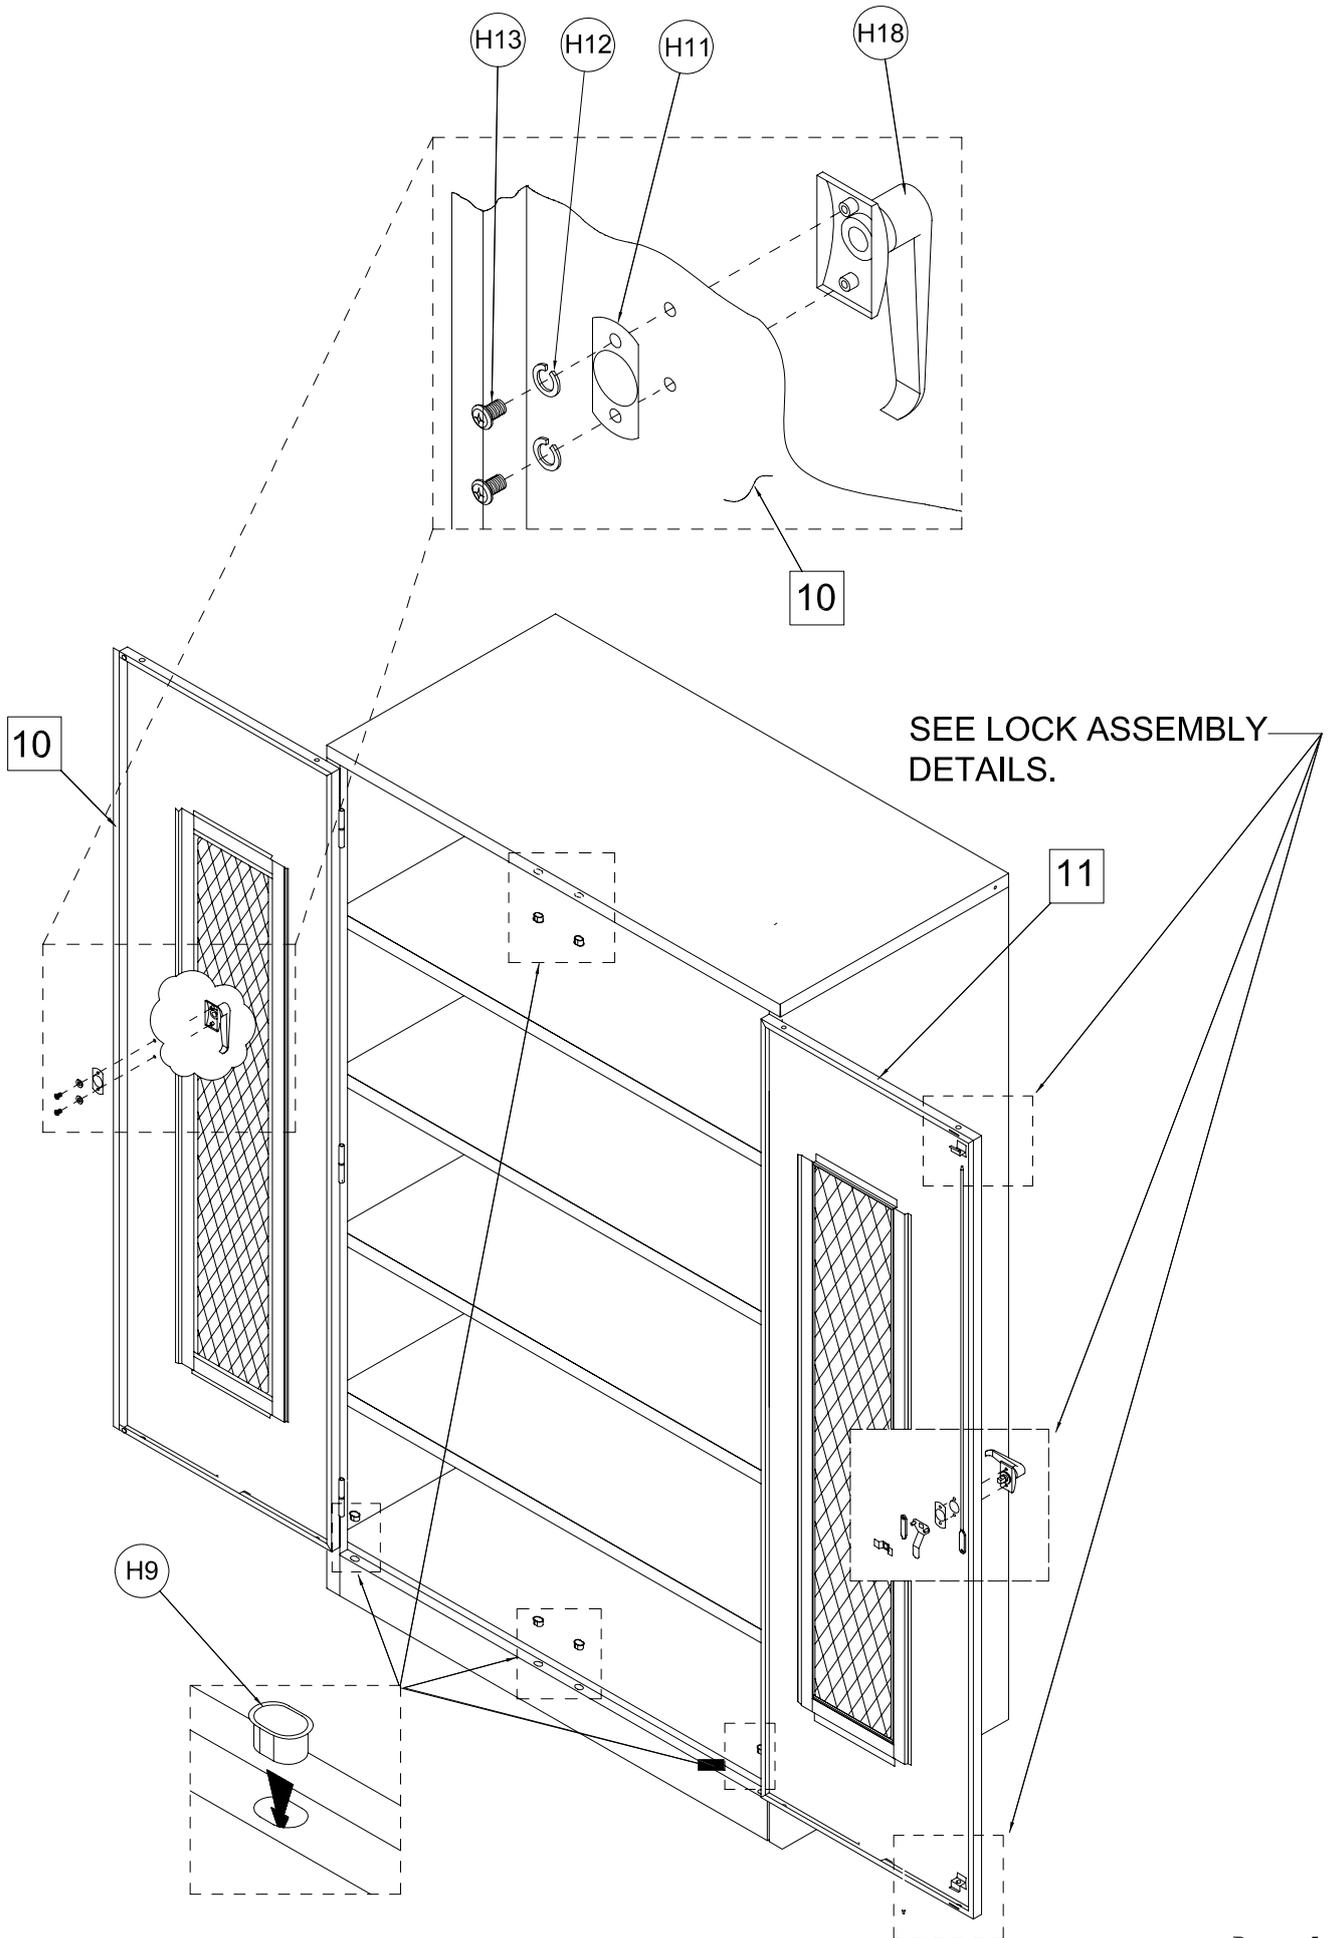

LOCK ASSEMBLY

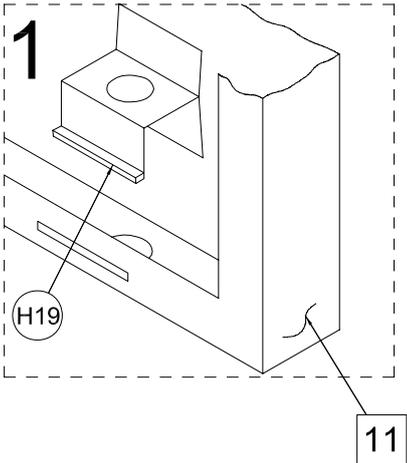

RIGHT DOOR ROD ASSEMBLY

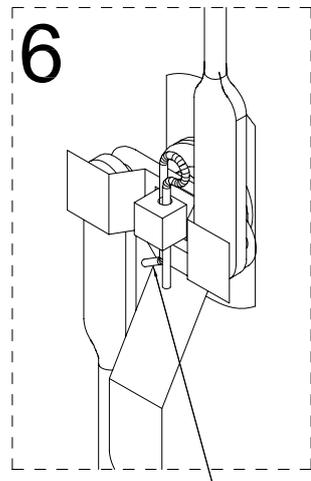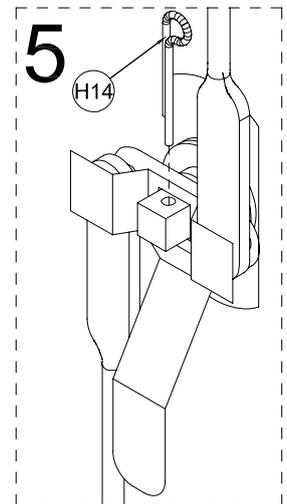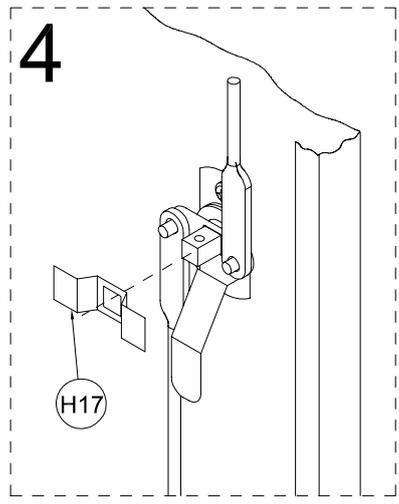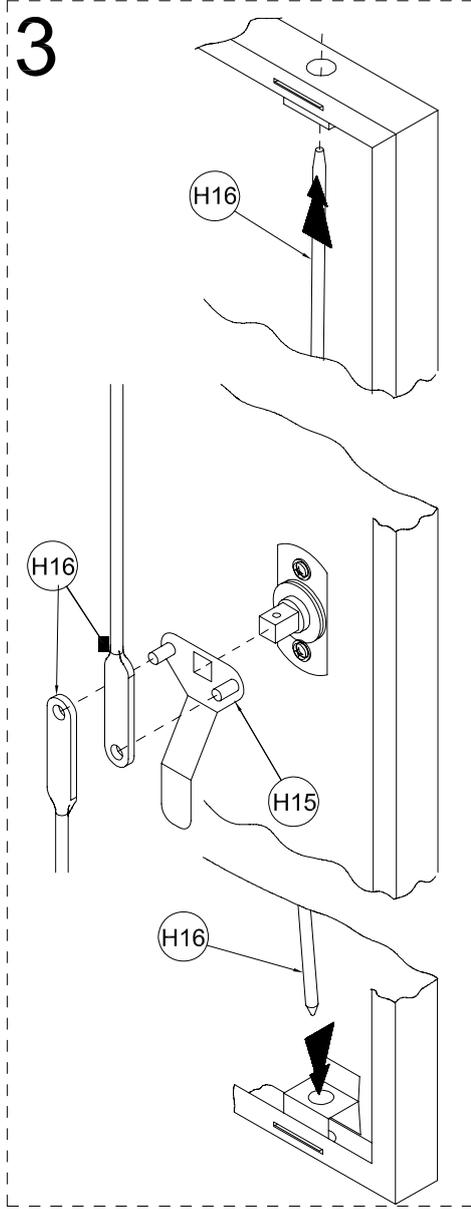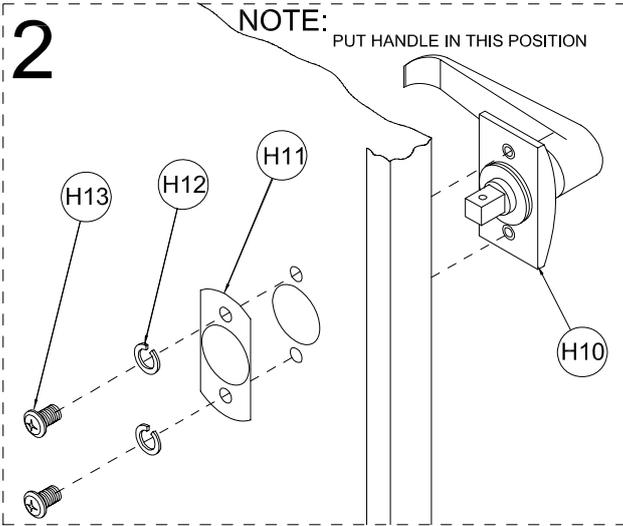

BEND 1 LEG OF COTTER PIN WITH PLIERS.