




ASSEMBLY INSTRUCTIONS FOR CHROME LUNCHROOM TABLES

6100 Hix Road • Westland, MI 48185
(734) 722-1595 • Fax (734) 722-8210 • Toll Free (866) 883-2484
www.premiermi.com

Parts List:

- A. 1 Spyder
- B. 2 Washers
- C. 2 Nuts
- D. 1 Rod
- E. 1 Tube
- F. 1 Base
- G. 2 Lock Washers
- H. 4 Glides

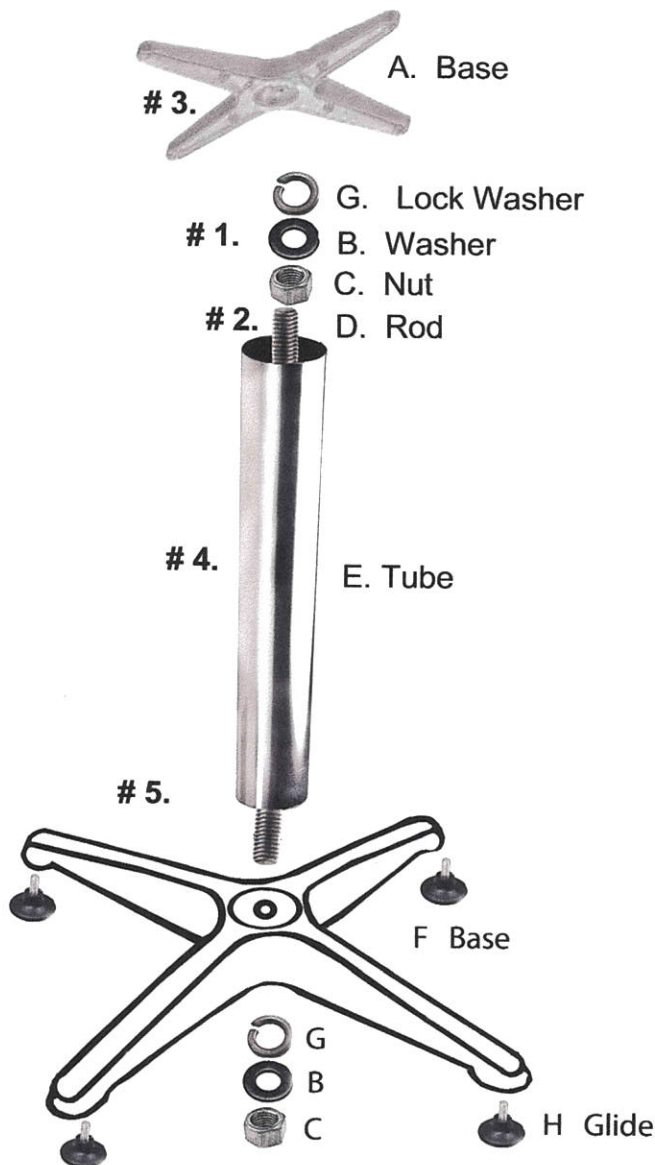

1. Thread nut (C) onto the end of rod (D). Place washer (B) over nut (C). Place lock washer (G) over washer (B).
2. Thread rod assembly onto spyder (A) making sure the spyder has the side with the tube (E) slot facing rod (D). Rod (D) should only be threaded until flush with opposite side of spyder (A)
3. Tighten nut (C) to spyder (A) using 17mm (1/16) socket or wrench.
4. Set assembly on the floor, spyder side down and rod pointing up. Place tube (E) over rod (D) so it fits on the tube slot.
5. Place base (F) over tube (E) and rod (D).
6. Put on lock washer (G) then washer (B) then thread on nut (C).
7. Place table top face down on the floor.
8. Center pedestal assembly on table and fasten with the screws provided.
9. Thread glides (H) onto base (F). Flip over the table and adjust the glides to level the table.