

Wrap Stick


EP-790 Assembly Instructions

EP-790 Featured Parts



EP-790 Parts List

ITEM NO.	PART NO.	DESCRIPTION
1	E790-05-23	Bottom Disc
2	E790-03	Quarter Turn Knob
3	E790-11	Quick Release Pin
4	E790-06	Slide Grip Handle
5	E790-04	Tension Knob
6	E790-02	Tube Extension
7	E790-01-XL	Tube Handle

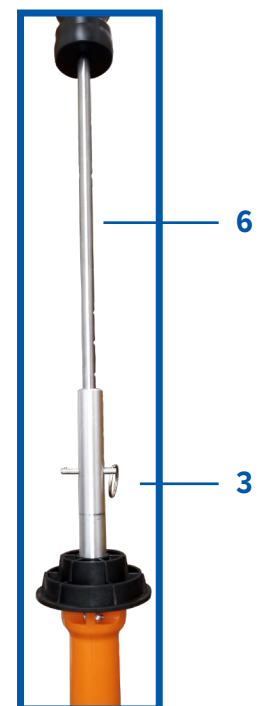

INSTRUCTIONS

1. Remove *quick release pin* and insert *tube extension* into *tube handle*.
When *tube extension* is the same height as the stretch film roll, replace *quick release pin*. Use the *tension knob* to adjust, if needed.
2. Push down and twist *quarter turn knob* to the left until it releases.
Slide stretch film roll over *tube extension* and place *bottom disc* on top.
In order to secure, push down and twist *quarter turn knob* to the right until mechanism locks.
3. Twist *tension knob* to the right until it comes in firm contact with *slide grip handle*.

Note: To remove your stretch film roll, *tension knob* must be released before *quarter turn knob* can be removed.