Semi-Automatic Random Size Case Sealer with Universal Heads

User manual

Model No. 412559



Table of Contents

Specifications	pg. 2
Safety Information	pg. 3
Installation	pg. 4
• Height Adjustment	pg. 4
• Tape Installation	pg. 5
• Air Source Installation	pg. 6
• Air Pressure Adjustment	pg. 7
Operation Instructions	pg. 8
Troubleshooting	pg. 10
Maintenance	pg. 11
Parts List	pg. 12
Replacement Parts	pg. 14
Circuit Diagram	pg. 18
Pneumatic Diagram	pg. 19
Warranty	pg. 20

PLEASE READ THESE INSTRUCTIONS COMPLETELY AND SAVE FOR REFERENCE. UPON RECEIVING, INSPECT THE UNIT FOR ANY DAMAGE OR MISSING PARTS. IF DAMAGE IS EVIDENT, NOTIFY THE CARRIER IMMEDIATELY TO FILE A CLAIM. THESE PRODUCTS MUST BE HANDLED WITH CAUTION BY TRAINED OPERATORS WITH PROPER SAFETY GEAR AND EQUIPMENT. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN SERIOUS INJURY. PLEASE CONTACT GLOBAL INDUSTRIAL CUSTOMER SERVICE (1-800-645-2986) FOR ANY ISSUES OR REPLACEMENT PARTS.

Specifications

Specifications	Parameter	Unit
Voltage	AC 110/60	V/Hz
Power	220	W
Max. Carton Size (W x H x L)	19.6 × 19.6 × Unlimited	inches
Min. Carton Size (W x H x L)	7.9 × 4.7 × 5.9	inches
Sealing Speed	65.62	ft/min
Height of Table	22.8 – 30.7	inches
Bleed Pressure	0.4-0.7	MPa
Compatible Adhesive Tape	BOPP, water-free adhesive tape, PVC adhesive tape	-
Conveying Form	Upper and lower conveyor belt drive	-
Dimension (L×W×H)	77.6 x 70.1 x (50.4 to 57.5)	inches
Weight	353	lb.
Maximum Outside Diameter of Adhesive Tape	9.8	inches
Compatible Adhesive Tape Widths	1-1/2" – 3" (38.1mm - 76.2mm)	inches


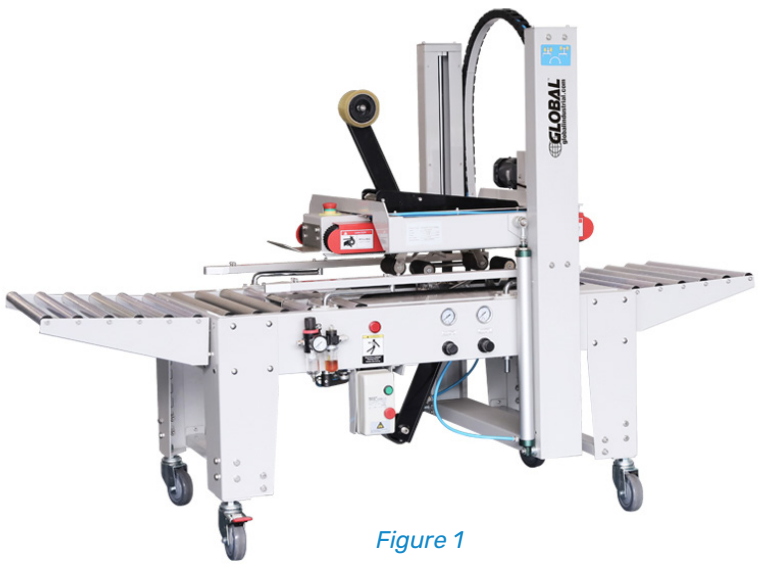


Figure 1


This safety alert symbol identifies import messages in the manual.
READ AND UNDERSTAND THEM BEFORE INSTALLING OR OPERATING THIS EQUIPMENT

Safety Information

1. DO NOT use near explosive or flammable gasses.
2. DO NOT reach into any rotating parts unless the machine is OFF and disconnected from a power source. Hands may be caught in the moving parts which can cause serious injury.
3. Prevent accidental starting.
   Ensure machine is OFF before connecting to a power source.
4. DO NOT touch the machine or the plug when hands are wet. Wet hands can increase the risk of electric shock.
5. Always turn off the machine and unplug the power cord when not in use. Cover the machine to protect it from dust.
6. Do NOT pull the power cord by the cable.
   Always unplug the power cord by pulling the plug.
7. Always use outlets that match the power tool plug. Never remove the grounding plug or make any other modifications. Ensure the outlet is properly installed and grounded. Do not use adapter plugs. Using unmodified plugs and outlets helps ensure grounding and reduces chances of electrical shock.
8. Always use a GFCI protected supply when using the machine. GFCI reduces the risk of an electric shock.
9. Machine will gradually lower itself automatically after shutting down as the air bleeds out. Do NOT use in corrosive atmospheres. Do NOT use in temperatures lower than 41˚ F or higher than 86˚ F.

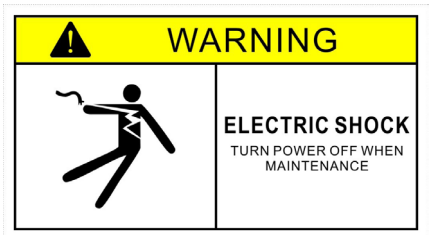

The “Warning-Electric Shock” is attached to the electrical enclosure on the lower left side of the machine frame. The warning label warns service personnel to unplug the power supply before attempting any service work on the case sealer.

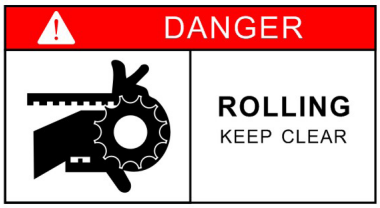

The “Danger-pinch point” label is attached to the center plate at the exit end of the machine bed. The label warns the operator to keep hands out of this area when the drive belts are running.






“Warning-Sharp Knife” label is attached to the upper conveyor belt assembly. The label warn operators and service personnel of the very sharp knife used to cut the tape at the end of the tape application.




“Caution-Sharp Knife” label warns operators and service personnel of the extremely sharp knife used to cut the tape. Keep hands out of these areas except as necessary to service the tape heads or to load/thread tape.



The “arrow” located on each guide rail indicate the direction where the carton enters and exit through the conveyor.

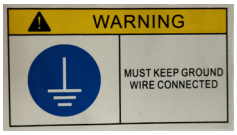

The “Warning must keep ground wire connected” warns operators to keep the ground plug connected at all time during operation.

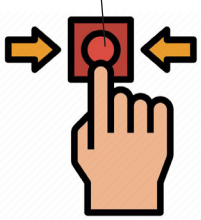

The “Red” emergency switch is located on the top/front of the upper conveyor belt assembly. If you encounter problems during the packaging process, press the emergency stop switch to stop the machine.

Installation

Height Adjustment

1. Raise one end of the machine by lifting the support rails between the casters with a forklift, pallet jack, or scissor jack. Do NOT raise the machine too high to avoid turning over the machine. **NOTE:** Scissor jack and additional equipments not included. Pallet jack requires a wood block between the fork and support bar to lift the machine.
2. Unscrew the (4) locking bolts and adjust the height of the feet. Tighten the screws when completed.
3. Lower the machine back to the ground.
4. Repeat the above 3 steps to the other end of the machine to adjust the height of the other two feet.
5. Make any fine adjustments, if necessary, with the threaded caster(s) to ensure the machine leveled.

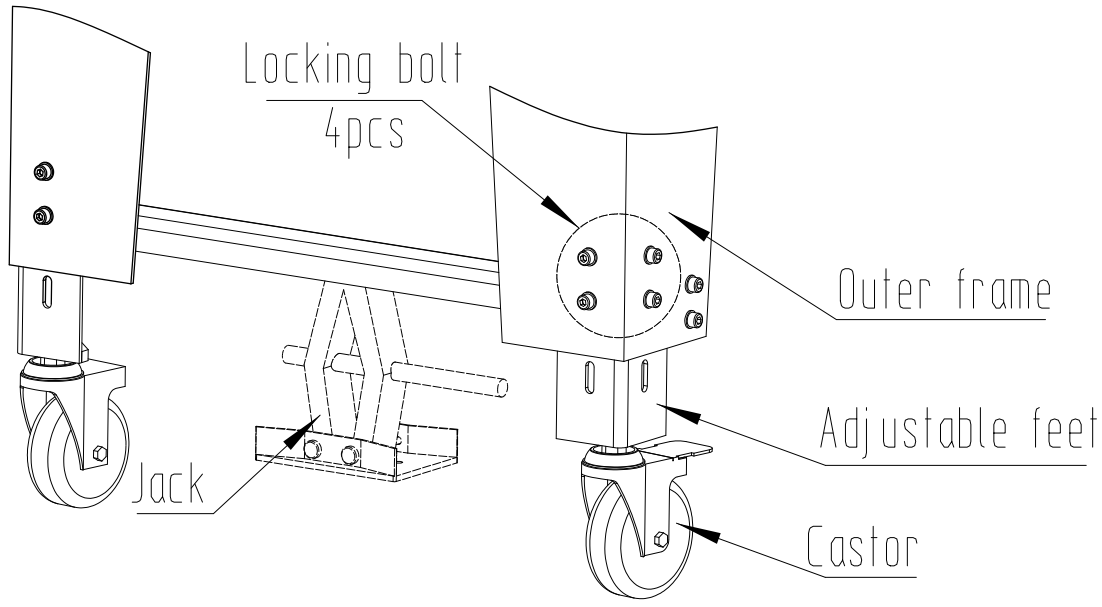


Figure 2

Tape Installation

Warning!

1. Ensure the machine is OFF and the power cord is unplugged. Attach the tape roll to the reel so that the adhesive side faces outward when pulled. If the tape doesn't fit onto the tape reel, loosen the adjustment nut. Then retighten when the tape is installed. Ensure the tape can spin and there is adequate tape tension.

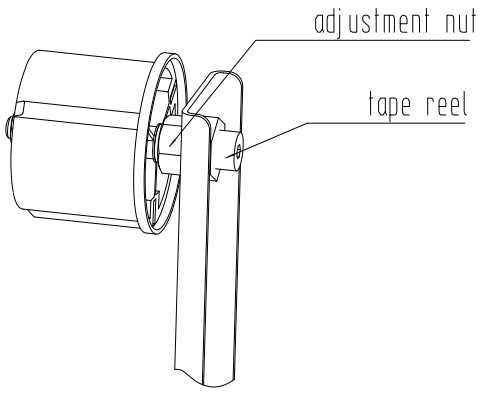


Figure 3

2. Pull the tape through to the copper roller, the tension roller, the copper wheel , the tap pressing plate, and the front rubber wheel, respectively.

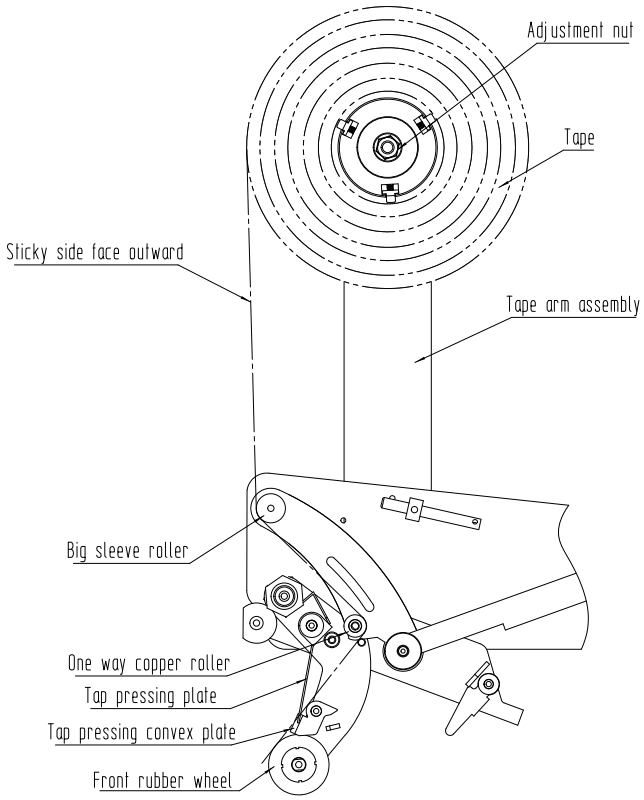


Figure 4

Air Source Installation

1. Clean all connecting pipes and joints to prevent dirt from entering the gas tubes when installing the air regulator.
2. Ensure the air flow matches the direction indicated by the arrow on the body.
3. Drain the water from the filter by pushing the drain button upward.
4. The pressure is preset to 0.3-0.4 MPa. However, you can adjust the pressure by using the pressure knob if needed. Pull the knob up to unlock the knob. Turn the knob gradually (clockwise to increase outlet pressure and counterclockwise to decrease). DO NOT change the pressure drastically too quickly. Press the knob down to fix the setting.
5. Fill the oil feeder with mechanical oil (ISO VG32 or equivalent) to no more than 80% of capacity.

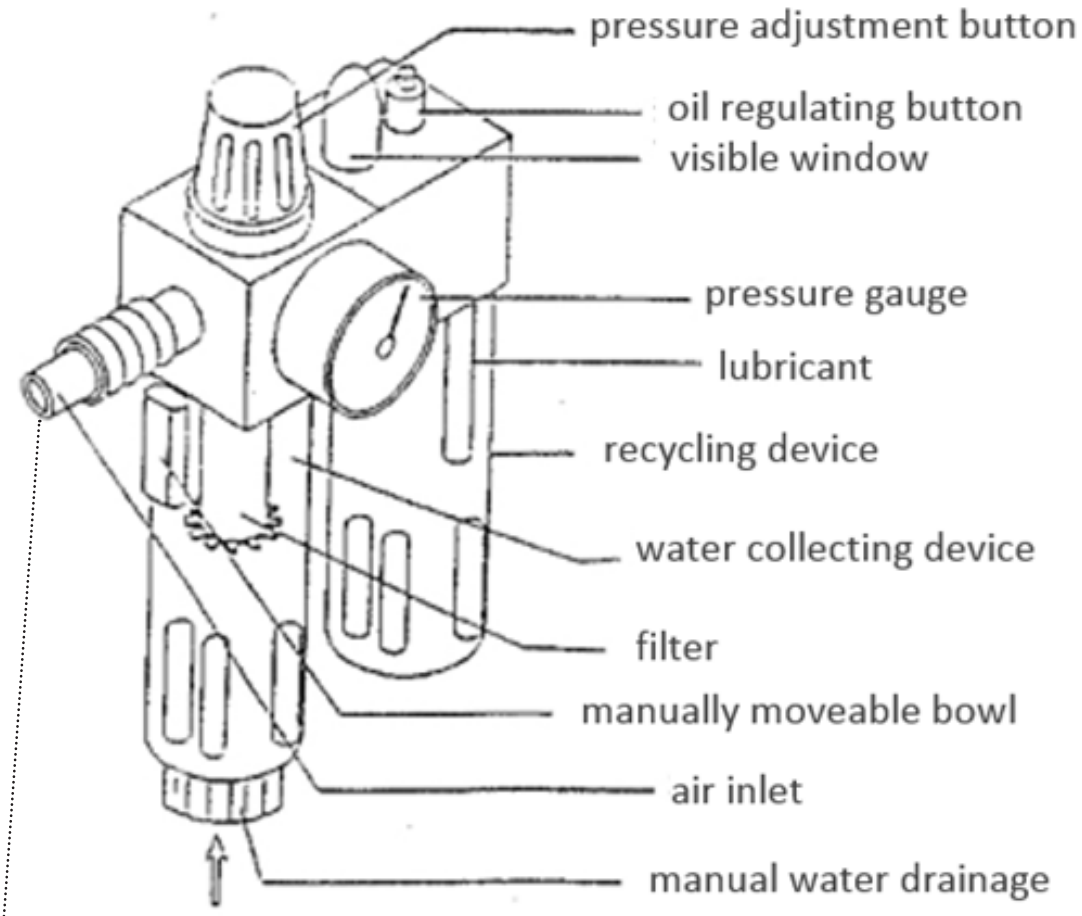


Figure 5

Note: Air inlet connects to 8mm OD x 5mm ID air pressure hose.

Air Pressure Adjustment

The button A (cylinder pressure regulating valve) is used to adjust the pressure (0.2 MPa) of the guide rails on both sides. If the pressure is too high, the box can get damaged.
The button B (lifting cylinder buffer pressure regulating valve) is used to adjust the pressure of the upper sealing component against the carton (0.12~0.15 MPa). Increase the pressure to prevent damaging a thin, light, or delicate box.

1. Pull the button outward away from the machine to unlock the knob.
2. Turn the button clockwise to increase the pressure, and counterclockwise to decrease the pressure. After adjusting the pressure, press down the button to lock the setting.


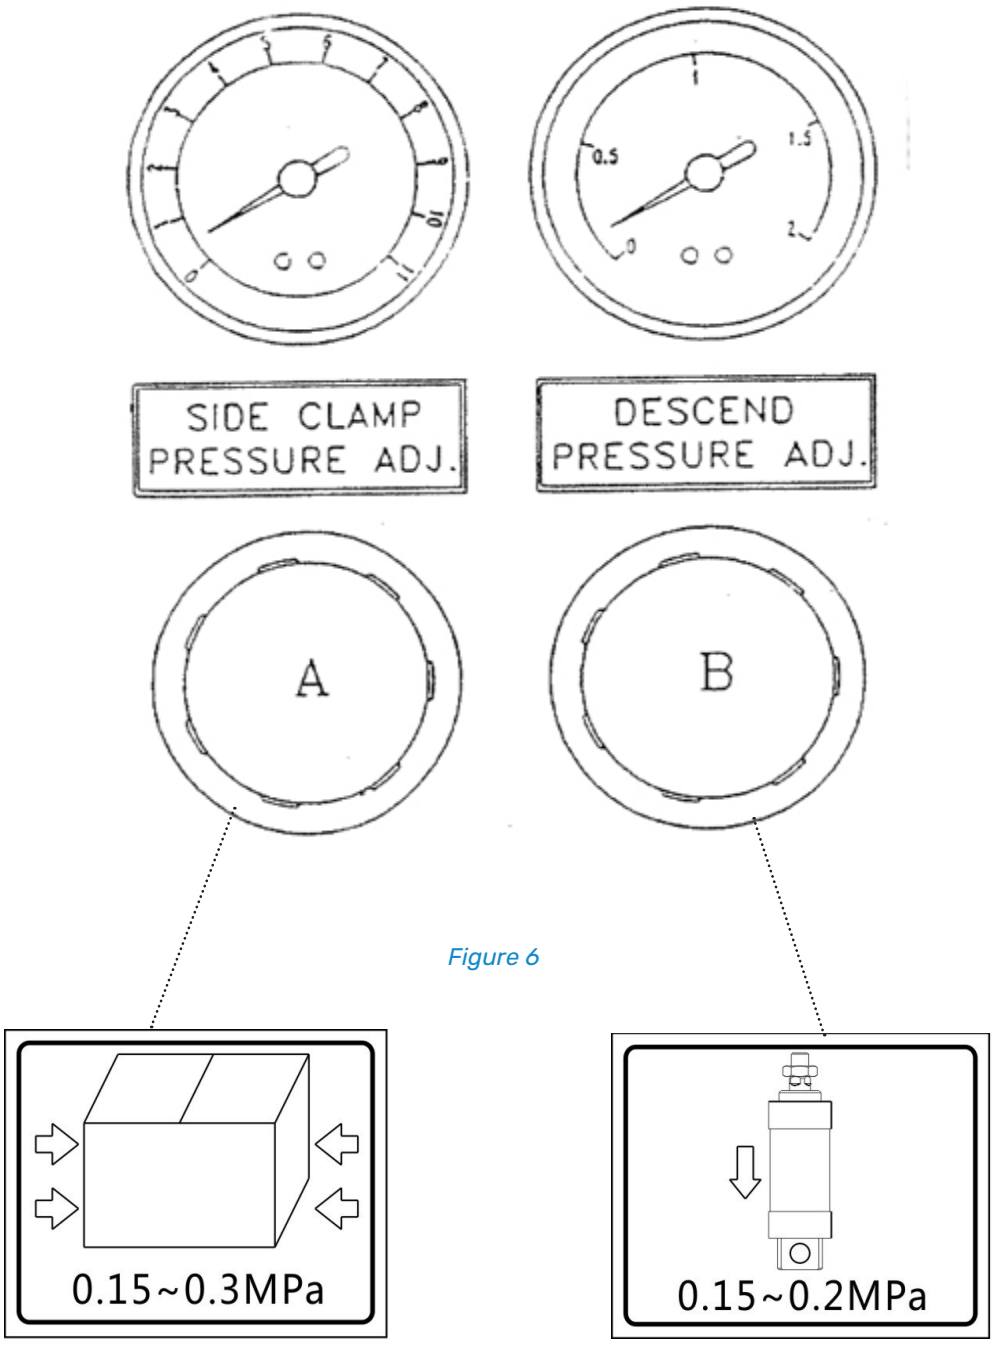


Figure 6

Operation Instructions

1. Ensure the machine is OFF.
   Connect the machine's power plug to a power source with a GFCI receptacle.
2. Press the power switch on the machine's frame to start the machine.
3. Ensure the package isn't creased or wet, and does not have plastic materials or dust on the outside. Place the package on the rollers and gently push it forward towards the lower switch A. *See figure 7*
4. When the package passes switch A, the side guide rails will automatically grab and center the carton. *See figure 8*
5. The upper sealing component will automatically lower until the lever component is pressed against the carton. The conveyor belt will activate and pull the box through both the upper and lower sealing heads. *See figure 9 & 10*
6. If you encounter problems during the packaging process, press the emergency stop switch to stop the machine. The upper sealing component will rise to its highest position, the guiding rails will open to the widest position, and the motor will stop working. Then take out the package and check the machine. Turn the emergency stop switch clockwise until the green strip is revealed and press the power button to restart the machine.

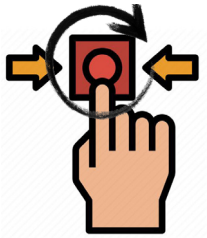

NOTE:
Rotate the stop switch button clockwise to resume operation.

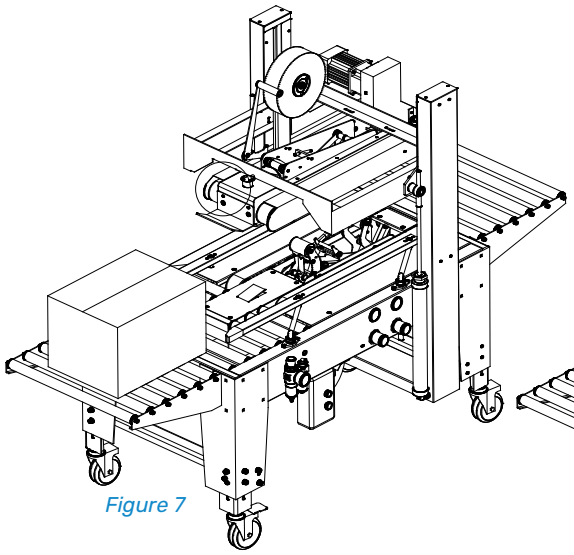


Figure 7

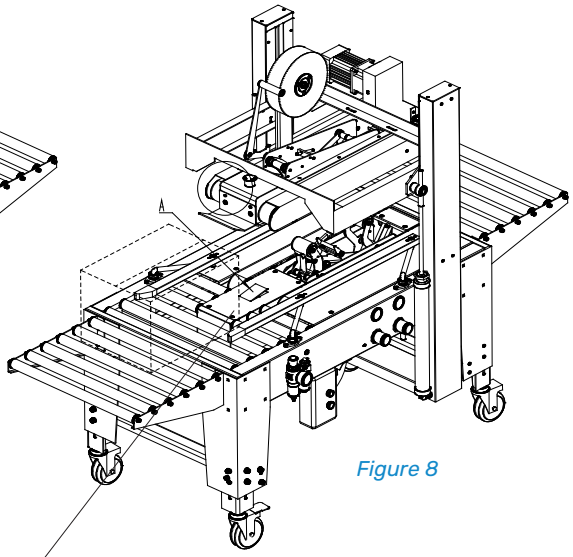
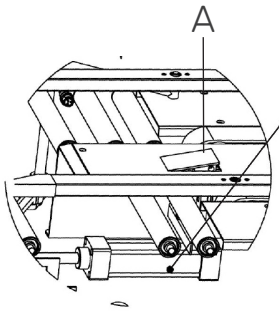


Figure 8



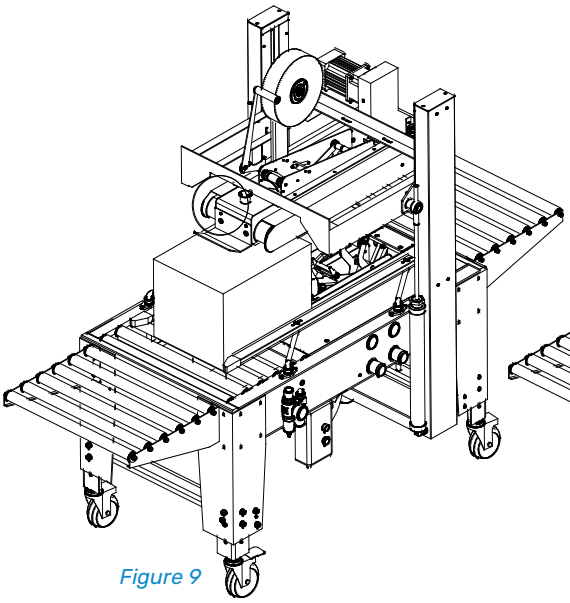


Figure 9

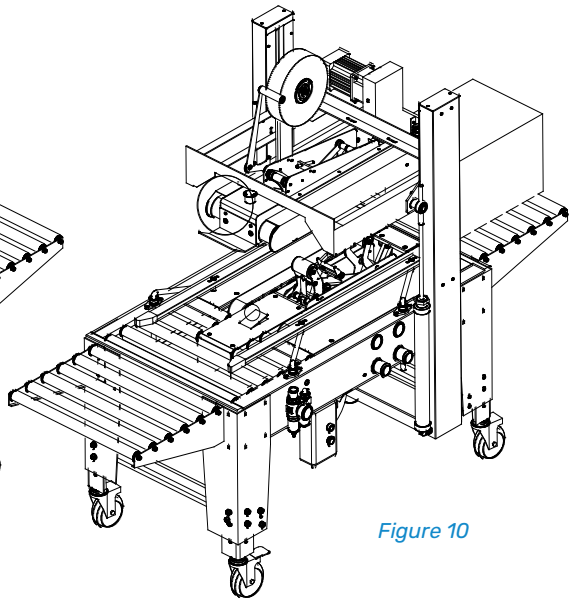


Figure 10

Troubleshooting

Problem	Potential Causes	Solutions
Tape does not cut throughly	Blade is not sharp enough	Replace blade
	Adhesive is attached to blade	Clean blade
Tape does not cut	Screw is loose	Tighten the screws on the cartridge
	Blade spring tightness	Replace blade spring
	Swing arm tension spring is too loose	Adjust the swing arm spring screw
Irregular tooth shape on the cutting area (tearing).	Blade is dull	Replace blade
	Blade is installed in wrong direction.	Re-install
	Knife spring too weak	Replace spring
Excess tape cutted.	The knife seat is stuck, the movement is not flexible or the elasticity is not enough	Check the screws on each part of the sealing head to adjust the tension of the tension spring
Tape cut, but package is not sealed	The main tension spring is too loose, and the rear rubber roller rebound speed cannot be synchronized with the belt speed.	Moderately tighten the main tension spring screw
Package is blocked	Main tension spring is too tight	Adjust the main tension spring
	Tape roller adjustment nut is too tight	Adjust the adjustment nut
	Improper adjustment of drive unit and carton height and width	Re-adjust the height and width of the drive unit
Tape is broken or cut off while sealing carton	Blade is positioned too high	Lower the position of blade
Package is not centered during sealing	Package was not pushed or guided towards the sealers	Align the package so the sides are parallel to the guide rails before pushing
Too long tape leg	Blade is positioned too low	Raise the position of blade
Too short tape leg	Blade is positioned too high	Lower the position of blade

Problem	Potential Causes	Solution
Tape doesn't adhere to the package	Tension spring on tape head is too weak Friction of tape roller lessened after use	Adjust the friction of the tape mount
The machine does not start	Power switch is damaged	Replace the power switch
	Loose wires	Rewiring
Drive belt does not turn	No power	Check the power supply
	Geared motor damage	Replace the geared motor
	Chain shedding	Reinstall the chain
	Bearing damage	Replacement bearing
	Conveyor belt is damaged	Replace the damaged conveyor belt.
	Conveyor belt is too loose	Adjust the tension of the conveyor belt
Machine alarm	Package stuck	Take out the package

Maintenance



Warning! Danger of electric shock!
The power must be completely disconnected before servicing the machine.

If the machine is used frequently (<4 hours a day), then professional maintenance is recommended every six months. If usage does not exceed 4 hours per day, a complete maintenance is recommended once per year. Keep the inside and outside of the machine clean and dry at all times.

Frequency	Maintenance
Every Day	Clean off any residues on the cutting blade
Every Week	Check oil levels and drain water. Wipe the cylinder piston to prevent dust from entering the piston cylinder or creating air leaks.
Every Two Months	Check all the screws and nuts. Tighten if needed.
Every Six Months	Replace the cutting blade. *Model no. 412572*
Every Year	Replace the conveyor belts. *Model no. 412565 & 412566*

Parts List

Major Components

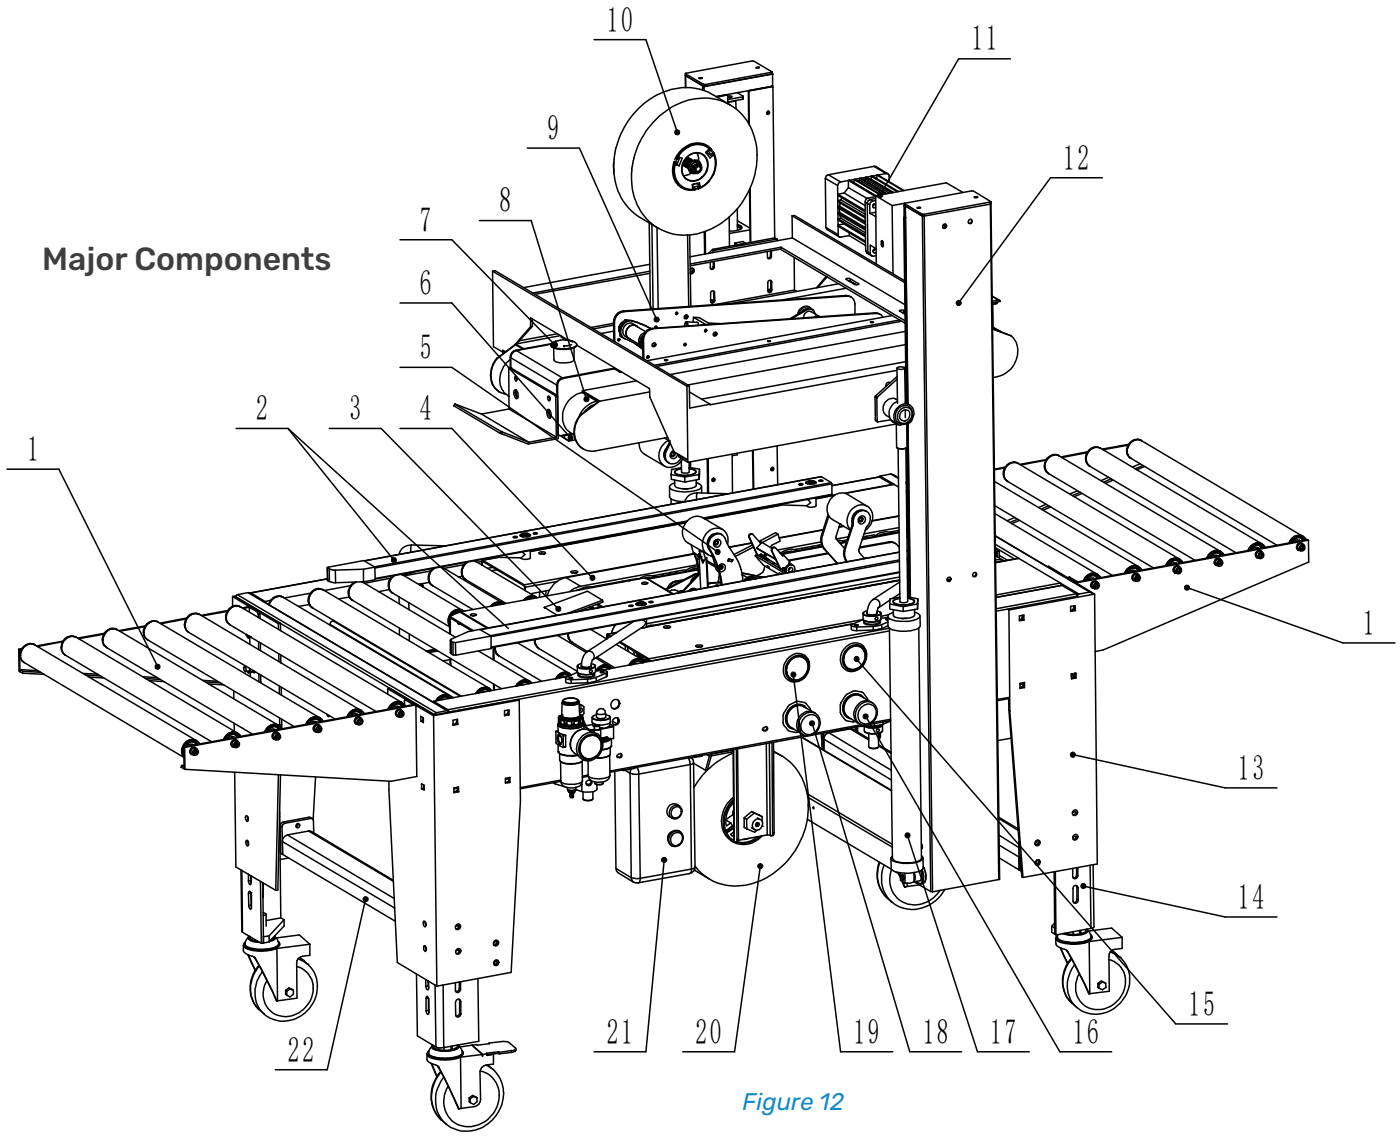


Figure 12

Ref. No	Part Name
1	Infeed/Exit Conveyor
2	Guide rails
3	Lower switch – width adjustment
4	Lower conveyor belt
5	Lower Tape Head, 3”
6	Upper Switch – Height Adjustment
7	Emergency stop switch
8	Upper conveyor belt
9	Upper Tape Head, 3”
10	Upper tape (not included)
11	Upper Seal Assembly
12	Vertical Column Frame

Ref. No	Part Name (cont.)
13	Corner Leg Frame
14	Telescopic frame
15	Lifting cylinder buffer pressure gauge (0.12-0.15Mpa)
16	Lifting cylinder buffer pressure regulating valve
17	Lifting cylinder
18	Width adjustment cylinder pressure regulating valve
19	Width adjustment cylinder pressure gauge (0.2Mpa)
20	Lower Tape (not included)
21	Power switch
22	Support rail

Hardwares and Accessories Content		
Ref. No.	**Description**	**Qty.**
H1	M4, 3mm Hexagon Spanner	1
H2	M5, 4mm Hexagon Spanner	1
H3	M6, 5mm Hexagon Spanner	1
H4	M8 Hexagon Spanner	1
H5	Slotted head screwdriver	1
H6	Phillips head screwdriver	1
H7	Wrench (8-10)	1
H8	Wrench (14-17)	1
H9	Wrench (17-19)	1
H10	1-1/2” Nylon Brush	1
H11	M8x25 Hex. Head Bolt – C Level	8
H12	8mm ID x 16mm OD Gasket	16
H13	M8 Hex Nut - C Level	8
H14	8mm Spring Washer	8

Images not provided

Replacement Parts

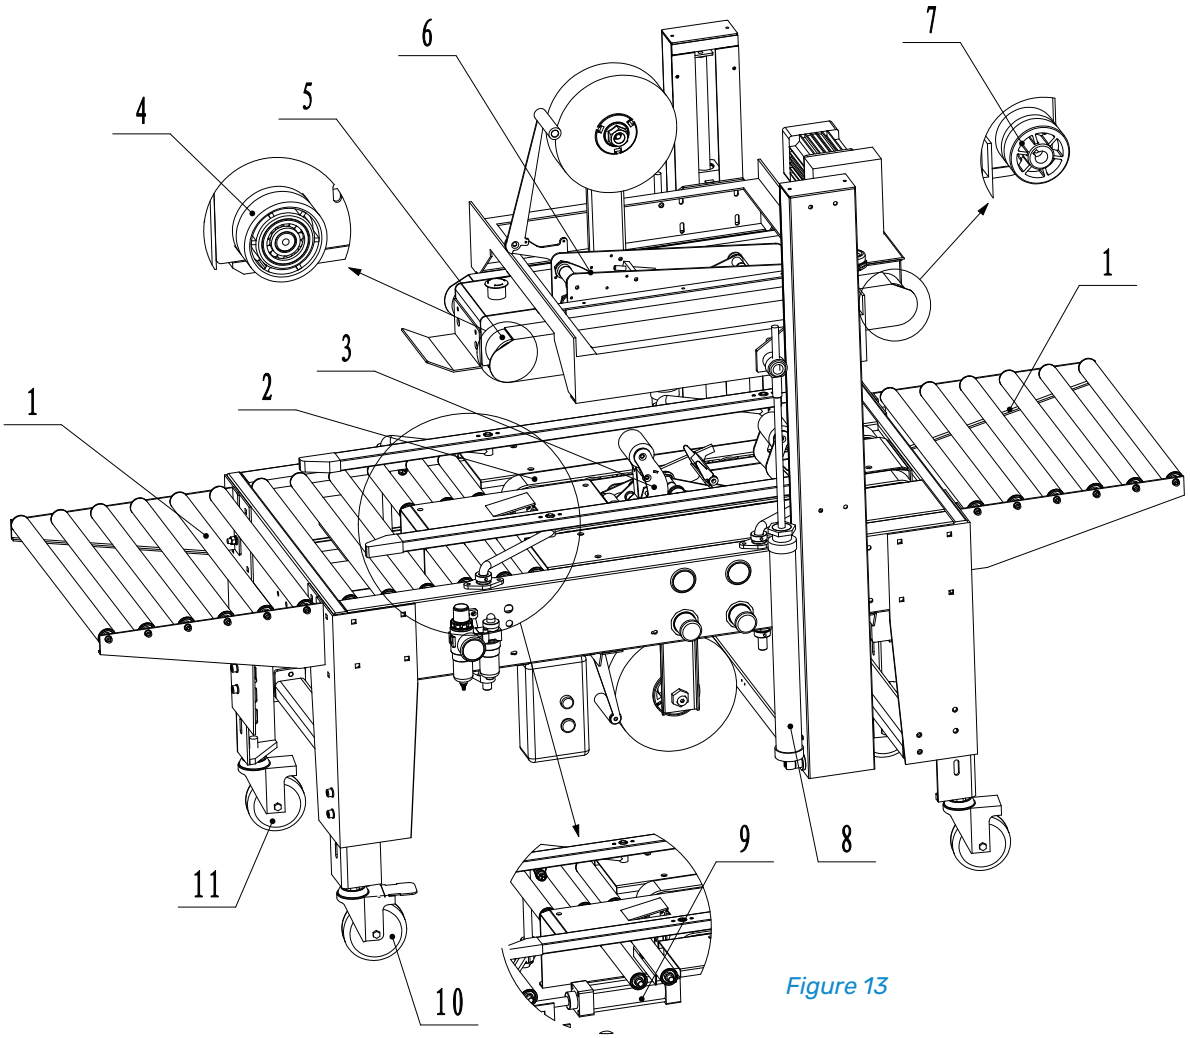


Figure 13

Model #	Ref. no	Descriptions
412560	6	Upper Tape Head, 3”
412561	3	Lower Tape Head, 3”
412562	1	Infeed/Exit Conveyor
412563	11	Threaded Swivel Caster
412564	10	Threaded Brake Caster
412565	2	Bottom Conveyor Belt
412566	5	Top Conveyor Belt
412567	7	Driving wheel
412568	4	Roller wheel
412575	9	Pulling rod cylinder
412576	8	Aluminum alloy mini cylinder


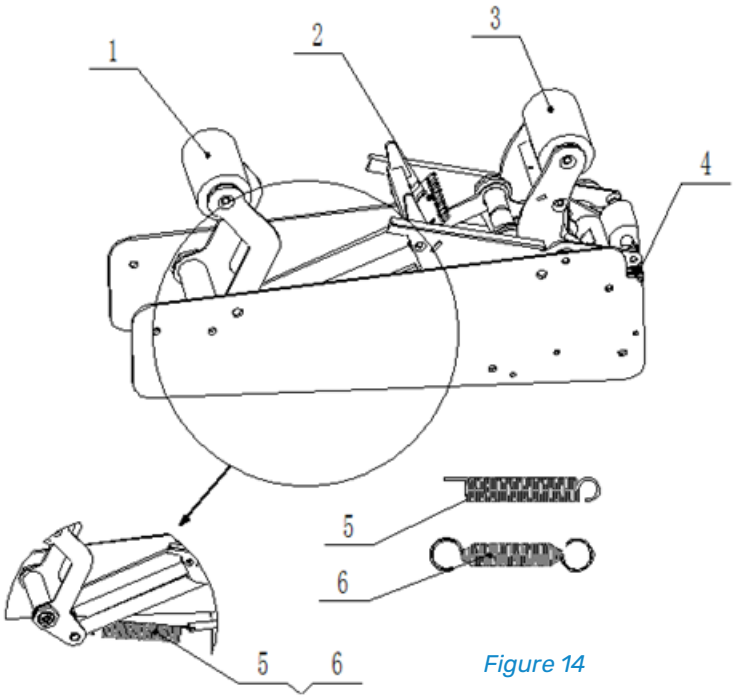



Figure 14

Model #	Ref. no	Descriptions
412569	3	Front rubber roller assembly 2”
412570	1	Back rubber roller assembly
412571	4	Knife frame pullback spring
412572	2	Blade
412573	5	Upper tape head, Carton sealing head pullback spring
412574	6	Lower Tape Head, Carton sealing head pullback spring

Order at www.globalindustrial.com or call 1-800-645-2986

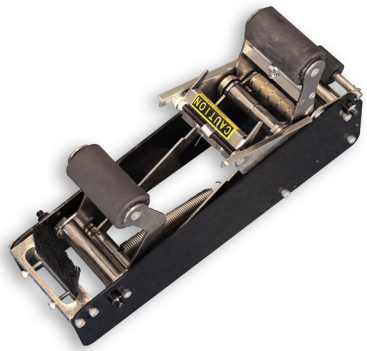

Model no. 412560

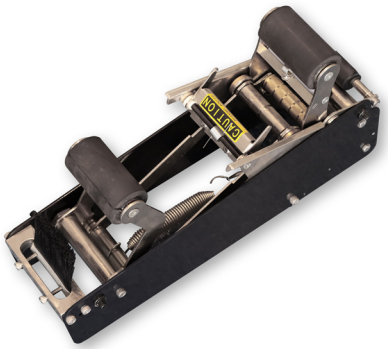

Model no. 412561



Model no. 412562



Model no. 412563



Model no. 412564



Model no. 412565 & 412566



Model no. 412567



Model no. 412568



Model no. 412569



Model no. 412570




Model no. 412571



Model no. 412572



Model no. 412573

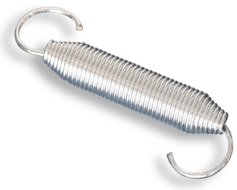

Model no. 412574



Model no. 412575



Model no. 412576

Circuit Diagram

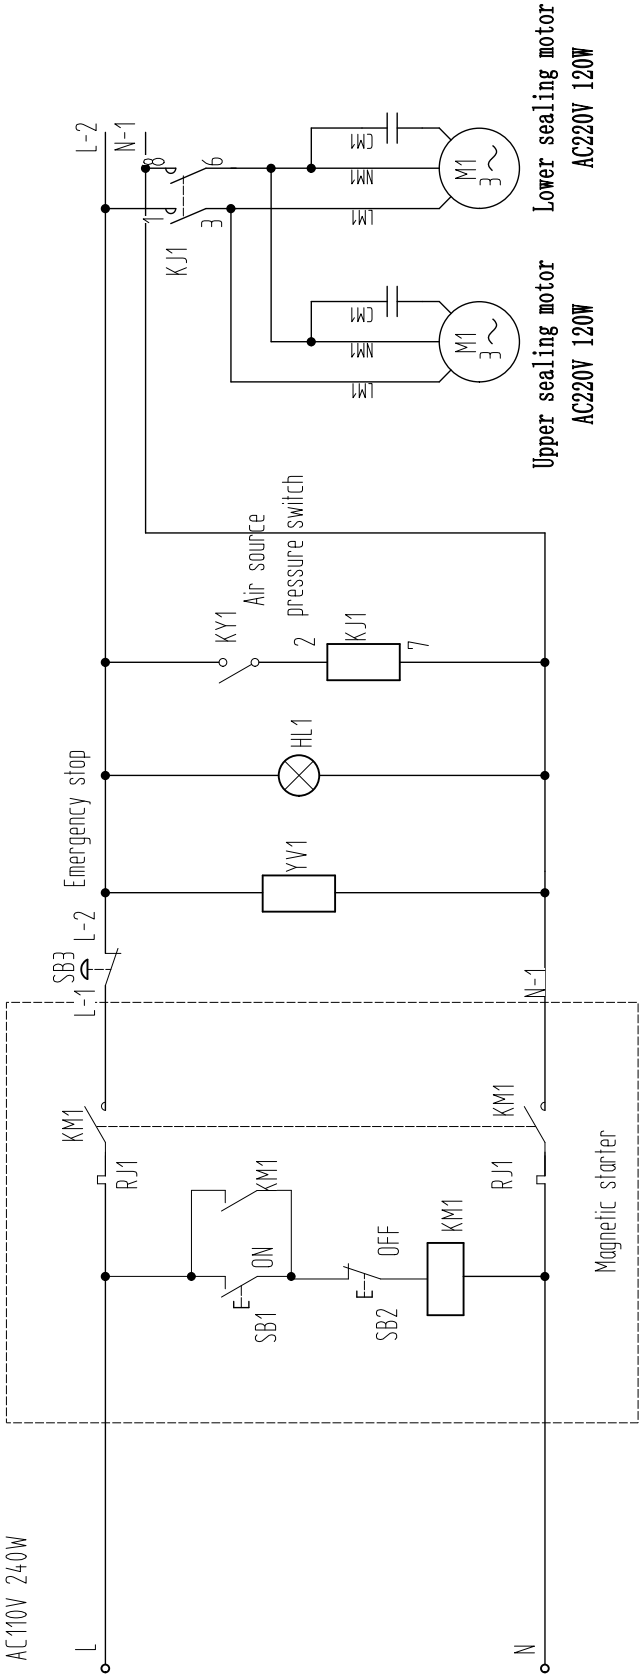


Diagram 1

Pneumatic Diagram

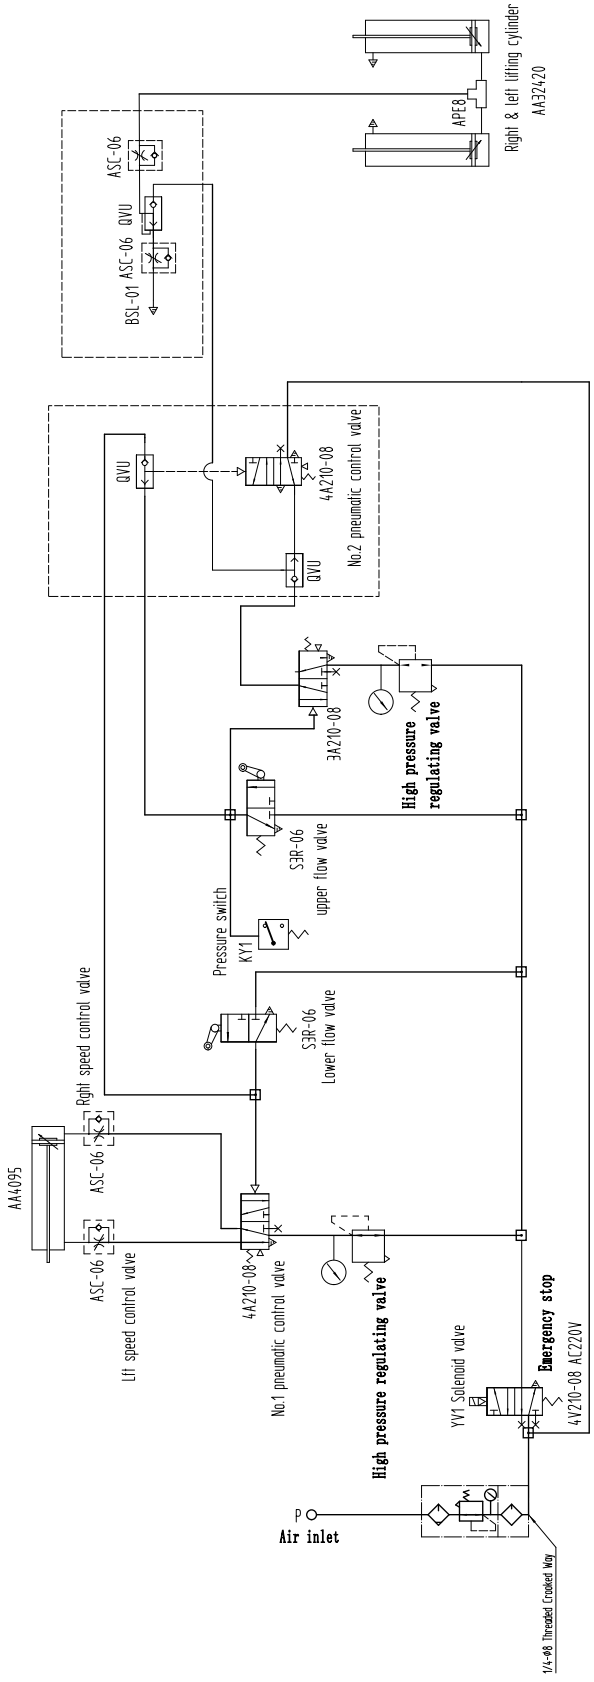


Diagram 2



Over 1,000,000 products. Industrial strength service.

We can supply that.

REGISTER ONLINE AT

http://www.globalindustrial.com/wr or http://www.globalindustrial.ca/wr

Global Limited 1 Year Warranty

1. LIMITED WARRANTY

Global Equipment Company Inc. (DBA Global Industrial) ("Global") hereby warrants to you, the original purchaser and end user ("you" or "your"), that the products that you purchased which accompany this Limited Warranty ("Products") shall be free from defects in materials and workmanship under normal use consistent with the accompanying documentation for 1 year commencing upon the date of purchase (the "Warranty Period").

Global will repair or replace any Product determined to be defective and which has been returned, as set forth in section 3 herein, to Global. A Product may be replaced with a new or used product and/or current or prior revision. Where Global determines in its sole judgment that repair or replacement of such Product is not reasonable, Global will keep the non-conforming Product and refund to you the amount you paid for such Product. Returned Products shall be subject to the balance of the Warranty Period otherwise applicable. Any reconditioned parts used by Global shall be subject to all the same provisions as otherwise applicable to new parts.

THE FOREGOING DESCRIBES THE SOLE LIABILITY OF GLOBAL, AND YOUR SOLE REMEDY, FOR ANY BREACH OF WARRANTY. IF YOU DO NOT AGREE WITH THE TERMS OF THIS LIMITED WARRANTY, YOU MUST RETURN THE PRODUCTS UNUSED AND IN THEIR ORIGINAL PACKAGING WITHIN THREE (3) DAYS AND YOUR PURCHASE PRICE WILL BE REFUNDED.

2. WARRANTY EXCLUSIONS AND LIMITATION OF LIABILITY

This Limited Warranty does not cover: (i) defects or damages resulting from acts of God, casualty, accident, misuse or abuse, overloading, exceeding the recommended weight capacity, neglect, alterations, modification, service or repair by other than Global or its independent third party service providers, including without limitation by you; (ii) improper assembly or installation or de-installation, operation or maintenance, improper connections with peripherals or other causes not arising out of defects in the materials or workmanship of Products; (iii) any Product for which the warranty sticker has been removed, modified or defaced; (iv) shipping containers, batteries, cabinets, media, software or accessories; (v) normal wear and tear; (vi) damage to or loss of repaired or replaced Products during shipping by Global except when such damage or loss is caused by poor or inadequate packaging by Global; or (vii) Products purchased outside the United States or Canada.

UNDER NO CIRCUMSTANCES WILL GLOBAL BE LIABLE FOR ANY LOSS OF USE, INTERRUPTION OF BUSINESS OR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING LOST PROFITS) REGARDLESS OF THE FORM OF ACTION WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR OTHERWISE, EVEN IF GLOBAL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE TOTAL LIABILITY OF GLOBAL HEREUNDER EXCEED THE GREATER OF $50 OR THE AMOUNT YOU ACTUALLY PAID FOR THE PRODUCT GIVING RISE TO SUCH LIABILITY, REGARDLESS OF THE CAUSE OF ACTION, IN CONTRACT, TORT, STRICT LIABILITY OR OTHERWISE. NOT ALL JURISDICTIONS ALLOW SUCH LIMITATIONS OF DAMAGES SO THE FOREGOING LIMITATIONS MAY NOT APPLY TO YOU.

3. PROCEDURE FOR WARRANTY SERVICE

Prior to returning any Products to Global for warranty service, you must first contact Global, by telephone at (800) 645-2986 (US) or (888) 645-0878 (Canada) to confirm that such Products are covered by this Limited Warranty. If such Products are so covered, you shall obtain from Global a return materials authorization ("RMA") number and shipping instructions prior to any shipment of such Products to Global, and you must include such RMA number with any corresponding Product shipment, along with a true and correct copy of the original receipt showing the date of Product purchase by you, and a detailed, written description of any associated Product problems.

Please note that you are responsible for all shipping charges incurred in returning an item for exchange or repair. Global shall pay for return shipping of repaired and/or replaced Products to addresses within the United States and Canada only, and return shipments to all other addresses outside of the United States or Canada is your responsibility. If Global determines that any Product is not covered by this Limited Warranty, you must pay all parts, labor charges and return shipping for such Product.

4. WARRANTY DISCLAIMER AND LIMITATIONS

EXCEPT AND TO THE EXTENT EXPRESSLY SET FORTH ABOVE THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND GLOBAL EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED HEREIN.

EXCEPT AND TO THE EXTENT EXPRESSLY SET FORTH ABOVE, THE PRODUCTS ARE PROVIDED ON AN "AS IS" BASIS, AND GLOBAL MAKES NO ADDITIONAL WARRANTIES, EXPRESS, IMPLIED, ARISING FROM COURSE OF DEALING OR USAGE OF TRADE, OR STATUTORY, AS TO THE PRODUCTS OR ANY MATTER WHATSOEVER. THIS IS A LIMITED WARRANTY AND IS THE ONLY WARRANTY MADE BY GLOBAL. THE AGENTS, EMPLOYEES, DISTRIBUTORS, AND DEALERS OF GLOBAL ARE NOT AUTHORIZED TO MAKE MODIFICATIONS TO THIS LIMITED WARRANTY, OR MAKE ADDITIONAL WARRANTIES BINDING ON GLOBAL. ACCORDINGLY, ADDITIONAL STATEMENTS SUCH AS DEALER ADVERTISING OR PRESENTATION, WHETHER ORAL OR WRITTEN, DO NOT CONSTITUTE WARRANTIES BY GLOBAL AND SHOULD NOT BE RELIED UPON. GLOBAL DOES NOT WARRANT THAT THE PRODUCTS WILL OPERATE WITHOUT FAILURE, OR THAT THE PRODUCTS WILL MEET YOUR NEEDS OR EXPECTATIONS. NOT ALL JURISDICTIONS ALLOW SUCH WARRANTY LIMITATIONS SO THE FOREGOING LIMITATIONS MAY NOT APPLY TO YOU.

5. CHOICE OF LAW AND JURISDICTION

FOR PURCHASES WITHIN THE US - This Limited Warranty shall be subject solely to the laws of the State of New York as applied to contracts entered into in the State of New York between New York residents. Any dispute arising hereunder shall be subject to the sole jurisdiction of the State and Federal Courts located in Nassau County, New York. The parties hereby consent to the personal jurisdiction of such courts.

FOR PURCHASES WITHIN CANADA - This Limited Warranty shall be subject solely to the laws of the Province of Ontario. Any dispute arising hereunder shall be subject to the sole jurisdiction of Ontario, Canada. The parties hereby consent to the personal jurisdiction of such courts.

REGISTRARSE EN LÍNEA EN

http://www.globalindustrial.com/wr or http://www.globalindustrial.ca/wr

Garantía global limitada de 1 año

1. GARANTÍA LIMITADA

Global Equipment Company Inc. (DBA Global Industrial) ("Global") por la presente garantiza al comprador original y usuario final ("usted" o "su"), que los productos adquiridos por usted que incluyen esta Garantía limitada ("Productos ") se considerarán libres de defectos respecto de sus materiales y mano de obra en condiciones normales de uso de conformidad con la documentación adjunta durante 1 año a partir de la fecha de compra (el" Plazo de duración de la garantía ").

Global reparará o reemplazará todo producto calificado como defectuoso y que hubiere sido devuelto a Global, según lo establecido en la sección 3 de la presente garantía. Un Producto puede ser reemplazado por un producto nuevo o usado y/o quedar sujeto a una revisión actual o previa. En los casos que Global establezca, a su exclusivo criterio, la inviabilidad de la reparación o el reemplazo de dicho Producto, Global conservará el Producto no conforme y le reembolsará a usted el monto abonado por dicho Producto. De ser aplicable, los Productos devueltos estarán sujetos al tiempo restante del "Plazo de Duración de la Garantía. Todas las piezas reacondicionadas utilizadas por Global estarán también sujetas a dichas disposiciones mencionadas anteriormente, aplicables de igual modo a las piezas nuevas, si correspondiere

LA CLÁUSULA MENCIONADA ANTERIORMENTE DESCRIBE LA RESPONSABILIDAD EXCLUSIVA DE GLOBAL, Y SU ÚNICO RECURSO, POR CUALQUIER INCUMPLIMIENTO DE LA PRESENTE GARANTÍA. SI USTED NO ESTÁ DE ACUERDO CON LOS TÉRMINOS Y CONDICIONES DE LA PRESENTE GARANTÍA LIMITADA, USTED DEBERÁ DEVOLVER LOS PRODUCTOS SIN HABERLOS UTILIZADO Y EN SU EMBALAJE ORIGINAL EN EL PLAZO DE TRES (3) DÍAS Y USTED RECIBIRÁ EL REEMBOLSO DEL DINERO DE SU COMPRA.

2. EXCLUSIONES DE LA PRESENTE GARANTÍA Y LIMITACIÓN DE RESPONSABILIDAD

La presente Garantía limitada no cubre los siguientes supuestos: (i) defectos o daños causados por fuerza mayor, accidentes, uso inapropiado o excesivo, sobrecarga que supere la capacidad del peso recomendado, negligencia, alteraciones, modificación, reparación o mantenimiento realizados por proveedores técnicos independientes o ajenos a Global, entre los que se incluyen las siguientes acciones realizadas por usted ; (ii) ensamblaje o instalación o desinstalación inadecuados, operación o mantenimiento, conexiones periféricas, funcionamiento o mantenimiento incorrectos, o cualquier otra causa que no surja de un defecto en los materiales o en la mano de obra del Producto; (iii) todo Producto que no contenga el sticker de garantía o cuando dicho sticker haya sido retirado, modificado o esté dañado; (iv) contenedores de envío, baterías, gabinetes, medios, software o accesorios; (v) desgaste normal por el paso del tiempo; (vi) daño o pérdida de los Productos reparados o reemplazados durante el envío por parte de Global en los casos en que dicho daño o pérdida se hubieren producido por un mal o inadecuado embalaje por parte de Global; o (vii) Productos adquiridos fuera de los Estados Unidos o Canadá.

EN NINGÚN CASO GLOBAL SERÁ RESPONSABLE POR LA PÉRDIDA DE USO, INTERRUPCIÓN DE NEGOCIOS O CUALQUIER TIPO DE DAÑO INDIRECTO, ESPECIAL, INCIDENTAL, PUNITIVO O CONSECUENTE (INCLUIDA LA PÉRDIDA DE GANANCIAS), INDEPENDIENTEMENTE DEL TIPO DE ACCIÓN LEGAL, YA SEA EMANADOS DE UN CONTRATO, DE UN ACTO ILÍCITO (INCLUIDA LA CULPA), RESPONSABILIDAD OBJETIVA SOBRE EL PRODUCTO U OTROS. LO ANTERIOR SE APLICARÁ AÚN EN LOS CASOS EN QUE GLOBAL HAYA SIDO ADVERTIDA SOBRE LA POSIBILIDAD DE DICHOS DAÑOS. EN NINGÚN CASO, EN VIRTUD DE LA PRESENTE GARANTÍA, EL MONTO INDEMNIZATORIO POR RESPONSABILIDAD DE GLOBAL PODRÁ EXCEDER LOS USD 50.00 O LA SUMA QUE USTED HAYA PAGADO POR EL PRODUCTO OBJETO DE DICHA RESPONSABILIDAD, INDEPENDIENTEMENTE DE LA CAUSAL DE LA ACCIÓN LEGAL, POR EL CONTRATO, ACTO ILÍCITO, RESPONSABILIDAD OBJETIVA U OTRAS. DADO QUE NO EN TODAS LAS JURISDICCIONES RIGEN DICHAS LIMITACIONES EN LAS INDEMNIZACIONES, LAS LIMITACIONES ANTERIORES PUEDEN NO SER APLICABLES EN SU CASO.

3. PROCEDIMIENTO PARA EL SERVICIO DE GARANTÍA

Antes de devolver un Producto a Global para obtener el servicio de garantía, Usted debe contactar a Global, por teléfono al (800) 645-2986 (Estados Unidos) ó 888) 645-0878 (Canadá) a los fines de confirmar que dicho Producto esté contemplado en la presente Garantía Limitada. Si dicho Producto estuviera cubierto por la Garantía, usted recibirá un número de autorización de devolución de materiales de Global (en adelante, "ADM") y las instrucciones de envío previas al envío del Producto mencionado a Global. Usted deberá incluir su número de ADM con el envío del Producto correspondiente, junto con una copia fiel del recibo original que incluya la fecha de la compra del Producto realizada por usted.

Por favor tenga en cuenta que usted será responsable de todos los gastos de envío resultantes de la devolución de un artículo para su reemplazo o reparación. Global deberá abonar el envío de devolución del Producto reparado o reemplazado a direcciones dentro de Estados Unidos y Canadá solamente. Los gastos de envío a todas las demás direcciones fuera de Estados Unidos y Canadá quedan bajo su responsabilidad. En el caso de que Global estableciera que un Producto no se encuentra contemplado en la presente Garantía Limitada, usted deberá pagar todos los repuestos, la mano de obra y los gastos de envío por la devolución de dicho Producto

4. EXCLUSIONES Y LIMITACIONES DE LA GARANTÍA

SALVO EN LA MEDIDA EXPRESAMENTE ESTABLECIDA ANTERIORMENTE, NO EXISTEN DENTRO DE LA PRESENTE GARANTÍAS EXPRESAS O IMPLÍCITAS, INCLUIDAS, AUNQUE SIN LIMITACIÓN, GARANTÍAS IMPLÍCITAS DE COMERCIABILIDAD O IDONEIDAD PARA UN PROPÓSITO DETERMINADO Y GLOBAL RECHAZA CUALQUIER TIPO DE GARANTÍA NO INCLUIDA EN LA PRESENTE.

SALVO EN LA MEDIDA EXPRESAMENTE ESTABLECIDA ANTERIORMENTE, LOS PRODUCTOS SON ENTREGADOS EN EL "ESTADO EN QUE SE ENCUENTRAN". GLOBAL NO OFRECE GARANTÍA ALGUNA, NI EXPRESA NI IMPLÍCITA, QUE PUDIERA SURGIR DURANTE EL TRANSCURSO DE UNA NEGOCIACIÓN O EL USO O QUE SEAN ESTABLECIDAS POR LEY, EN LO QUE RESPECTA A LOS PRODUCTOS O A CUALQUIER OTRO ASUNTO. LA PRESENTE CONSTITUYE UNA GARANTÍA LIMITADA Y ES LA ÚNICA GARANTÍA OTORGADA POR GLOBAL. LOS MANDATARIOS, EMPLEADOS, DISTRIBUIDORES Y COMERCIANTES DE GLOBAL NO PODRÁN REALIZAR MODIFICACIONES A LA PRESENTE GARANTÍA LIMITADA NI PRESTAR GARANTÍAS ADICIONALES QUE OBLIGUEN LEGALMENTE A GLOBAL. EN CONSECUENCIA, TODA DECLARACIÓN ADICIONAL, TALES COMO PUBLICIDADES O PRESENTACIONES DEL COMERCIANTE, YA SEAN ORALES O ESCRITAS, NO CONSTITUIRÁN GARANTÍAS OTORGADAS POR GLOBAL Y NO DEBERÁN CONSIDERARSE VÁLIDAS. GLOBAL NO GARANTIZA QUE LOS PRODUCTOS FUNCIONEN SIN FALLAS O QUE SATISFAGAN SUS NECESIDADES O EXPECTATIVAS. DADO QUE NO EN TODAS LAS JURISDICCIONES RIGEN DICHAS LIMITACIONES EN LAS INDEMNIZACIONES, LAS LIMITACIONES DE LA CLÁUSULA PUEDEN NO SER DE APLICACIÓN EN SU CASO.

5. ELECCIÓN DE LA LEGISLACIÓN Y JURISDICCIÓN

PARA COMPRAS REALIZADAS DENTRO DE LOS ESTADOS UNIDOS, la presente Garantía Limitada estará sujeta únicamente a las leyes del Estado de Nueva York, según se aplica a los contratos celebrados en el Estado de Nueva York entre residentes del Estado de Nueva York. Toda controversia que surja en virtud de la presente Garantía quedará sujeta a la sola jurisdicción de los Tribunales Estatales y Federales ubicados en el Condado de Nassau, Nueva York. Por medio de la presente Garantía, las partes acuerdan someterse a la jurisdicción personal de dichos tribunales.

PARA COMPRAS REALIZADAS EN CANADÁ - La presente Garantía Limitada quedará sujeta únicamente a las leyes de la Provincia de Ontario. Toda controversia que surja en virtud de la presente Garantía quedará sujeta a la sola jurisdicción de Ontario, Canadá. Por medio de la presente Garantía, las partes acuerdan someterse a la jurisdicción personal de dichos tribunales.

INSCRIVEZ-VOUS EN LIGNE AU

http://www.globalindustrial.com/wr or http://www.globalindustrial.ca/wr

Garantie globale limitée de 1 an

1. GARANTIE LIMITÉE

Global Equipment Company Inc. (DBA Global Industrial) («Global») vous garantit, l'acheteur initial et à l'utilisateur («vous» ou «votre»), que les produits que vous avez achetés et qui accompagnent cette garantie limitée («produits») sont exempts de tout défaut de matériaux et fabrication dans des conditions normales d'utilisation conformément à la documentation suivant pour une période d'un an débutant à la date d'achat (la «période de garantie»).

Global réparera ou remplacera tout produit jugé défectueux et qui a été retourné, tel que stipulé à la section 3 ci-dessous, à Global. Un produit peut être remplacé par un produit neuf ou usagé et/ou par une révision actuelle ou antérieure. Lorsque global détermine à son seul jugement que la réparation ou le remplacement de ce produit n'est pas raisonnable, Global gardera le produit non conforme et vous remboursera le montant que vous avez payé pour ce produit. Les produits retournés sont soumis au reste de la période de garantie applicable par ailleurs. Toutes les pièces reconditionnées utilisées par Global sont soumises à toutes les mêmes dispositions que celles qui s'appliquent autrement aux nouvelles pièces.

CE QUI PRÉCÈDE DÉCRIT LA RESPONSABILITÉ EXCLUSIVE DE GLOBAL, ET VOTRE SEUL RECOURS, POUR TOUT MANQUEMENT À LA GARANTIE. SI VOUS N'ÊTES PAS D'ACCORD AVEC LES TERMES DE CETTE GARANTIE LIMITÉE, VOUS DEVEZ RETOURNER LES PRODUITS INUTILISÉS ET DANS LEUR EMBALLAGE D'ORIGINE DANS LES TROIS (3) JOURS ET VOTRE PRIX D'ACHAT SERA REMBOURSÉ.

2. EXCLUSIONS DE GARANTIE ET LIMITATION DE RESPONSABILITÉ

La présente garantie limitée ne couvre pas: (i) les défauts ou dommages résultant d'actes de Dieu, d'accident, de mauvais usage ou d'abus, de surcharge, du dépassement de la capacité de poids recommandée, de négligence, des altérations, modification, service ou réparation par autre que Global ou ses fournisseurs de services tiers indépendants, y compris sans vos limites; (ii) d'un montage ou d'une installation ou d'une désinstallation, d'un fonctionnement ou d'un entretien incorrects, des connexions incorrectes avec des périphériques ou d'autres causes ne résultant pas de défauts dans les matériaux ou la fabrication de produits; (iii) tout produit pour lequel la vignette de garantie a été enlevée, modifiée ou défigurée; (iv) des conteneurs, piles, armoires, supports, logiciels ou accessoires d'expédition; (v) d'une usure normale; (Vl) des dommages ou la perte de produits réparés ou remplacés pendant l'expédition par Global, sauf si ces dommages ou pertes sont causés par des emballages pauvres ou inadéquats par Global; ou (vii) des produits achetés en dehors des États-Unis ou du Canada.

GLOBAL NE POURRA EN AUCUN CAS ÊTRE TENU RESPONSABLE DE TOUTE PERTE D'UTILISATION, D'INTERRUPTION D'ACTIVITÉ OU DE TOUT DOMMAGE INDIRECT, SPÉCIAL, ACCIDENTEL, PUNITIF OU CONSÉCUTIF DE QUELQUE NATURE QUE CE SOIT (Y COMPRIS LES PERTES DE PROFITS), QUELLE QUE SOIT LA FORME D'ACTION CONTRACTUELLE, DÉLICTUELLE (Y COMPRIS LA NÉGLIGENCE), LA RESPONSABILITÉ STRICTE DU PRODUIT OU AUTRE, MÊME SI GLOBAL A ÉTÉ AVISÉ DE LA POSSIBILITÉ DE TELS DOMMAGES. EN AUCUN CAS LA RESPONSABILITÉ ENTIÈRE CI-DESSOUS DE GLOBAL NE DÉPASSERA CE QUI EST PLUS ÉLEVÉ ENTRE $50 OU LE MONTANT QUE VOUS AVEZ EFFECTIVEMENT PAYÉ POUR LE PRODUIT DONNANT LIEU À CETTE RESPONSABILITÉ, INDÉPENDAMMENT DE LA CAUSE D'ACTION, DANS LE CONTRAT, LE DÉLIT, LA RESPONSABILITÉ STRICTE OU AUTREMENT. TOUTES LES JURIDICTIONS N'AUTORISENT PAS CES LIMITATIONS DE DOMMAGES, DE SORTE QUE LES LIMITATIONS QUI PRÉCÈDENT PEUVENT NE PAS S'APPLIQUER À VOUS.

3. PROCÉDURE DE SERVICE SOUS GARANTIE

Avant de retourner tous les produits à Global pour le service de garantie, vous devez d'abord contacter Global, par téléphone au (800) 645-2986 (US) ou (888) 645-0878 (Canada) pour confirmer que ces produits sont couverts par cette garantie limitée. Si ces produits sont ainsi couverts, vous obtiendrez de Global un numéro d'autorisation de retour de matériel («ARM») et des instructions d'expédition avant toute expédition de ces produits à global et vous devez inclure ce numéro ARM avec n'importe quelle expédition correspondante de produit, ainsi qu'une copie exacte et correcte du reçu original indiquant la date d'achat de l'achat de votre produit, ainsi qu'une description détaillée et écrite de tout problème de produit associé.

Veuillez noter que vous êtes responsable de tous les frais d'expédition engagés pour retourner un article pour un échange ou une réparation. Global doit payer pour l'expédition de retour des produits réparés et/ou remplacés aux adresses aux États-Unis et au Canada seulement ainsi que pour les expéditions de retour à toutes les autres adresses à l'extérieur des États-Unis ou du Canada en revient de votre responsabilité. Si Global détermine que n'importe quel produit n'est pas couvert par cette garantie limitée, vous devez payer toutes les pièces, frais de main-d'œuvre et expédition de retour pour ce produit.

4. DÉNI DE GARANTIE ET LIMITATIONS

SAUF ET DANS LA MESURE EXPRESSÉMENT ÉNONCÉE CI-DESSUS IL N'Y A AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, Y COMPRIS MAIS SANS S'Y LIMITER À TOUTE GARANTIE DE QUALITÉ MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER ET GLOBAL DÉCLINE EXPRESSÉMENT TOUTES LES GARANTIES NON MENTIONNÉES DANS LE PRÉSENT DOCUMENT.

SAUF ET DANS LA MESURE EXPRESSÉMENT ÉNONCÉE CI-DESSUS, LES PRODUITS SONT FOURNIS SUR UNE BASE «TEL QUEL» ET GLOBAL NE FAIT AUCUNE GARANTIE ADDITIONNELLE, EXPRESSE, IMPLICITE, DÉCOULANT DE COURS DE TRAITEMENT OU D'UTILISATION DU COMMERCE OU STATUTAIRE, QUANT AUX PRODUITS OU QUELQUE MATIÈRE QUE CE SOIT. IL S'AGIT D'UNE GARANTIE LIMITÉE ET EST LA SEULE GARANTIE FAITE PAR GLOBAL. LES AGENTS, LES EMPLOYÉS, LES DISTRIBUTEURS ET LES CONCESSIONNAIRES DE GLOBAL NE SONT PAS AUTORISÉS À APPORTER DES MODIFICATIONS À CETTE GARANTIE LIMITÉE, OU À FAIRE DES GARANTIES SUPPLÉMENTAIRES CONTRAIGNANTES POUR GLOBAL. PAR CONSÉQUENT, DES DÉCLARATIONS SUPPLÉMENTAIRES TELLES QUE LA PUBLICITÉ OU LA PRÉSENTATION DES CONCESSIONNAIRES, QU'ELLES SOIENT ORALES OU ÉCRITES, NE CONSTITUENT PAS DES GARANTIES GLOBALES ET NE DEVRAIENT PAS ÊTRE INVOQUÉES. GLOBAL NE GARANTIT PAS QUE LES PRODUITS FONCTIONNERONT SANS DÉFAILLANCE, OU QUE LES PRODUITS RÉPONDRONT À VOS BESOINS OU À VOS ATTENTES. PAS TOUTES LES JURIDICTIONS NE PERMETTENT DE TELLES LIMITATIONS DE GARANTIE AINSI LES LIMITATIONS CI-DESSUS PEUVENT NE PAS S'APPLIQUER À VOUS.

5. CHOIX DE LA LOI ET DE LA JURIDICTION

POUR LES ACHATS AUX ÉTATS-UNIS : cette garantie limitée est soumise aux seules lois de l'état de New York, telles qu'appliquées aux contrats conclus dans l'état de New York entre les résidents de New York. Tout litige découlant des présentes est soumis à la seule compétence de l'État et des tribunaux fédéraux situés dans le comté de Nassau, New York. Les parties consentent par la présente à la compétence personnelle de ces tribunaux.

POUR LES ACHATS AU CANADA : cette garantie limitée est assujettie uniquement aux lois de la province de l'Ontario. Tout différend découlant des présentes est assujetti à la seule compétence de la province de l'Ontario, au Canada. Les parties consentent par la présente à la compétence personnelle de ces tribunaux.



WE CAN SUPPLY THAT.®

1,000,000-PLUS PRODUCTS. INDUSTRIAL-STRENGTH SERVICE.