

User's manual
Manual del usuario
Manuel de l'utilisateur

 Customer Service
 US: 1-800-645-2986

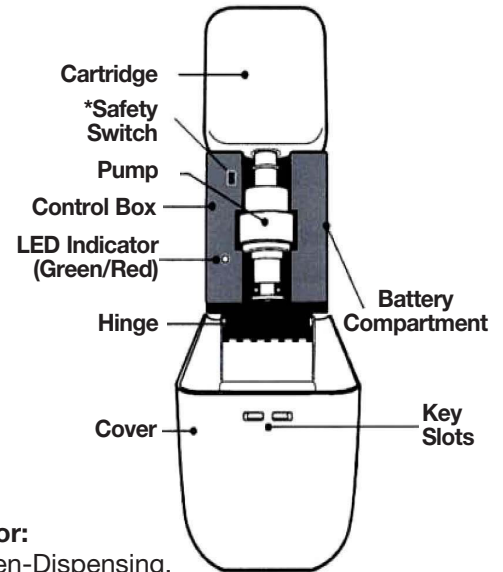
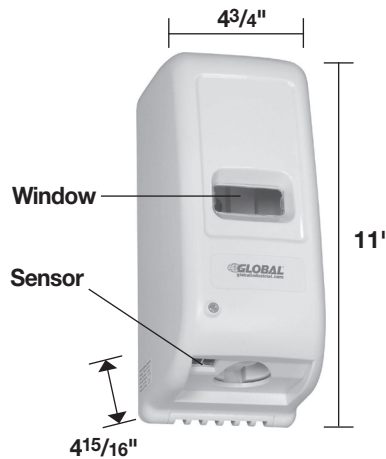
 Servicio de atención al Cliente
 US: 1-800-645-2986

 Service à la clientèle
 Canada: 888-645-2986

Automatic Hand Sanitizer/Liquid Soap Dispenser


Model 695801

CONTENTS			
Qty.	Description	Qty.	Description
1	Dispenser	3	Anchors
1	Access Key	3	Double Sided Tape
3	Screws		


LED Indicator:

Blinking Green-Dispensing.

Blinking Green and Red-Out of Battery

*Safety Switch (automatically shuts unit off when the cover is open)

Step 1
Installation of dispenser

To open the dispenser, insert the provided access key into the slot located on the top of the front cover and press down. Holding the top of the dispenser cover, carefully pull the cover down and towards you. Note: The cover is hinged at the bottom of the dispenser.

Installation using adhesive tape

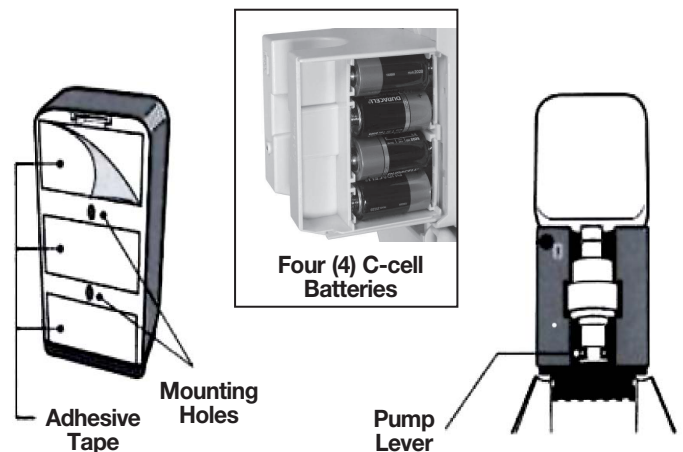
1. Make sure the mounting surface is flat, clean and dry. (adhesive mounting is only recommended for mirrors or similar surface. Dispenser must be mounted at least 8 inches above a surface. Make sure there is enough room above the dispenser to access the key slot.
2. Remove protecting backing from adhesive tape and press dispenser firmly against the mounting surface for 15 seconds. Open front cover and press directly for an additional 15 seconds. Allow 4 hours to set before using the dispenser.

Installation using screws and anchors

1. Hold the dispenser against the wall in the desired location. Open cover and mark screw hole locations on the wall.
2. Install provided anchors into drywall and secure the dispenser with the provided screws.

Step 2
Installing Batteries

Open the dispenser, locate the battery compartment on the right side of the dispenser and slide the compartment cover forward, away from the wall. Place (4) C-cell batteries (not included) in the proper orientation and replace the compartment cover.


Installing the Cartridge

1. Place the cartridge on top of the control box within the pump facing front and downward.
2. The pump should easily fit into the groove on the control box. Make sure that the pump "lever" is toward the bottom of the pump, just above the tip of the pump nozzle.
3. Close the dispenser cover, turn the power switch on and the dispenser is ready to use.
4. Place hand (s) underneath the dispenser within 3 inches of the sensor. The LED will blink GREEN and dispense approximately .02 oz. of product into your hand (s).

To reset open and close the cover.