

Operating Instructions, Parts List, Warranty, & Warranty Repair Center

IMPORTANT! Read carefully before operating this tool. Failure to operate any power tool properly can result in personal injury and/or property damage!

Free Speed (RPM)	22,000	Collet Size	1/4"
Air pressure (PSI)	90	Avg. Air Consump.(cfm).....	4
Hose Size (ID)	3/8"	Overall Length	6-3/4"
Air Inlet (NPT)	1/4"	Weight (Lbs)	1-3/8

Safety

1. Make sure the RPM rating of the grinding discs correspond with the manufacturer's recommended speed of the tool.
2. Always wear approved eye protection.
3. Have throttle in "off" position when connecting to air supply.
4. Disconnect tool before performing service, changing accessories, or when not in use.
5. Always be in a safe working distance from others when using tools.
6. Keep tools clean and oiled for best and safest performance.
7. Follow instructions for lubricating and changing accessories.
8. Do not wear loose fitting clothing and remove watches and rings.
9. Always use proper hose and fittings. Never use quick change couplings attached at tool.
10. Keep proper footing and balance at all times.
11. Never carry tools by the hose. Keep hoses from heat, oil, and sharp edges. Check hoses for weak or worn condition before each use, making certain that all connections are secure.


Lubrication

Lubricate the tool daily with a good grade of air tool oil. The oil can be applied directly into the air inlet of the tool and then run the tool. A rust inhibitor oil is acceptable for air tools.

Air Supply

Tools of this class operate on a wide range of air pressure. It is recommended that air pressure of these tools measure 90 PSI at the tool while running free. Higher pressure and unclean air will shorten the tool's life and may create a hazardous condition.

Water in the airline will cause damage to the tool. Ensure that the air tank is drained daily. Clean the air inlet filter screen on at least a weekly basis. The recommended hookup procedure can be viewed in the illustration below.

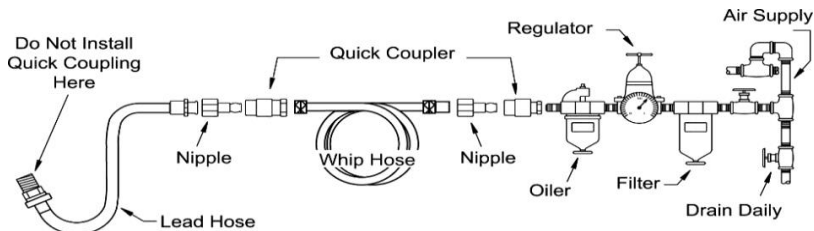

The air inlet, used for connecting air supply, has standard 1/4" NPT American Thread.

Line pressure should be increased to compensate for unusually long air hoses (over 25 feet). Minimum hose diameter should be 1/4" I.D. and fittings should have the same inside dimensions.

Operating Instructions

The air regulator can be used as an air throttle and can be used for setting positive speed control. Turn the air regulator lever up for maximum speed.


The air inlet used for connecting air supply has standard 1/4" NPT thread. Have throttle in "off" position when connecting to air supply. Disconnect tool before performing service, changing accessories and when not in use. Always use tool at a safe distance from other people in work area.

Secure work with clamps or vise so both hands are free to operate tool. Don't overreach. Keep proper footing and balance at all times.

WARNING: Make sure the RPM rating of the grinding discs correspond with the manufacture's recommended speed of the tool.

Maintenance

Other factors outside the tool may cause loss of power or erratic action. Reduced Compressor output, excessive drain on the air line, moisture or restriction in air lines or the use of hose connections of improper size or poor condition may reduce air supply. Dirt or gum deposits in the tool may cut power. This may be corrected by cleaning the air strainer and flushing out the tool with gum solvent oil. If outside conditions are in order and tool is out-of-warranty, clean, reassemble, and re-lubricate, or take tool to any air tool service center. For tools in warranty period, send tool direct to Warranty Center.

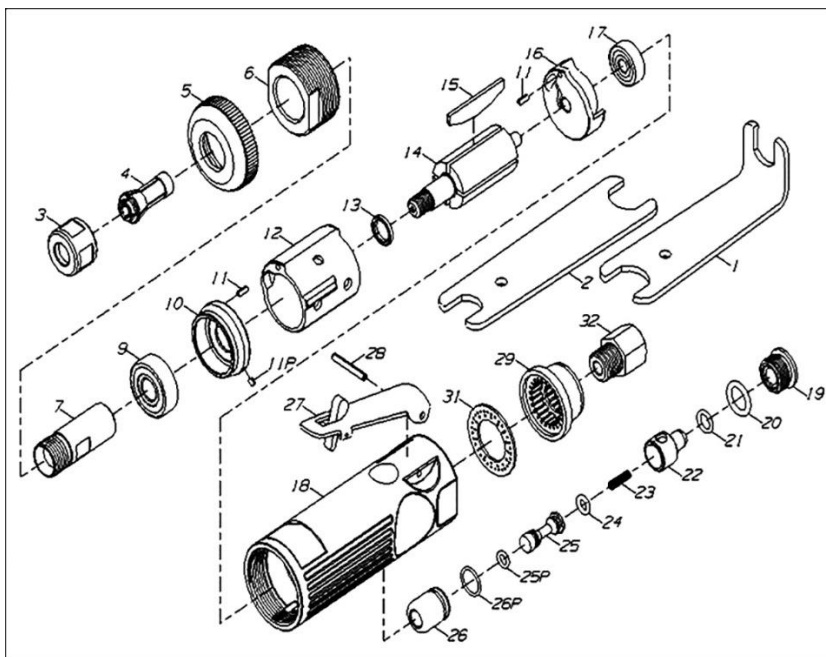

No.	Part No.	Description	No.	Part No.	Description
1	103101	Angle Ended Spanner	18	103118	Housing
2	103102	Double Ended Spanner	19	103119	Valve Screw
3	103103	Collet Nut	20	O-1100-250	O-Ring
4	103104	Collet	21	O-0700-180	O-Ring
5	103105	Housing Cap	22	103122	Air Regulator
6	103106	Retainer	23	103123	Spring
7	103107	Spindle	24	O-0500-200	O-Ring
9	6000-ZZ0A	Ball Bearing	25	103125	Throttle Valve
10	103110	Front End Plate	25P	O-0500-150	O-Ring
11	P-0025-060	Pin (2)	26	103126	Valve Bushing
11P	P-0025-030	Pin	26P	O-1100-120	O-Ring
12	103112	Cylinder(PM)	27	103127	Safety Lever
13	103113	Spacer	28	P-0030-220	Throttle Pin
14	103114	Rotor	29	103129	Exhaust Deflector
15	106316	Rotor Blade (4)	31	103131	Exhaust Washer
16	103116	Rear End Plate	32	103132	Inlet Bushing
17	0626-ZZ0A	Ball Bearing			

PLEASE READ FOLLOWINGS CAREFULLY BEFORE OPERATING:

- 1) Always wear Safety Goggles to guard against eye injuries caused by flying particles.
- 2) Light density, non-detergent lubricant oil (i.e.#60) recommended.
- 3) Use working pressure of 0-90 PSIG, regular speed: 22,000 RPM.

Notice

90% of all Air Tool problems are caused by moisture in air lines

This problem can be avoided by using Air Tool Lubricant (See “Lubrication” & “Air Supply” section of this manual)

FAILURE TO OIL can void your warranty

Warning: Dust created by power sanding, sawing, grinding, drilling, and other activities contains particles and chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

To reduce your exposure to these chemicals, work in well ventilated areas with approved safety equipment specially designed to filter out microscopic particles.

One Year Limited Warranty

GLOBAL Industrial air tools carry a limited 1 year warranty to be free from defects in material and workmanship for one year from date of purchase. We will repair or replace at our discretion any defective part or unit which proves to be defective in material or workmanship during this 1 year period. The foregoing obligation is GLOBAL sole liability under this or any implied warranty, and under no circumstances shall it be liable for any incidental or consequential damages.

Repairs required by abuse, misuse, damage, or repair attempts (other than GLOBAL Industrial) are not covered by this warranty.

For warranty claims and returns, please contact GLOBAL Industrial at 1-800-645-2986 or speak to your local sales representative. Be certain to include your name, address, and purchase date, and description of the suspected defect.



11 Harbor Park Drive, Port Washington, NY 11050

Phone: 1-800-645-2986