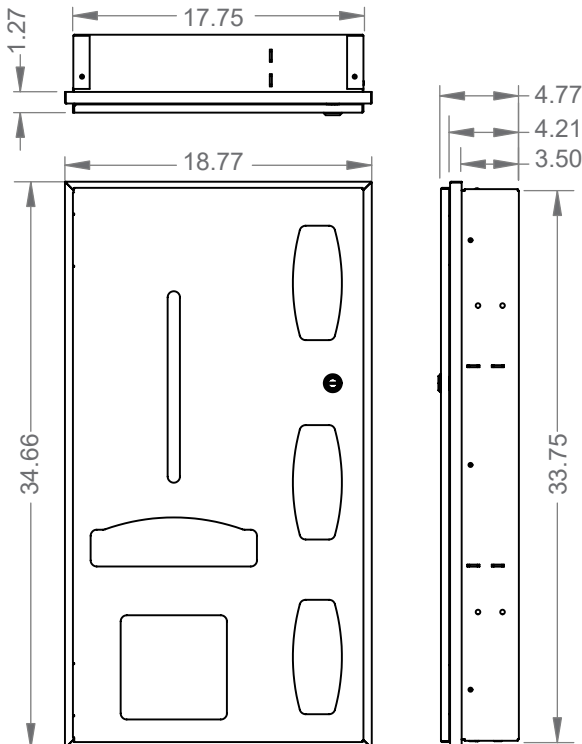




MADE  
IN THE **USA**  
PATENT PENDING

### Mounting Specifications:

- Installation should be performed only by a licensed contractor.



### Product Description:

- Semi-Recessed PPE Dispensing System - Space Saver
- Holds launderable gowns, three boxes of gloves, and one box of shield-style face masks
- Low profile
- Keyless locking mechanism
- Screw holes in sides to mount to stud framing in wall
- Made of Quartz Beige Powder-Coated Steel
- Patent Pending

### Primary Area for Product Usage:

- All patient care areas requiring personal protective equipment and isolation supplies

### Dispenses:

- Top left: Gowns (up to 15 launderable) folded up to 12.07"W x 23.53"H x 3.75"D (30.7 cm x 59.8 cm x 9.5 cm)
- Bottom left: One box shield-style face masks up to 12.07"W x 10.00"H x 4.21"D (30.7 cm x 25.4 cm x 10.7 cm)
- Right: Three boxes of gloves up to 5.16"W x 10.69"H x 4.21"D (13.1 cm x 27.2 cm x 10.7 cm)

### Package Specifications:

- 20"L x 8"W x 38"H (50.8 cm x 20.3 cm x 96.5 cm)
- 29.0 lbs (13.2 kg) - approximated

### Product Specifications (overall external dimensions):

- 18.77"W x 34.66"H x 4.77"D (47.7 cm x 88.0 cm x 12.1 cm)
- 24.9 lbs (11.3 kg) - approximated

### Alternative Products (sold separately):

- RE101-0512, Semi-Recessed PPE Dispensing System (shown below)

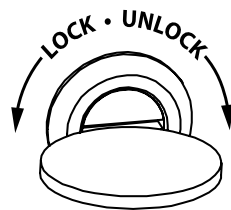




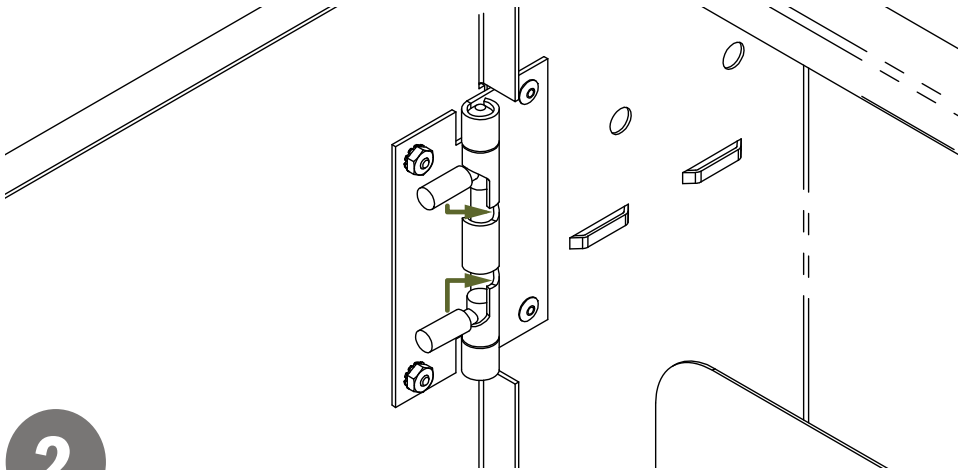
## Installation

Always mount dispensers securely *prior* to loading with product.

- Door can be locked or unlocked using a small flat object, such as a coin, screwdriver, etc.

**1**

- Door can be removed by squeezing and turning posts on hinges as shown.

**2**

### Parts included:

- Semi-recessed dispenser

### Tools Required:

- No tools required to assemble dispenser

## Care and Construction

### Powder-Coated Steel

### Material Characteristics

#### Designed for Long-Term Use

Our steel dispensers and stands are coated with polyester powders which makes them highly resistant to corrosion.

Powder-coated steel is ideal for dispensers used in a healthcare or an industrial setting because it is impact resistant and is not effected by extremes in temperature.

Dispensers and stands made of powder-coated steel are both attractive and functional, providing years of service.

### Care and Cleaning

For best results, clean by washing the surface with a diluted solution of a mild, non-abrasive detergent in cold or warm water and a non-abrasive cloth. Standard hospital cleaning supplies can be used. Dry with a soft cloth. Do not use any solvent-based materials, abrasives (e.g. Scotch-brite, steel wool), or apply excessive force during cleaning.