


Fasteners & Tools Needed


The following items are in the hardware kit shipped with the locker:

8615–Number plate
8671–Aluminum Rivet
8621- Steel rivet
8709-Screw
8696- Coat Hook,
8717 Coat Rod Hook
6CR\_-Coat Rod

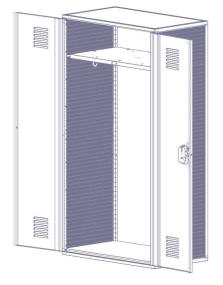

### **STEP 1- Check Parts**

Unpack the component pieces for the basic locker. You should have two sides, a back, a top, shelf, coat rod hooks, coat rod, coat hooks, and bottom, for the locker body. You should also have a left hand and a right hand door.

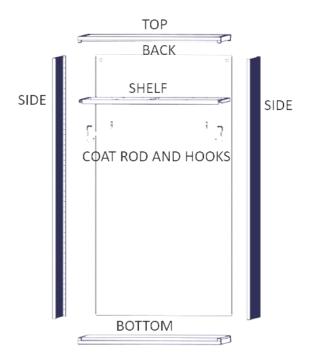

You will need these tools to assemble the TA50 locker.

Rivet gun.

Drill with #3 Philips bit




Flat blade and Phillips head screwdrivers.




Stepladder


**Assembly Instructions** 

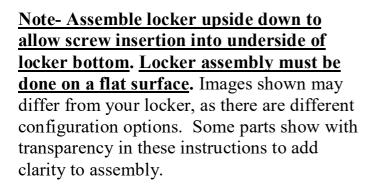

## STEP 2 – Assemble the locker body

2A- Lay locker top on <u>flat surface</u> on the ground. Insert the two sides onto the cast corner pieces of the top assembly.

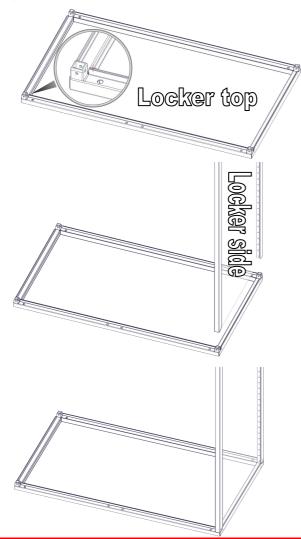

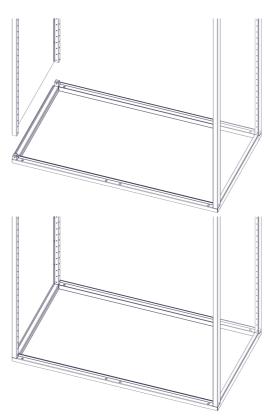


2B-1 Insert locker back into slot of the top.









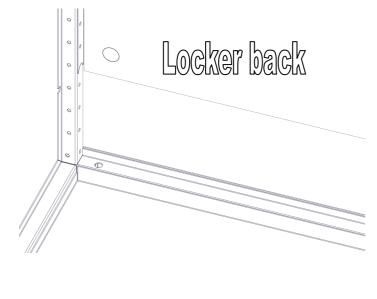

2B-2 With the back inserted install one 8709 screw on each side of the back about half way up. Note holes are to align to make sure back is in proper position.

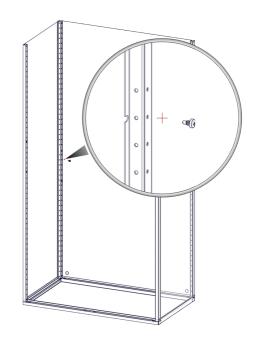


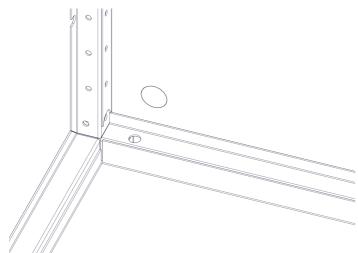



www.pencoproducts.com

### **Assembly Instructions**



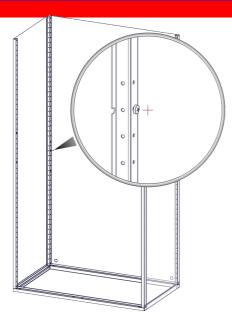

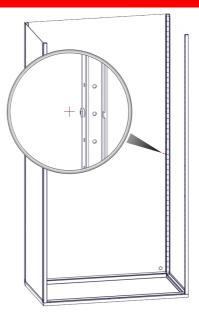

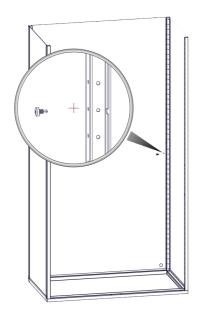


2C-1 Insert cast corner pieces of locker bottom into the side channels.


Locker bottom

www.pencoproducts.com

## **Assembly Instructions**



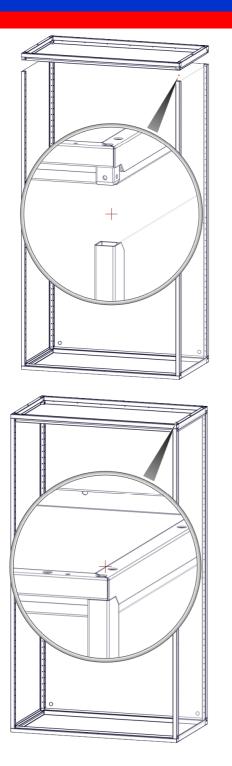

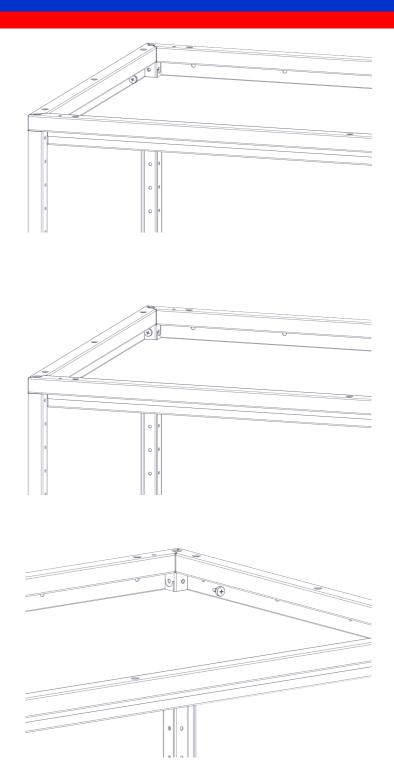

2C-2 Install one screw into each corner of the locker bottom as shown.

O G


0


## **Assembly Instructions**


PENCO PRODUCTS, INC | 1820 Stonehenge Drive, Greenville, NC 27858 800-562-1000 | Fax: 800-248-1555 | general@pencoproducts.com


Fully Framed TA50 LOCKER – KD

2D- Next install one screw into the locker top in each corner as shown.

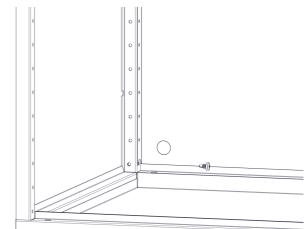


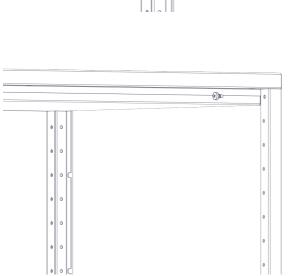

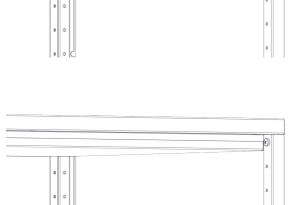

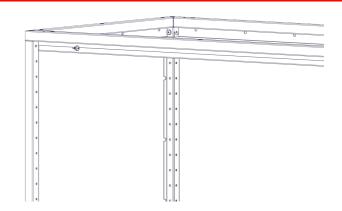




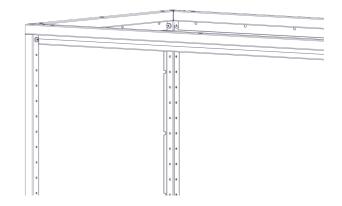







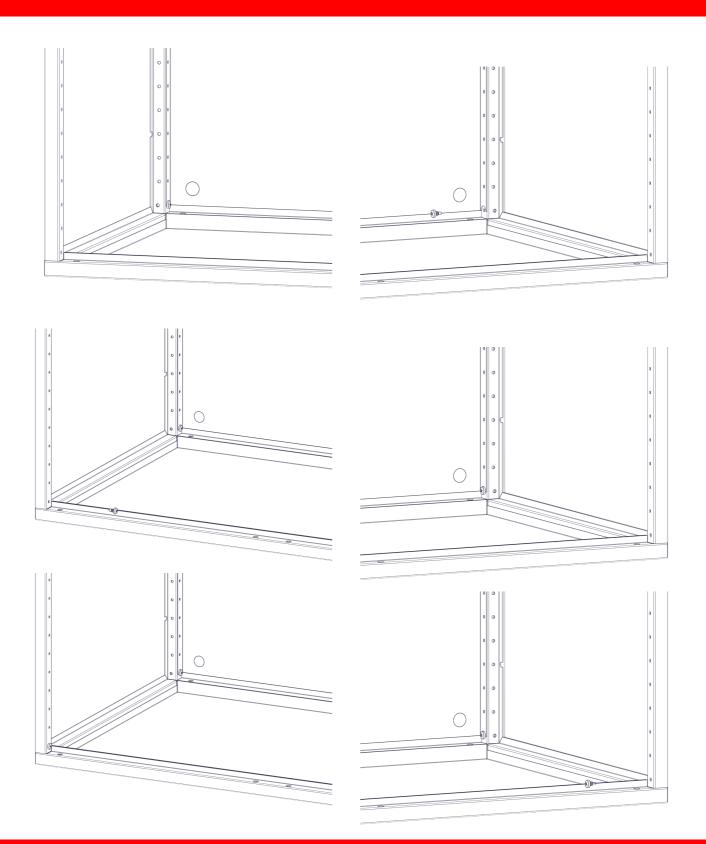


#### **Assembly Instructions**

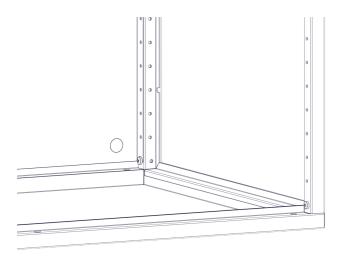


2E- Now rotate locker body so the bottom is on the ground.

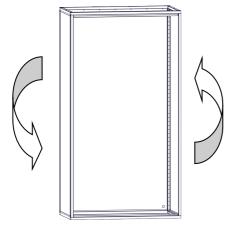

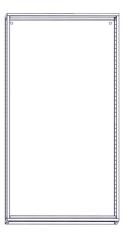


2F-Install screws to locker back at U cut locations (6 inch intervals) on each side.

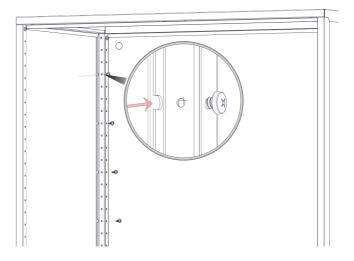





## **Assembly Instructions**

2G-1 Install mounting rails for shelf using one 8607 screw in the front upright and back upright.

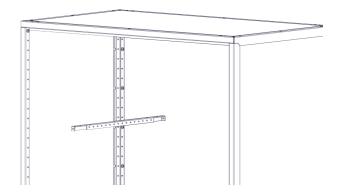


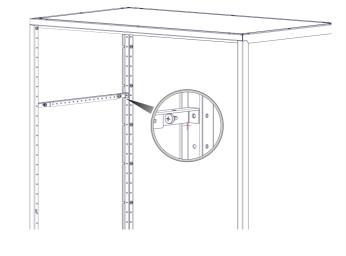


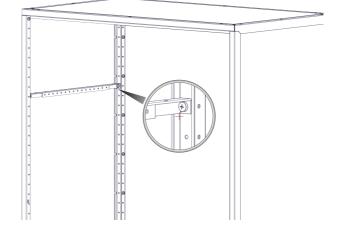




www.pencoproducts.com

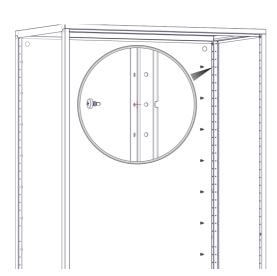

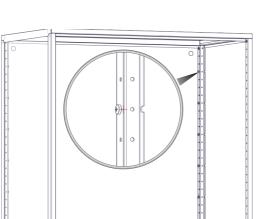


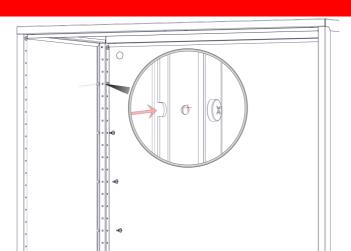





**Assembly Instructions** 



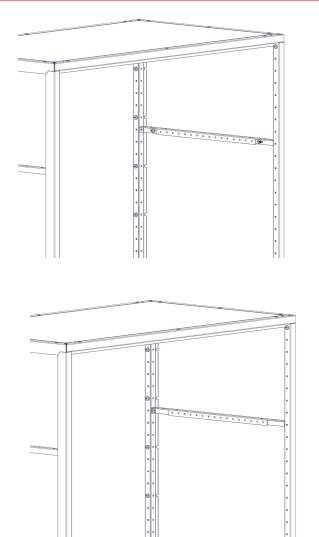


2G-2 Insert shelf and attach shelf to rails using one rivet in each corner.

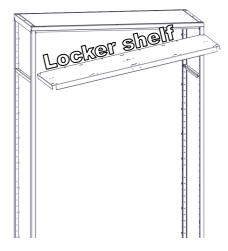

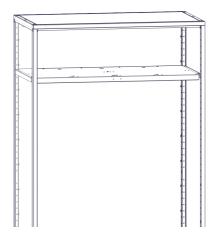

www.pencoproducts.com


## **Assembly Instructions**

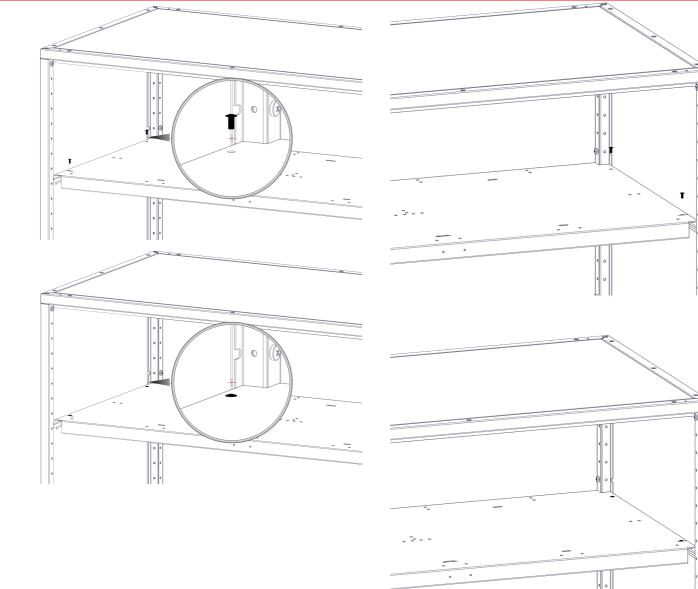








2H-Now install 8696, 8717 coat hooks, and coat rod using two rivets per hook.

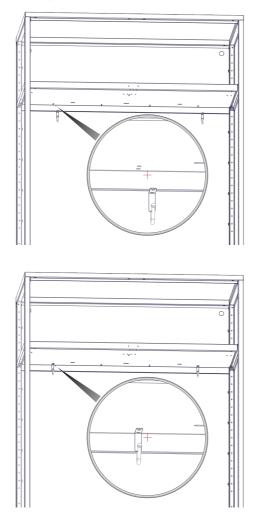

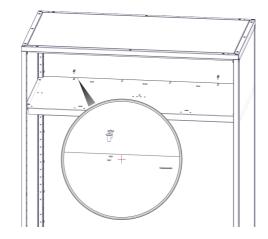

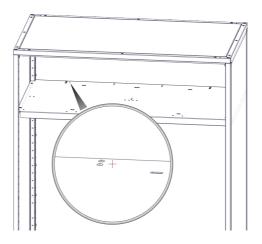

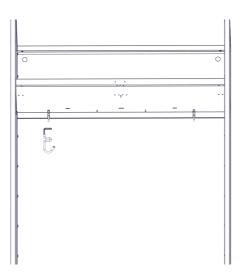


www.pencoproducts.com


 $\bigcirc$ 


## **Assembly Instructions**

**PENCO PRODUCTS, INC** | 1820 Stonehenge Drive, Greenville, NC 27858 800-562-1000 | Fax: 800-248-1555 | general@pencoproducts.com

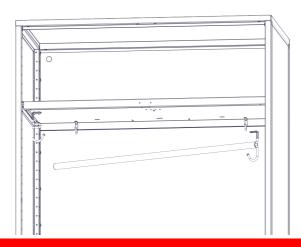

2I-Install doors using 8621 rivets at each hole location on hinge.

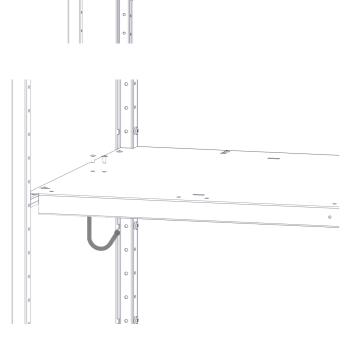


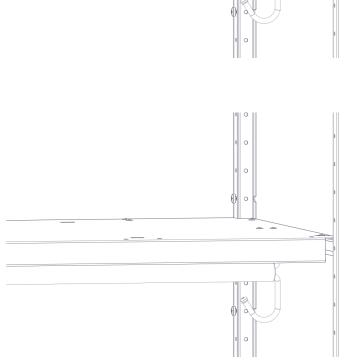






## **Assembly Instructions**

800-562-1000 | Fax: 800-248-1555 | general@pencoproducts.com

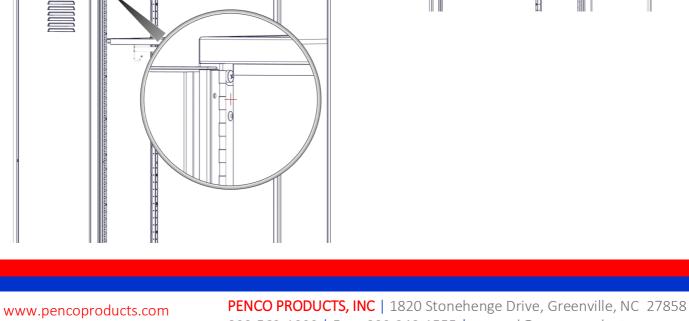

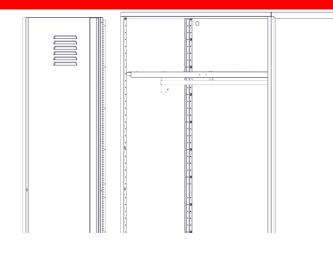

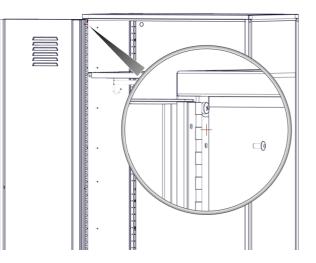


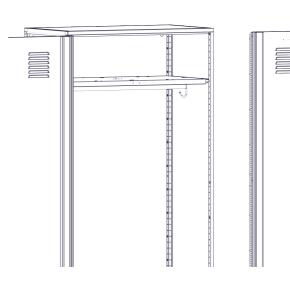


00





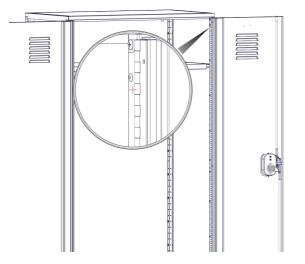

Assembly is now complete. Lockers to be floor and wall anchored and must <u>be plumb and level</u> after anchoring before use.

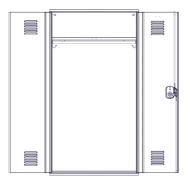

www.pencoproducts.com