


Instruction Manual

Hydraulic Motorcycle Lift

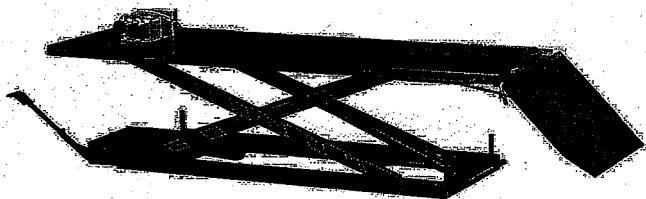

Note: Owner/Operator must read and understand this instruction manual before using the Hydraulic Motorcycle Lift.

47.	Piston	1	74.	Lock nut M10	1
48.	Seal ring	1	75.	Pump body	1
49.	Washer	1	76.	Steel ball $\phi 7$	1
50.	Retaining ring 18	1	77.	O-ring $\phi 6.9 \times 1.8$	1
51.	Retaining ring 12	3	78.	Conical valve	1
52.	Pedal holder	1	79.	Spring	1
53.	Discharge lever	1	80.	Check valve casing	1
54.	Protect casing	1	81.	Rod	1
55.	O-ring $\phi 10 \times 2.65$	1	82.	O-ring $\phi 10 \times 1.8$	1
56.	Spring	1	83.	Check valve screw	1
57.	reflux rod	1	84.	O-ring $\phi 15 \times 2.65$	2
58.	O-ring $\phi 4 \times 1.8$	1	85.	Regulating speed spring	1
59.	Guide casing	1	86.	Regulating speed slide-valve	1
60.	Protect casing	1	87.	Regulating speed spring seat	1
61.	O-ring $\phi 28 \times 3.1$	1	88.	Regulating speed valve casing	1
62.	Pump body for plunger	1	89.	Spring seat assembly	1
63.	Y-ring $\phi 14 \times \phi 8 \times 6$	1	90.	Regulating pressure spring	1
64.	Pump Plunger	1	91.	Regulating pressure nut	1
65.	O-ring $\phi 18 \times 2.4$	2	92.	O-ring $\phi 7.1 \times 1.8$	1
66.	Spring	1	93.	Plug	1
67.	Washer	1	94.	Washer	1
68.	Pin axle	2	95.	O-ring $\phi 75 \times 2.65$	1
69.	Hex socket screw M10 \times 50	1	96.	Oil basin	1
70.	Rock arm	1	97.	O-ring $\phi 10 \times 2.65$	1
71.	Protect casing	1	98.	Plug	1
72.	Pedal holder	1	99.	Washer	1
73.	Washer 10	1	100.	Cylinder	1

SUMMARY

1.	Instruction.....	2
2.	Specification.....	2
3.	Safety Instruction.....	2
4.	Inspection Before Use.....	4
5.	Operate the Lift.....	4
6.	Maintenance.....	5
7.	Exploded Drawing and Part List.....	8

1. Instruction

This instruction manual contains all the instructions for the use of the machine and the necessary knowledge for its correct use. Please read and completely understand this manual before operating the Hydraulic Motorcycle Lift. Always keep this manual at an appropriate place. If the manual or warning decal is missing, please contact with the dealer.

While thanking you for buying our product we would like to draw your attention to some important aspects of this manual.

All the information contained in this instruction manual is based on the data available at the time of printing; the manufacturer reserves the right to modify its products at any time, without notice and without liability.

2. Specification

Model	MC 500	TC 500	TC 150
Max. Capacity (Kg)	500	500	150
Max. Height (Mm)	770	800	1070
Min. Height (Mm)	170	170	145
Platform Size (Mm)	2200X700	2200X700	1400X470
Net Weight (Kg)	193	235	100

3. Safety Instruction




WARNING: If operating the improperly, person maybe injured. Therefore, operate properly according to the following instruction.

LIFT TABLE SPARE PARTS LIST TC150

NO	DESCRIPTION	QTY	NO	DESCRIPTION
1.	Pin axle	2	24.	Pin axle
2.	Guide plate	1	25.	Retaining ring 25
3.	Retaining ring 13	1	26.	Pin axle
4.	Table	1	27.	Hex socket screw M5×8
5.	Fixture	1	28.	Washer 5
6.	Hex screw M8×25	2	29.	Spring
7.	Hex screw M12×20	8	30.	Roller
8.	Washer 12	12	31.	Hex screw M6×20
9.	Pin axle	2	32.	Washer 6
10.	Handle	1	33.	Safety frame
11.	Lock nut M12	2	34.	Chassis
12.	Nut M8	2	35.	Lock nut M6
13.	Hex screw M12×30	2	36.	Pin axle
14.	Hex screw M8×55	2	37.	Hex socket screw M6×30
15.	Washer 8	2	38.	Safety rod
16.	Bushing	2	39.	Seal cover $\phi 35 \times \phi 43.5 \times 5$
17.	Idler pulley	2	40.	O-ring $\phi 35.5 \times 3.55$
18.	Idler pulley base	1	41.	Cylinder cover
19.	Lock nut M8	2	42.	Bushing
20.	Shorter roller	1	43.	O-ring $\phi 75 \times 3.55$
21.	Longer roller	1	44.	Piston rod
22.	Internal scissors	1	45.	O-ring $\phi 20 \times 2.4$
23.	External scissors	1	46.	Guiding $\delta 2 \times 15$

7.3 TC150

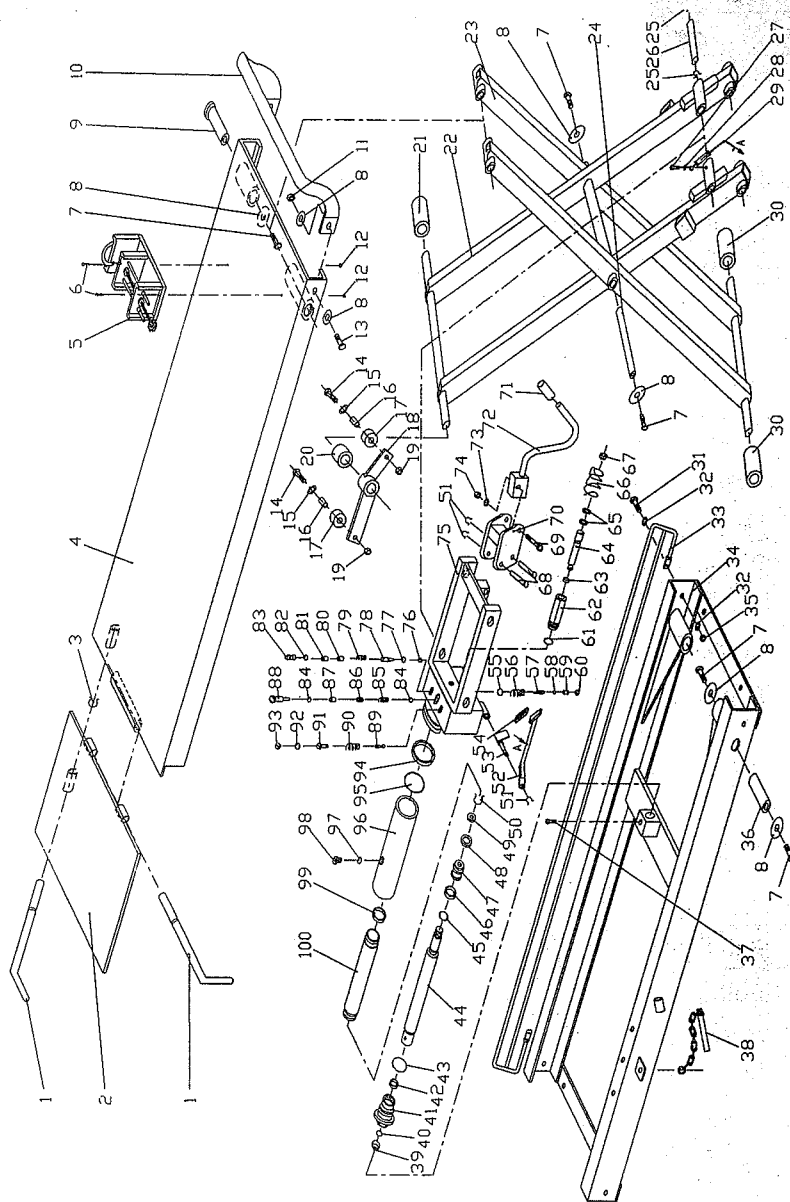

14

- ◇ Read & thoroughly understand the Instruction Manual completely before using. Follow all safety instructions strictly.
- ◇ It is necessary to check all safety devices before operation.
- ◇ Make sure that there are no obstacles in the working area.
- ◇ Do not put foot or hand in scissors mechanism or through frame.
- ◇ Screw the lifting eyes on the base frame before working on the lift.
- ◇ Do not overload the lift. Load should be distributed on the table according to relevant load distribution chart.
- ◇ Connect the accessories to the lifting table according to the drawing. Connecting screws must be tightened.
- ◇ Make sure that local alternating voltage and frequency is consistent in the rated input of lift.
- ◇ Use the lift on flat and solid ground.
- ◇ All of the connection and halt of power supply must be operated by trained personnel.
- ◇ While operating, it is forbidden to touch the moving parts of the lift.
- ◇ While the lift lifting or lowering, it is forbidden to adjust or to move the load.
- ◇ It is forbidden to lift the load, which perhaps will do harm to a person or other object.
- ◇ It is forbidden to operate the lift while a person is under the table.
- ◇ Do not adjust the safety valve of hydraulic power pack.
- ◇ It is forbidden to operate the lift even if there is small structure distortion.
- ◇ Do not use it in an explosive or flammable place.
- ◇ The lift is for the purpose of motorbike maintenance only. Do not use it for other purpose.
- ◇ Do not allow a person to operate the lift, who does not understand its operation.
- ◇ It is forbidden to change the lift without manufacturer's written admission.
- ◇ It is necessary to use the spare parts designated by

- manufacturer.
- ◇ Make sure to keep a distance between the table and ambient objects enough to operate the lift safely.
 - ◇ Keep the hydraulic system under clean and safe condition.
 - ◇ Hydraulic power pack is known as its trait that controlled by low voltage. The error of provided voltage should not excess $\pm 10\%$ to the rated voltage.
 - ◇ Always do maintenance and routine check while the lift is unloaded.
 - ◇ The lift is not waterproof and should be used in a dry environment.

4. Inspection Before Use



WARNING: Do not use the lift if any malfunction or fault is found.

- ◇ Check all the terms of WARNING and CAUTION.
- ◇ Check the scratch, bending or crack on the lift.
- ◇ Check smooth movement of the table.
- ◇ Check if there is any hydraulic oil leakage.
- ◇ Check the vertical creep of the table.
- ◇ Check if all the bolts and nuts are firmly tightened.

5. Operate the Lift




WARNING: Do not overload the lift. Ensure the balance of loading. Do not load partially or concentrically.

57.	Washer	1	86	Discharge lever
58.	Union joint	1	87	Link for discharge
59.	Seal ring 18	1	88	Link
60.	Spring	1	89	Split pin 3.2×18
61.	Prevent burse valve	1	90	Retaining ring 12
62.	Retaining ring 20	18	91	Pin axle
63.	Cylinder	1	92	Hex socket screw M6×35
64.	Pin axle for cylinder	2	93	Hex socket screw M6×30
65.	Hex socket screw M8×25	1	94	Pedal for discharge
66.	Spring washer 8	2	95	Spring pin 6×30
67.	Washer	1	96	Tube for discharge
68.	Piston	1	97	Spring
69.	Seal ring $\phi 45 \times \phi 35 \times 6.4$	1	98	Pin axle
70.	O-ring $\phi 20 \times 2.4$	1	99.	Link for lift up
71.	Piston rod	1	100.	Pin axle
72.	Cylinder cover	1	101	Tube for lift up
73.	Seal cover $\phi 43 \times \phi 35 \times 5$	1	102	Link tube
74.	O-ring $\phi 10.6 \times 2.65$	1	103	Hex screw M8×16
75.	Spring	1	104	Washer 8
76.	Reflux rod	1	105	Pedal holder
77.	O-ring $\phi 4 \times 1.8$	1	106	Pin axle for scissors
78.	Guide casing	1	107	External scissors
79.	Protect casing	1	108	Roller
80.	Rubber bush	4	109	Bushing
81.	Bolt	1	110	Internal scissors
82.	Nut M12	1	111	Washer 10
83.	Nylon bush	3	112	Spring washer 10
84.	Chassis	1	113	Hex screw M10×20
85.	Safety rod	1	114	Nut M6

7. Exploded Drawing and Part List

7.1MC500

MC500

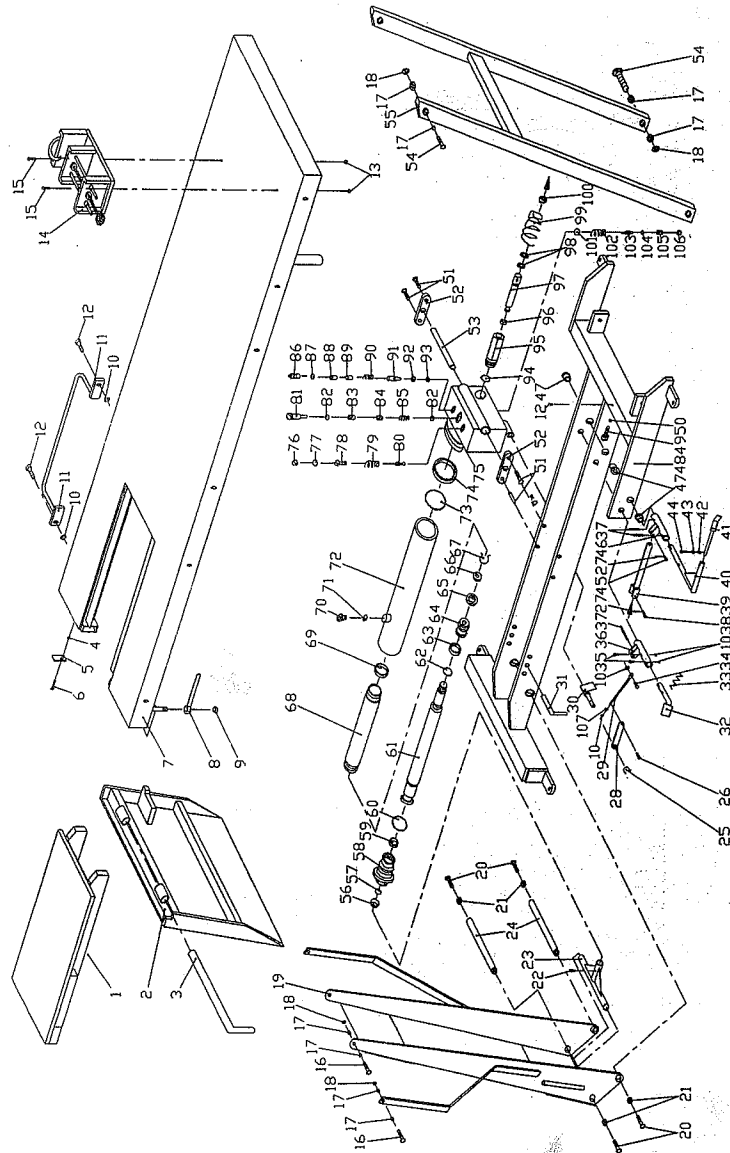


8

LIFT TABLE SPARE PARTS LIST MC500

NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
1.	Cover board	1	28.	Link	1
2.	Guide plate	1	29.	Link for discharge	1
3.	Pin axle	1	30.	Discharge lever	1
4.	Lock nut M8	1	31.	Safety rod	1
5.	Baffle	1	32.	Pedal for discharge	1
6.	Hex screw M8×45	1	33.	Spring	1
7.	Table	1	34.	Hex socket screw M6×30	1
8.	Support rod	1	35.	Hex socket screw M6×35	1
9.	Lock nut M18	1	36.	Tube for discharge	1
10.	Lock nut M6	16	37.	Spring pin 6×30	1
11.	Safety frame	6	38.	Pin axle	1
12.	Hex socket screw M6×18	13	39.	Link for lift up	1
13.	Nut M8	2	40.	Link tube	1
14.	Fixture	1	41.	Pedal holder	1
15.	Hex screw M8×25	2	42.	Washer 8	1
16.	Hex screw M12×50	4	43.	Spring washer 8	1
17.	Washer 12	16	44.	Hex screw M8×16	1
18.	Lock nut M12	8	45.	Pin axle	1
19.	Front support	1	46.	Tube for lift up	1
20.	Hex screw M12×20	4	47.	Nylon bush	1
21.	Washer 12	4	48.	Chassis	1
22.	Hex socket screw M8×6	1	49.	Bolt	1
23.	Link tube	1	50.	Nut M12	1
24.	Pin axle	2	51.	Hex screw M12×20	1
25.	Retaining ring 12	1	52.	Link board	1
26.	Pin axle	1	53.	Pin axle for pump body	1
27.	Split pin 3.2×18	2	54.	Hex screw M12×65	1

55.	Rear support	1	82.	O-ring $\phi 15 \times 2.65$	2
56.	Seal cover $\phi 35 \times \phi 43.5 \times 5$	1	83.	Regulating speed spring seat	1
57.	O-ring $\phi 35.5 \times 3.55$	1	84.	Regulating speed slide-valve	1
58.	Cylinder cover	1	85.	Regulating speed spring	1
59.	Bushing	1	86.	Check valve screw	1
60.	O-ring $\phi 75 \times 3.55$	1	87.	O-ring $\phi 10 \times 1.8$	1
61.	Piston rod	1	88.	Rod	1
62.	O-ring $\phi 20 \times 2.4$	1	89.	Check valve casing	1
63.	Guiding $\delta 2 \times 15$	1	90.	Spring	1
64.	Piston	1	91.	Conical valve	1
65.	Seal ring	1	92.	O-ring $\phi 6.9 \times 1.8$	1
66.	Washer	1	93.	Steel ball $\phi 7$	1
67.	Retaining ring 18	1	94.	O-ring $\phi 28 \times 3.1$	1
68.	Cylinder	1	95.	Pump body for plunger	1
69.	Washer	1	96.	Y-ring $\phi 14 \times \phi 8 \times 6$	1
70.	Plug	1	97.	Pump Plunger	1
71.	O-ring $\phi 10 \times 2.65$	1	98.	O-ring $\phi 18 \times 2.4$	2
72.	Oil basin	1	99.	Spring	1
73.	O-ring $\phi 75 \times 2.65$	1	100.	Washer	1
74.	Washer	1	101.	O-ring $\phi 10.6 \times 2.65$	1
75.	Pump body	1	102.	Spring	1
76.	Plug	1	103.	reflux rod	1
77.	O-ring $\phi 7.1 \times 1.8$	1	104.	O-ring $\phi 4 \times 1.8$	1
78.	Regulating pressure nut	1	105.	Guide casing	1
79.	Regulating pressure spring	1	106.	Protect casing	1
80.	Spring seat assembly	1	107.	Nut M6	1
81.	Regulating speed valve casing	1			

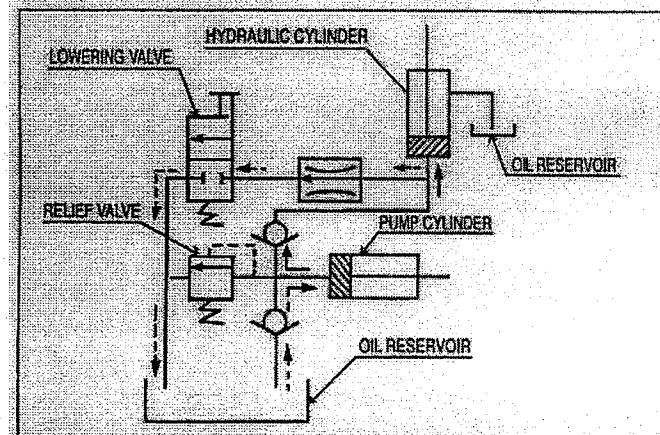

LIFTING

LOWERING

SUCTION

Content	After every 500 hours' working or every 3 months	After every 20/00 hours' working or every year
Check oil level of oil tank	/	
Fasten all the connecting parts again	☆	
Check wear and tear of pressure oil pipes	☆	
Check hydraulic cylinder	☆	
Fix main parts tightly again	☆	
Check whole working state of the lift	☆	
Lubricate all the joints and pivot points	☆	
Check wear and tear of all axial bushes		☆
Replace hydraulic oil		☆
Check oil leaking		☆
Remark: ☆ stands for proceeding the item.		

LIFT TABLE SPARE PARTS LIST TC500

NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
1.	Cover board	1	29.	Washer	1
2.	Guide plate	1	30.	Plug	1
3.	Pin axle	1	31.	O-ring $\phi 7.1 \times 1.8$	1
4.	Lock nut M8	2	32.	Regulating pressure nut	1
5.	Baffle	1	33.	Regulating pressure spring	1
6.	Hex screw M8 \times 45	1	34.	Spring set assembly	1
7.	Table	1	35.	Regulating speed valve casing	1
8.	Support rod	1	36.	O-ring $\phi 15 \times 2.65$	2
9.	Lock nut M18	1	37.	Regulating speed spring set	1
10.	Lock nut M6	16	38.	Regulating speed slide-valve	1
11.	Rod	1	39.	Regulating speed spring	1
12.	Roller	1	40.	Check valve screw	1
13.	Hex socket screw M6 \times 25	1	41.	O-ring $\phi 10 \times 1.8$	1
14.	Hex screw M8 \times 50	1	42.	Rod	1
15.	Hex socket screw M6 \times 20	13	43.	Check valve casing	1
16.	Safety frame	6	44.	Check valve spring	1
17.	Nut M8	2	45.	Conical valve	1
18.	Fixture	1	46.	O-ring $\phi 6.9 \times 1.8$	1
19.	Hex screw M8 \times 25	2	47.	Steel ball $\phi 7$	1
20.	Joint	2	48.	Hex screw M12 \times 20	4
21.	Seal ring 14	5	49.	Washer 12	4
22.	High pressure hose	1	50.	Pump body	1
23.	Nut	1	51.	O-ring $\phi 28 \times 3.1$	1
24.	Bolt	1	52.	Pump body for plunger	1
25.	Oil basin	1	53.	Y-ring $\phi 14 \times \phi 8 \times 6$	1
26.	Plug	1	54.	Pump plunger	1
27.	O-ring $\phi 10 \times 2.65$	1	55.	O-ring $\phi 18 \times 2.4$	2
28.	O-ring $\phi 75 \times 2.65$	1	56.	Spring	1

5.1 Loading a Motorbike

- ◇ Passing through the guiding plate, the motorbike shall be placed stable and reliable.
- ◇ Lock the front wheel of the motorbike with special accessory.

5.2 Lifting the Lift

- ◇ Step the "up" pedal by foot to lift the platform to a proper level.
- ◇ Plug the safety lever into safety hole and assure the security.
- ◇ During the maintenance, to prevent the motorbike from tilting over, no severe motion should occur.

5.3 Lowering the Lift

- ◇ Do not stretch your hands or feet under the scissor.
- ◇ Pull out the safety lever and fix it in original position.

NOTE: If the safety lever can't be pulled out, step the "UP" pedal a little and it will be pulled out.

- ◇ Step the "DOWN" pedal by foot, the platform will lower down.


6. Maintenance

- ◇ Before maintenance, lift the platform to proper level and insert the safety level.
- ◇ Do routine check of fasteners, packing and oil leaking.
- ◇ Do routine check of the function of the lift.
- ◇ Before maintaining the lift, make sure to turn off the AC Power supply.
- ◇ It is necessary to check the function of the lift again after the maintenance.
- ◇ ONLY a qualified personnel can do service work.
- ◇ Do routine check of the micro-switches on the safety guard.
- ◇ Do routine check of hydraulic system by listen the noise of hydraulic system and contact the surface of electromotor.


NOTE: Be sure to cut off the power before contact the electromotor.

- ◇ After a long time service, pay attention to replace the hydraulic oil.
- ◇ Appropriate lubrication is necessary to make the lift work easily and have a prolonged service life.

MC500

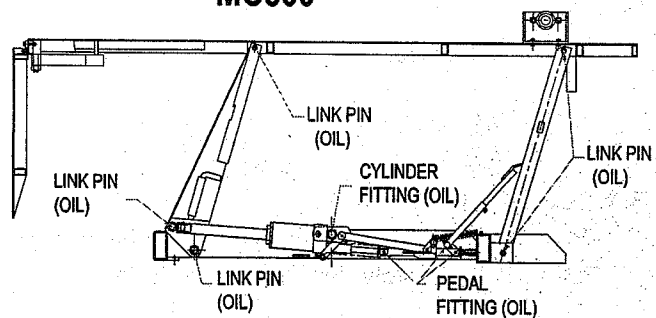

TC500

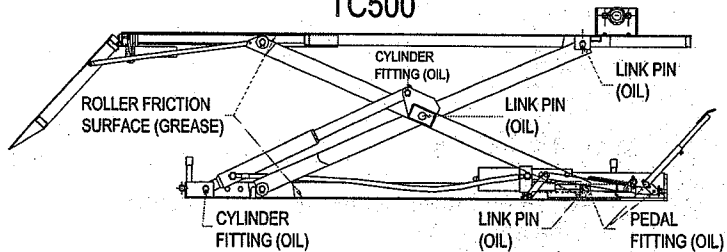

TC150

